








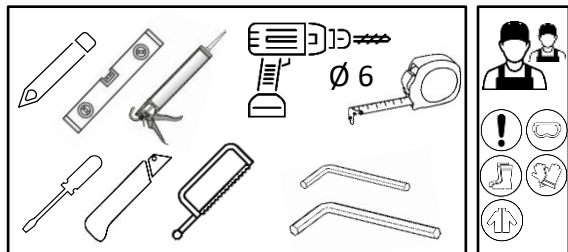







# ANGELINA

## Dušas kabīnes montāžas instrukcija




Инструкция по монтажу душевой кабины



Shower enclosure installation assembly



1.		PAL-01	2
2.		PAL-01B	2
3.		SU45CH + SK2SET1	2
4.		MF-42/8-ER	1
5.		R1653308	2
6.		400211PS-013	2
7.		OSH-OFS2CP	4
8.		DR-CH32	2
9.		SC-ALU8X9NEW	2
10.		SC-SL-UZL180L	1
11.		SC-SL-UZL180R	1
12.		SC-SL-UZL90G/G	1
13.		3,5x35 SK1SET; Ø 6	2
14.		8 mm Safety Glass	1
15.		8 mm Safety Glass	1
16.		8 mm Safety Glass	1
17.		8 mm Safety Glass	1

ANGELINA	A + B (mm)	A1 (mm)	B (mm)	H (mm)
70X70ANG	693-695	640	200	1988
80X80ANG	793-795	780	200	1988
90X90ANG	893-895	780	300	1988
100X100ANG	993-995	920	300	1988
110X110ANG	1093-1095	920	400	1988
120X1200ANG	1193-1195	920	500	1988

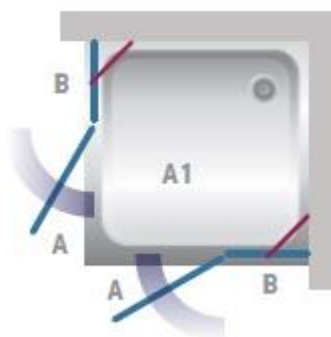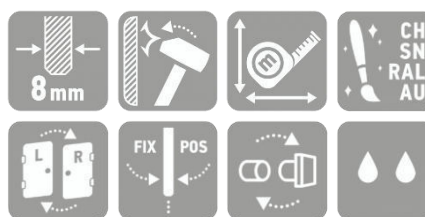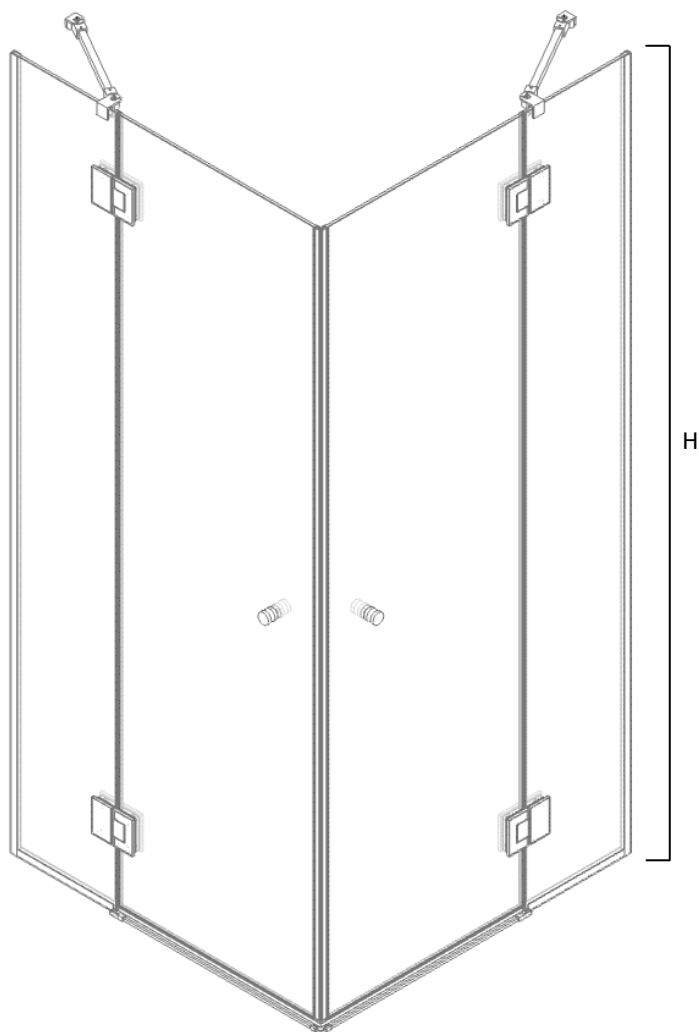

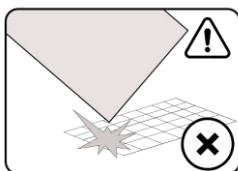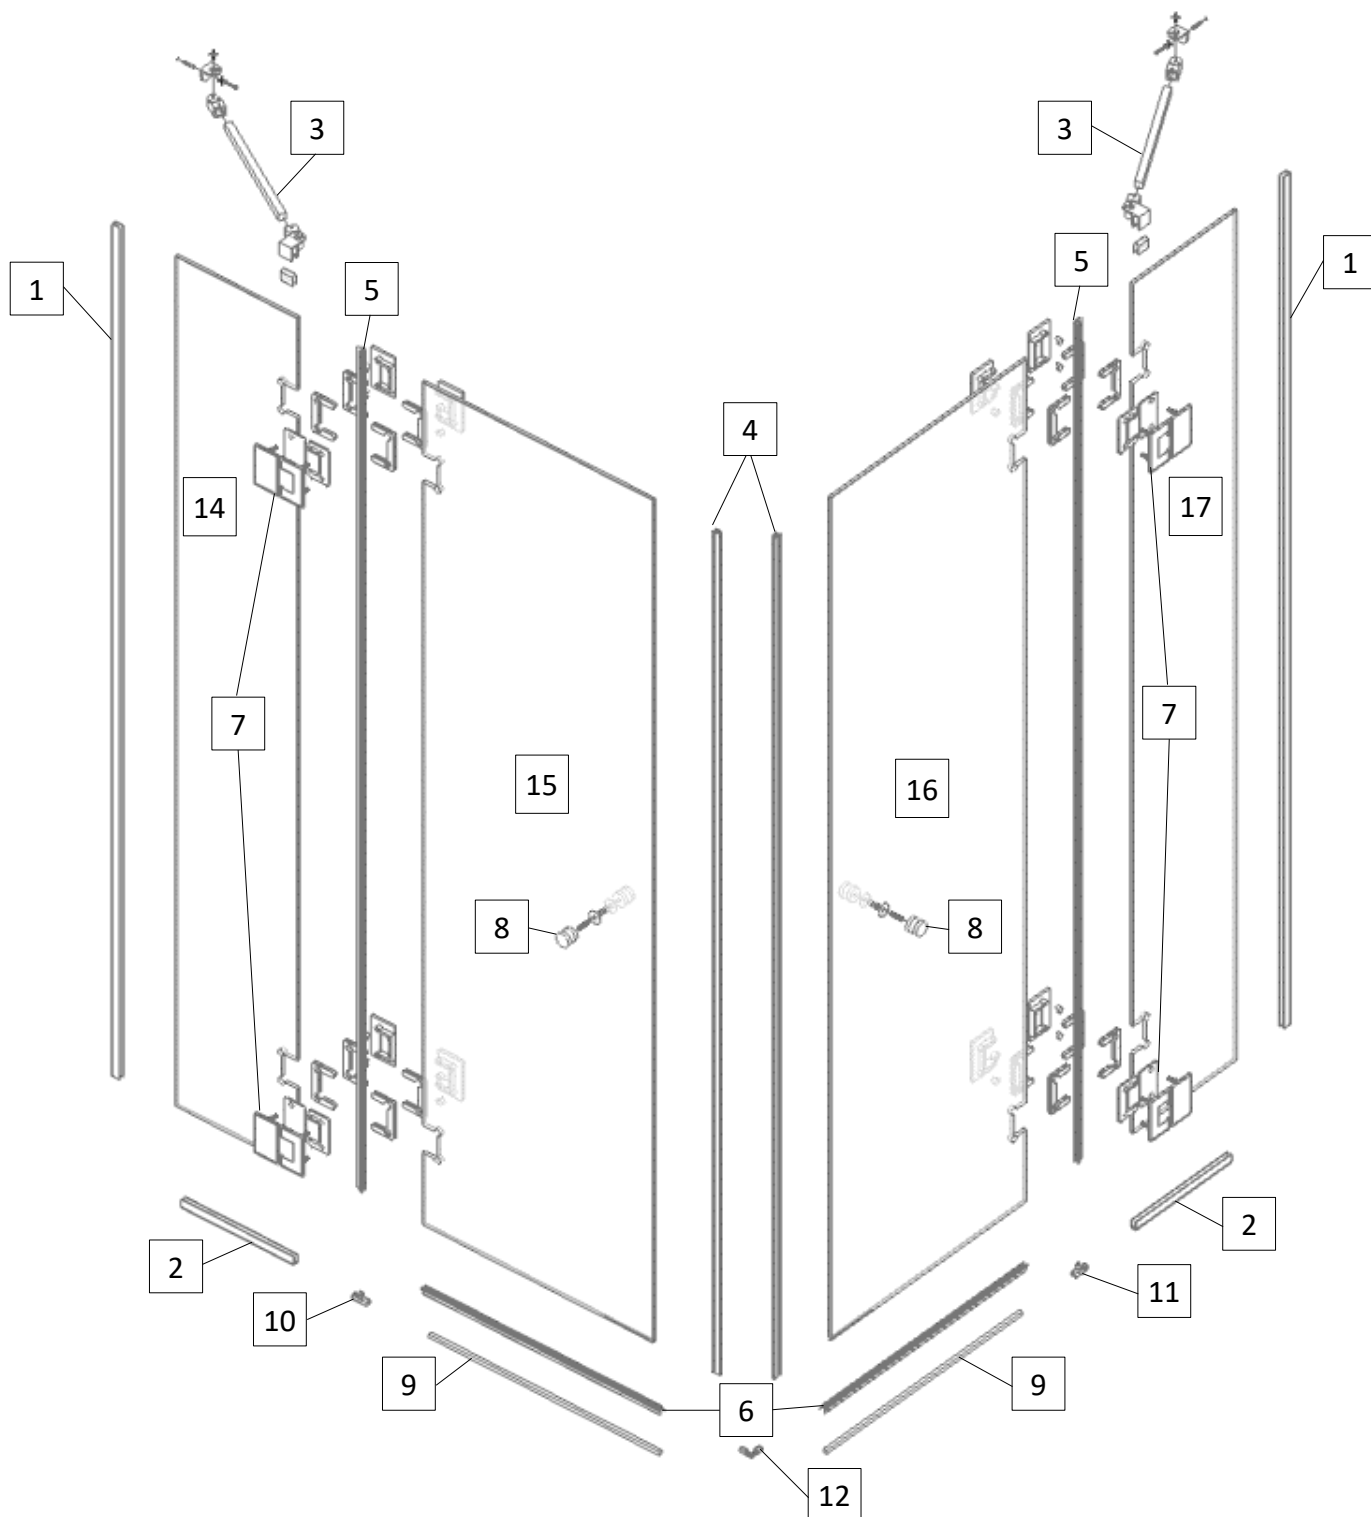





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

# 1.A

ANGELINA	P, mm	A+B1, mm	A+B1, mm
70X70ANG	700 x 700	688	688
80X80ANG	800 x 800	788	788
90X90ANG	900 x 900	888	888
100X100ANG	1000 x 1000	988	988
110X110ANG	1100 x 1100	1088	1088
120X120ANG	1200 x 1200	1188	1188

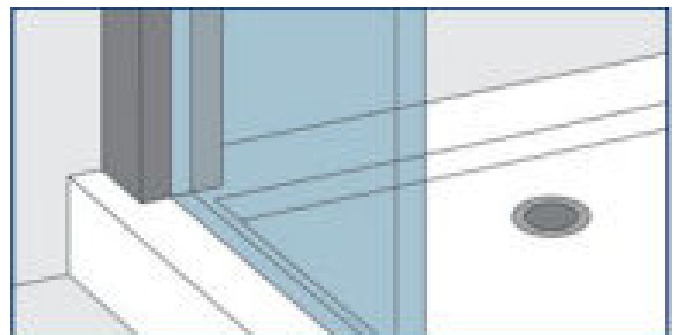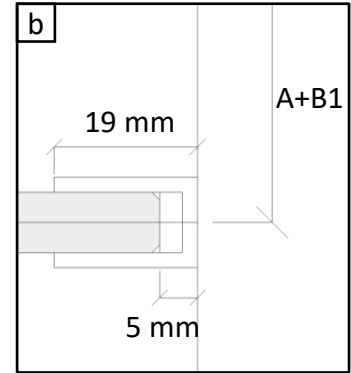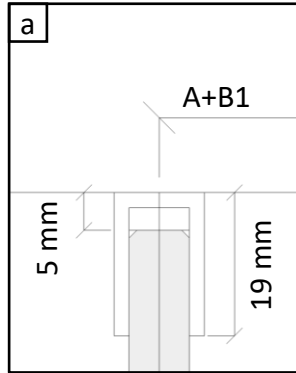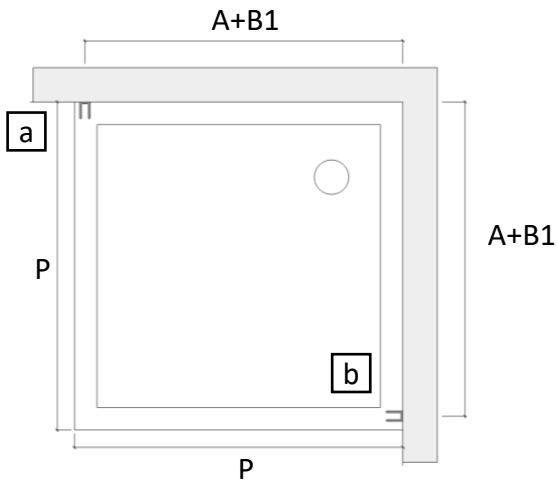

# 1.B

ANGELINA	D	S
70X70ANG	700	700
80X80ANG	800	800
90X90ANG	900	900
100X100ANG	1000	1000
110X110ANG	1100	1100
120X120ANG	1200	1200

