


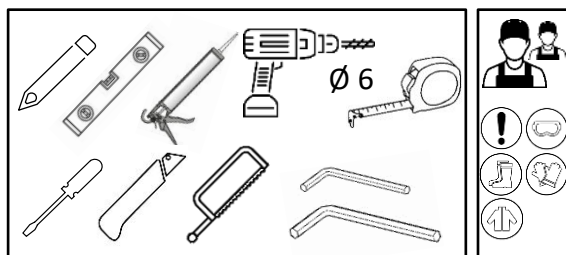














# MILANA



## Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой двери



Shower door installation instructions



1.		SR4	2
2.		SR14	2
3.		SD3R	2
4.		SD3L	2
5.		SR8	4
6.		SD3L	4
7.		SR2KIT	2
8.		SR10	1
9.		SR12	2
10.		SR6	2
11.		SD7	4
12.		SR11	2
13.		3,5X35 SK1SET	2
14.		6 mm Safety Glass + PROFILE	2
15.		6 mm Safety Glass	2

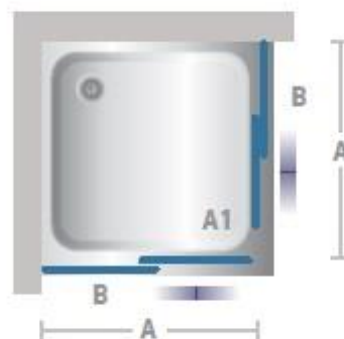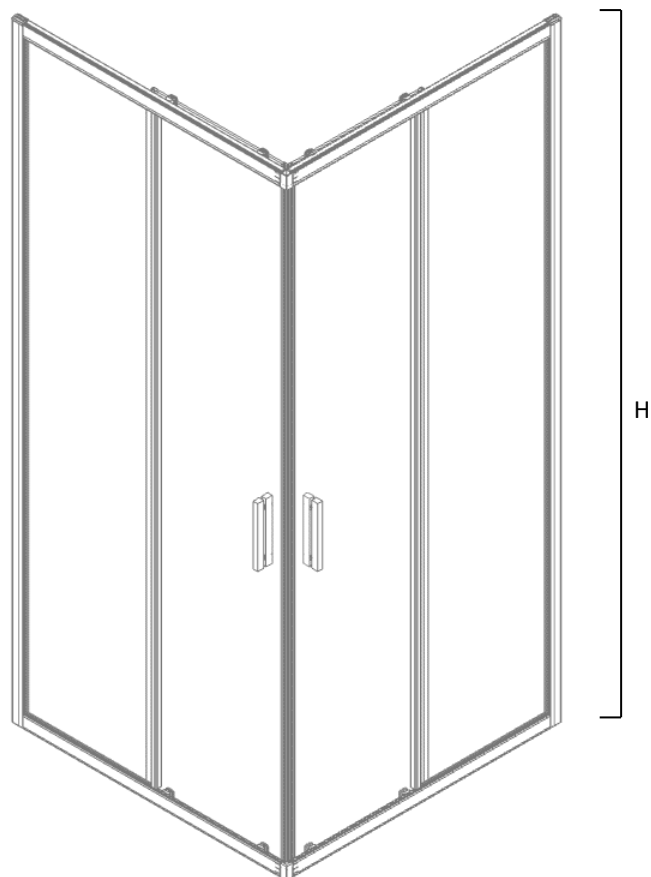

MILANA	A (mm)	A1 (mm)	B (mm)	H (mm)
70X70MIL	690-710	380	370	2000
80X80MIL	790-810	450	420	2000
90X90MIL	890-910	520	470	2000
100X100MIL	980-1000 !!!	520	520	2000

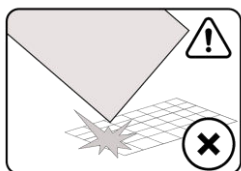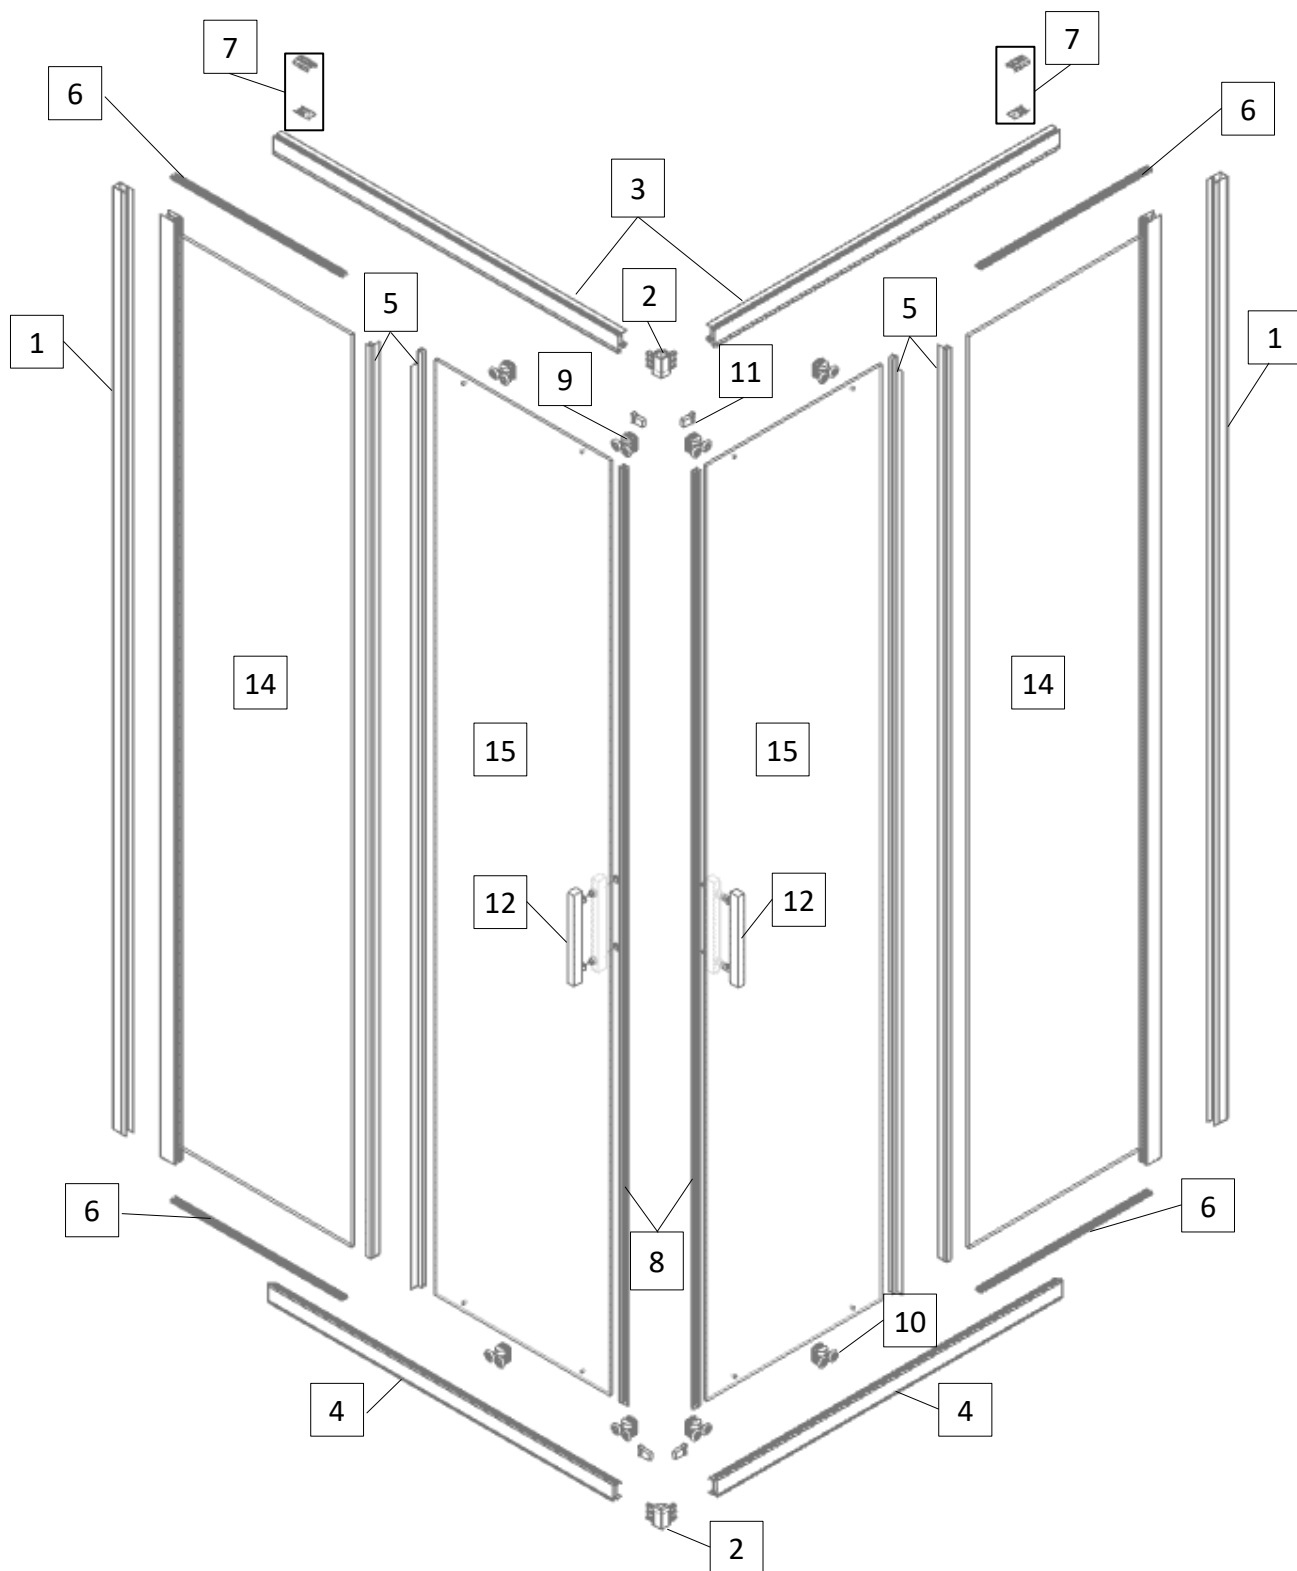





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

# 1.A

MILANA	P, mm	A, mm	C1, mm
70X70MIL	700 x 700	680	680
80X80MIL	800 x 800	780	780
90X90MIL	900 x 900	880	880
100X100MIL	1000 x 1000	980	980

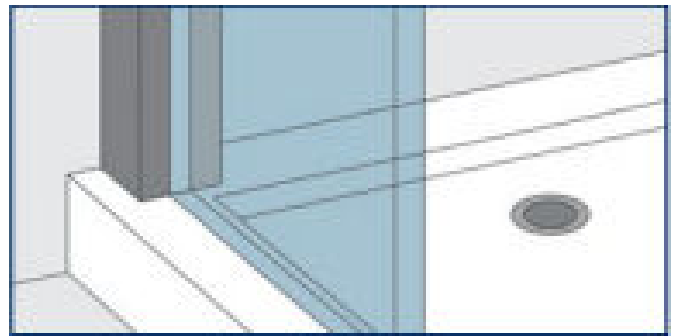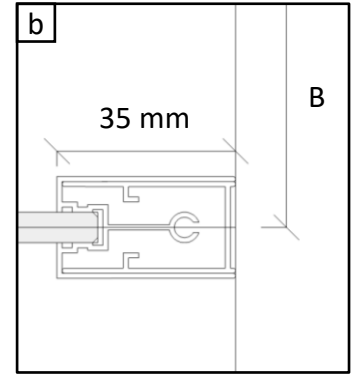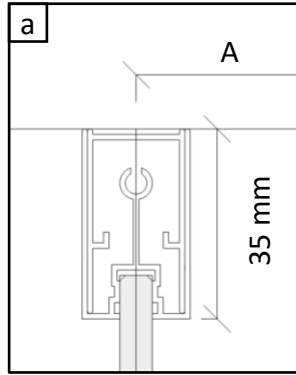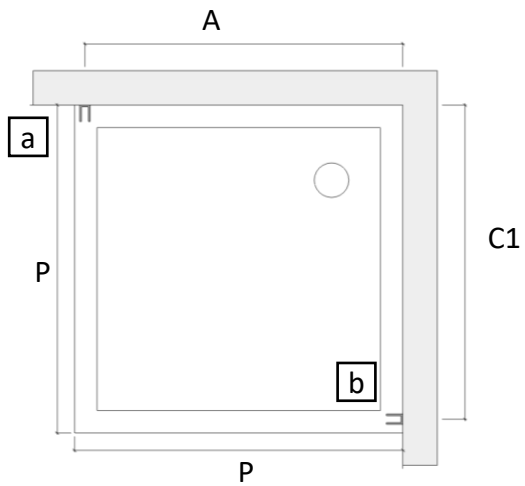

# 1.B

MILANA	D	S
70X70MIL	680-700	680-700
80X80MIL	780-800	780-800
90X90MIL	880-900	880-900
100X100MIL	970-990 !!!	970-990 !!!

