




Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины


Shower enclosure installation assembly


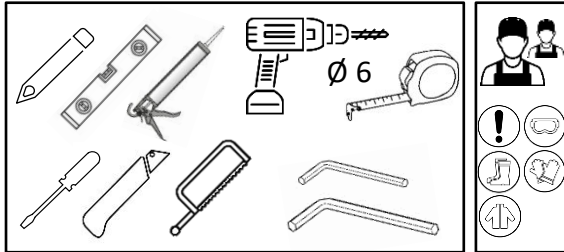


1.		VIRA20CH	2
2.		MF-36/6-ER	1
3.		R1653308	2
4.		M981R - 180CH / M981L - 180CH	4
5.		SC-SL-UZL180L	1
6.		SC-SL-UZL180R	1
7.		NLO-ZD-2856	2
8.		SC-SL-UZL90G/G	1
9.		SC-ALU8X9NEW	2
10.		R1653308	4
11.		3,5x35 SK1SET; Ø 6	2
12.		3,5x13 SK2SET	4
13.		6 mm Safety Glass	1
14.		6 mm Safety Glass	1
15.		6 mm Safety Glass +VIRA20CH	1
16.		6 mm Safety Glass +VIRA20CH	1

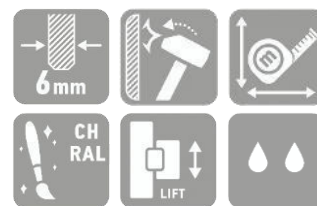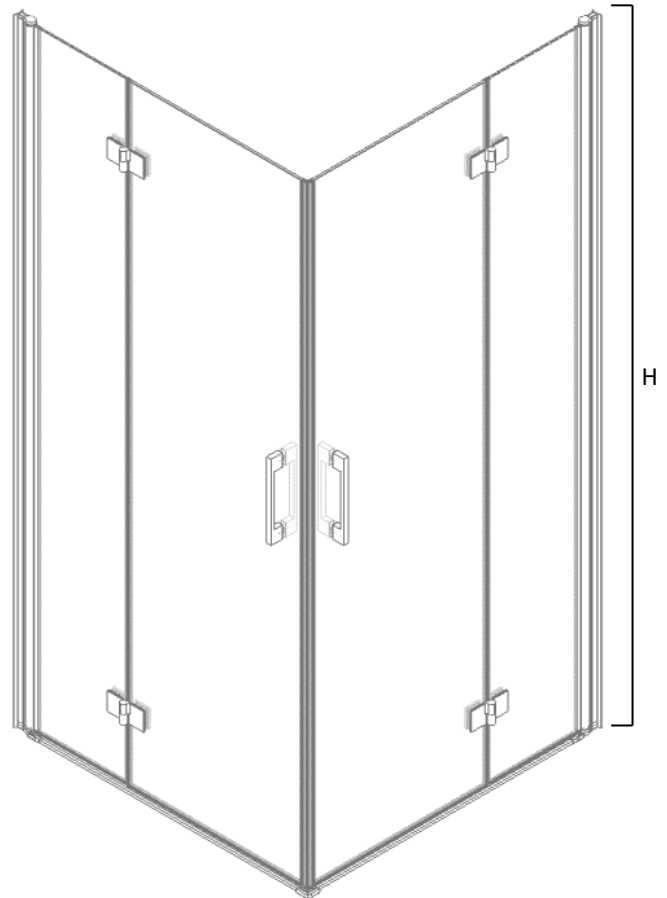

ALEXA	A + B (mm)	A1 (mm)	H (mm)
60X60ALE	590-600	880	1993
70X70ALE	690-600	1020	1993
80X80ALE	790-800	1160	1993
90X90ALE	890-900	1300	1993

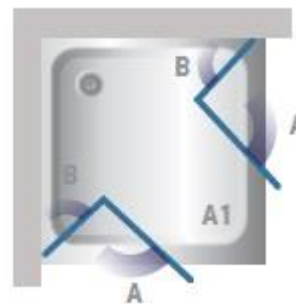

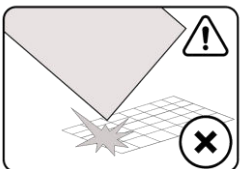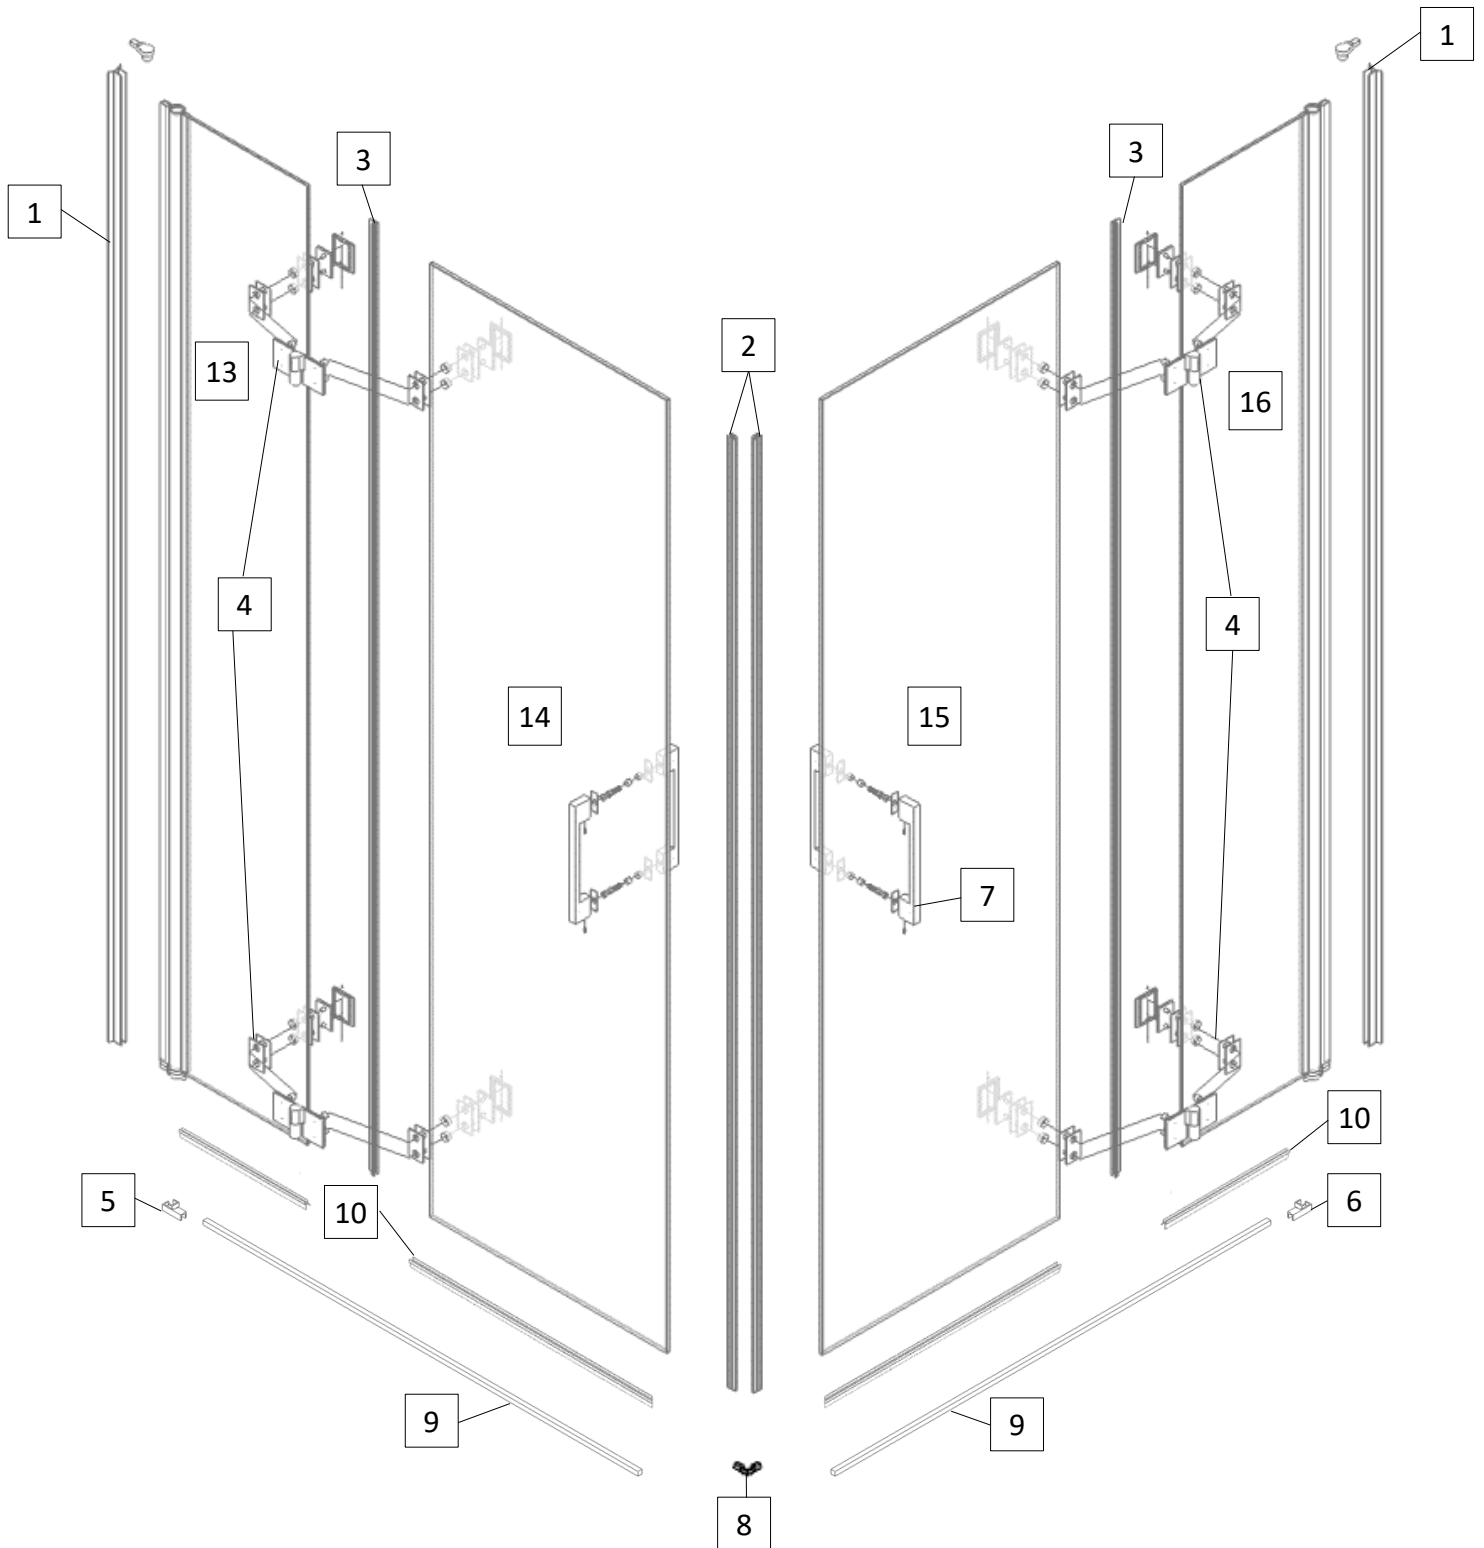





Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.





1.A











ALEXA	P, mm	C, mm
60X60ALE	600 X 600	583
70X70ALE	700 X 700	683
80X80ALE	800 X 800	783
90X90ALE	900 X 900	883







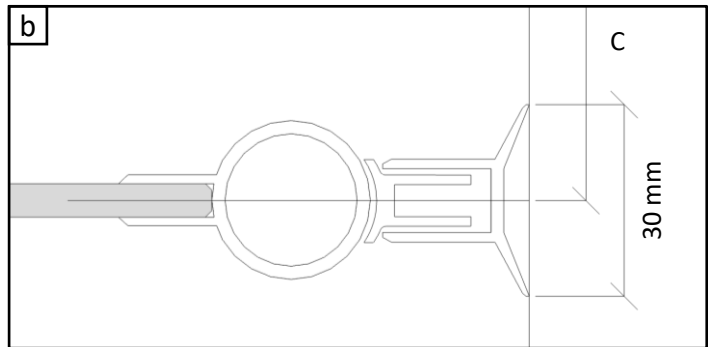
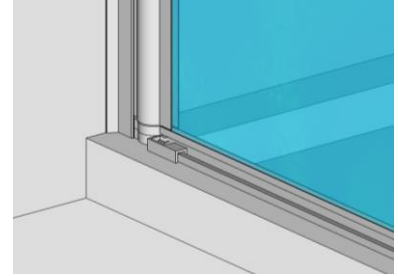
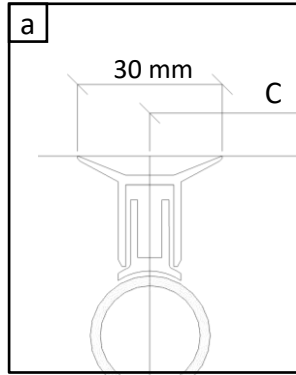
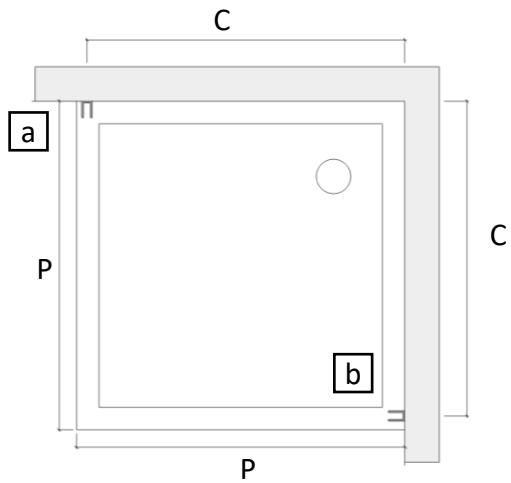


1.B

ALEXA	D, mm	S, mm
60X60ALE	600	600
70X70ALE	700	700
80X80ALE	800	800
90X90ALE	900	900

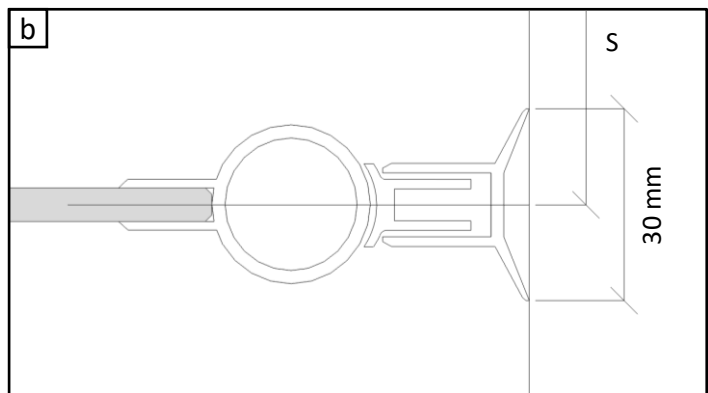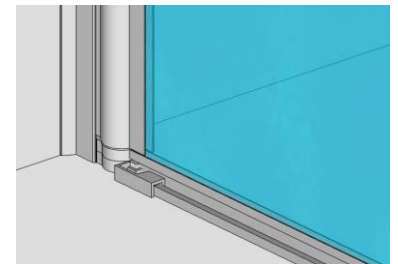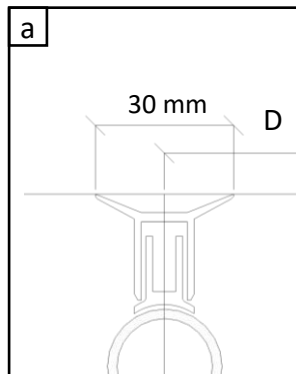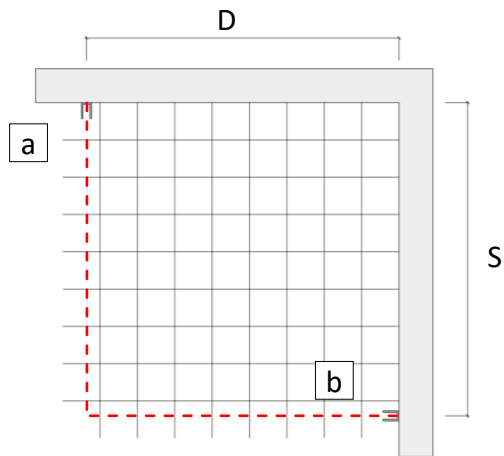


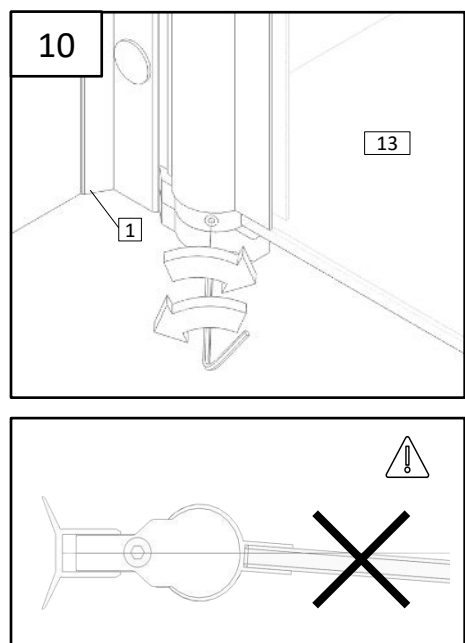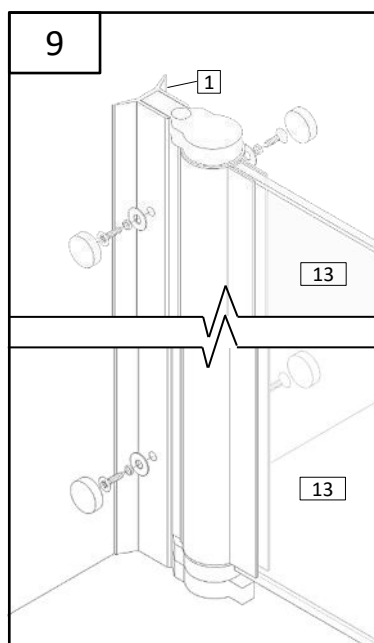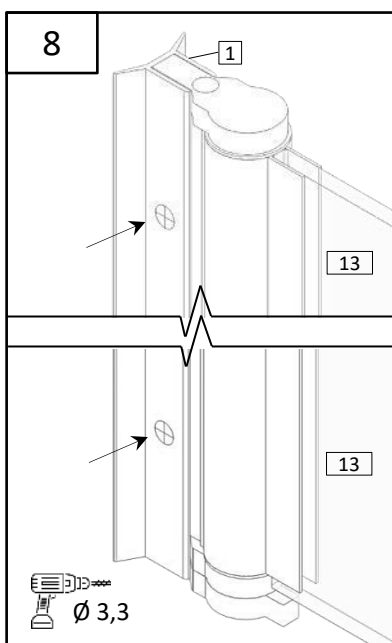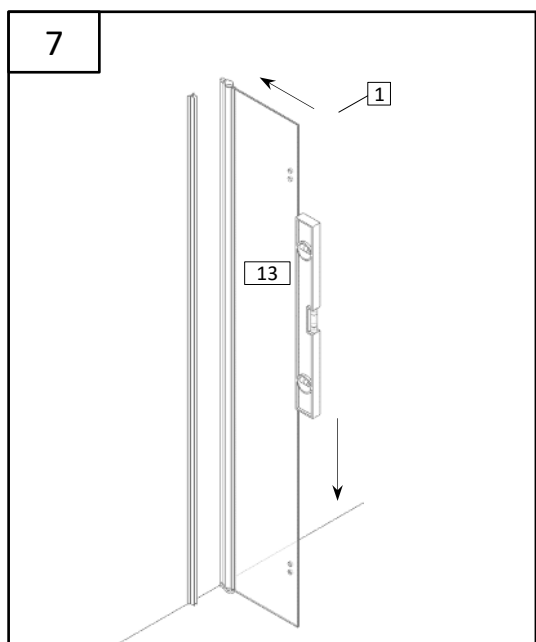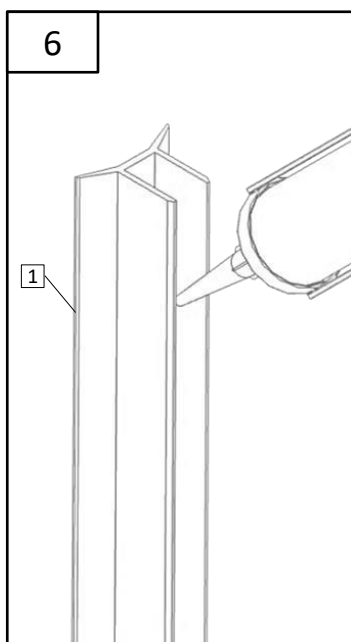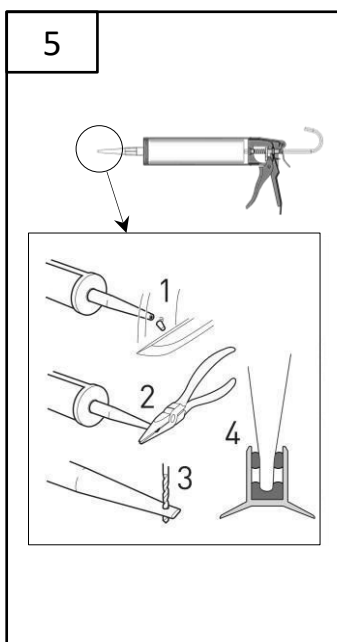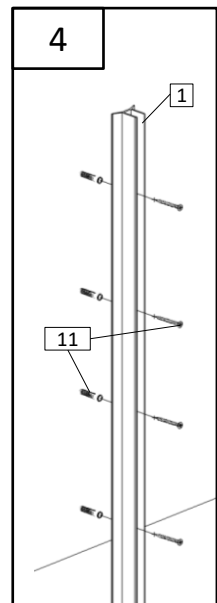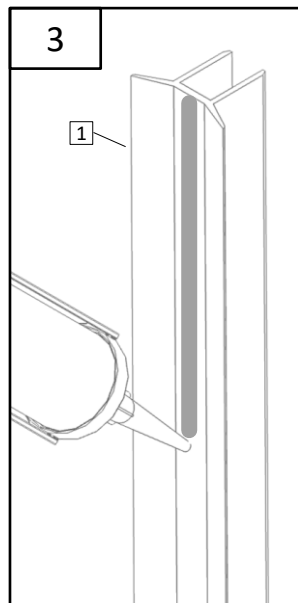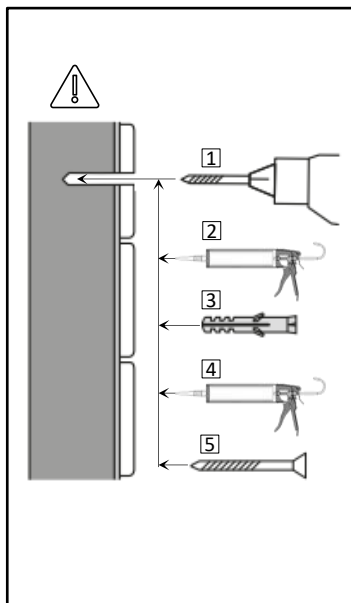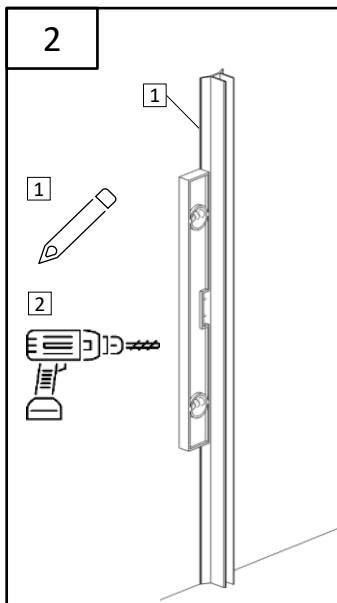

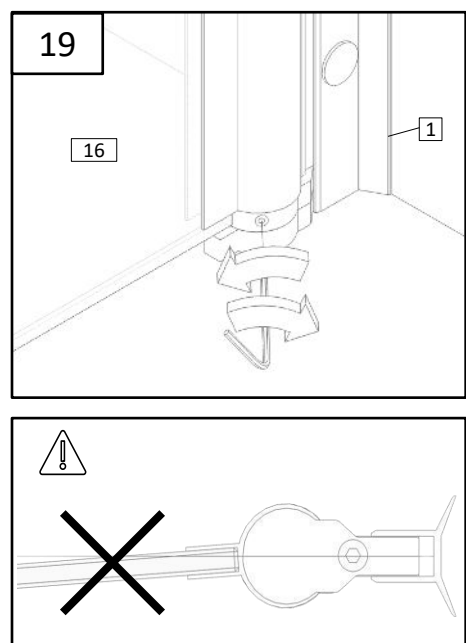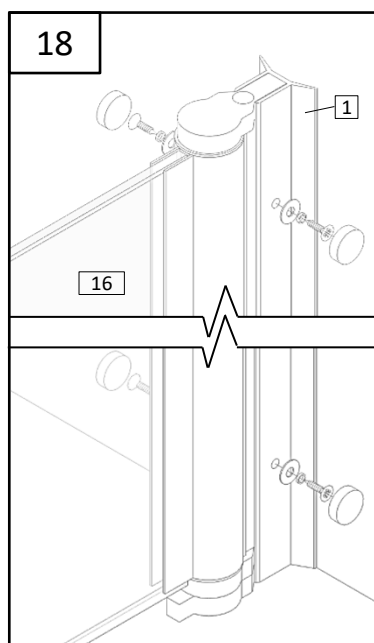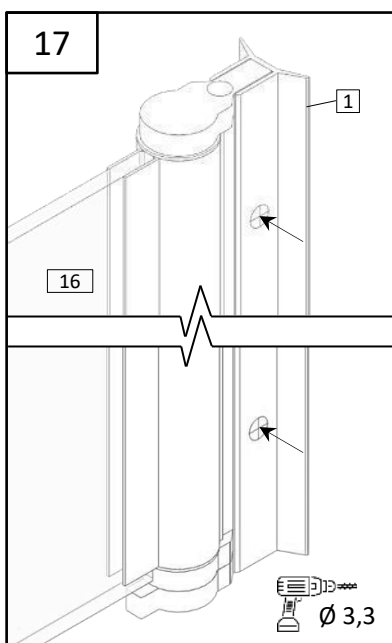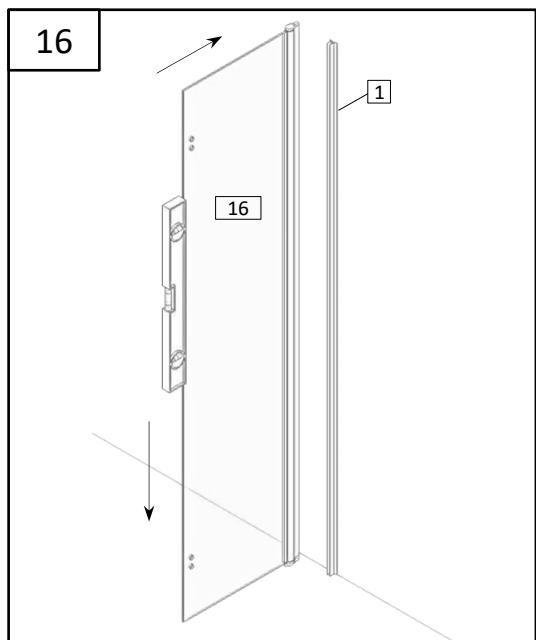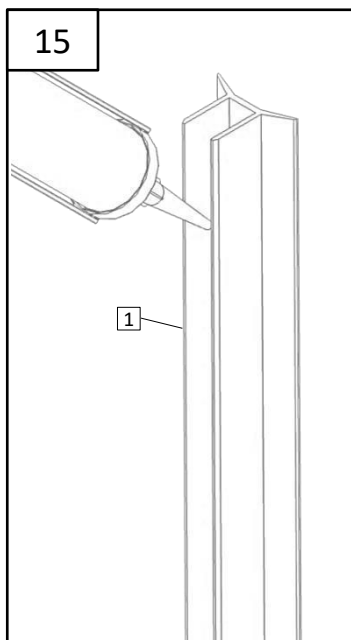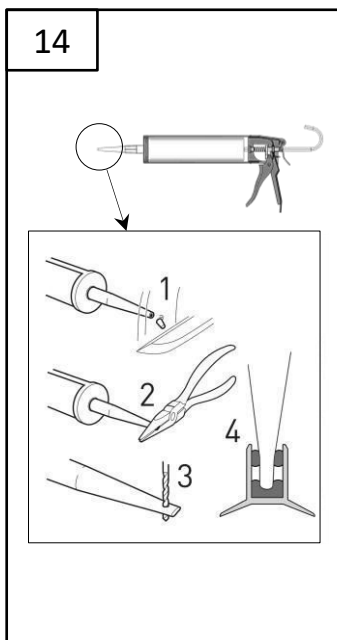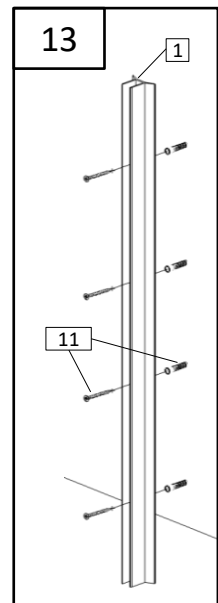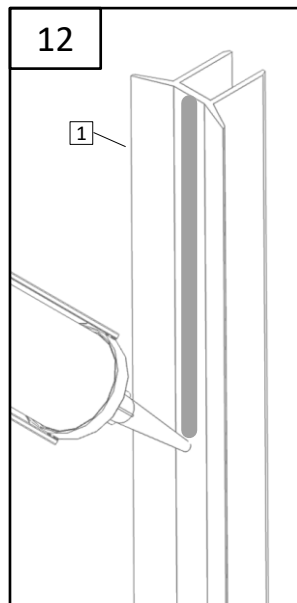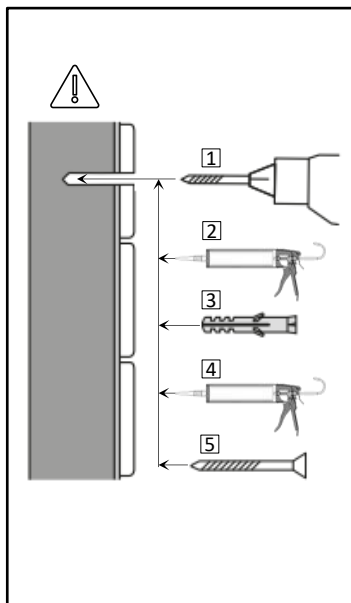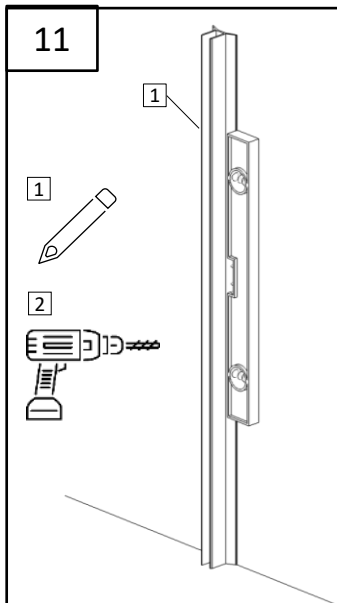



RIGHT

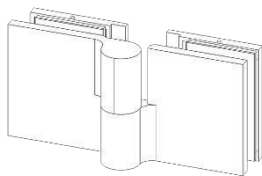

LEFT

