


ANITA

Vannas sienas montāžas instrukcija


Инструкция по монтажу ванной стены

Bath screen installation instructions

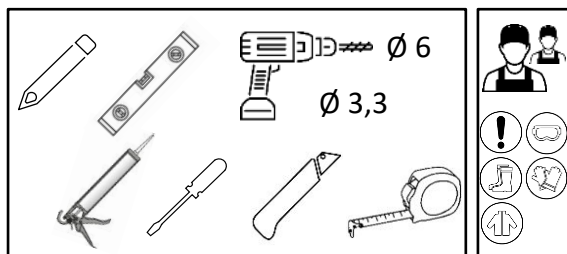


1		R22-01	1
2		R22-02	1
3		R22-03	1
4		R22-04	1
5		R22-05	1
6		R22-06	1
7		R22-07	1
8		R22-08	1
9		R22-09	1
10		R22-10	2
11		R22-11	3
12		R22-12	1
13		LUX – CH - 2856G	1
14		3,5X35 3K1SET	1
15		6 mm Safety Glass	2
16			



ANITA	A+B (mm)	H (mm)
80ANI	470-800	1500
90ANI	520-900	1500
100ANI	570-1000	1500
110ANI	620-1100	1500
120ANI	670-1200	1500
130ANI	720-1300	1500
140ANI	770-1400	1500
150ANI	820-1500	1500

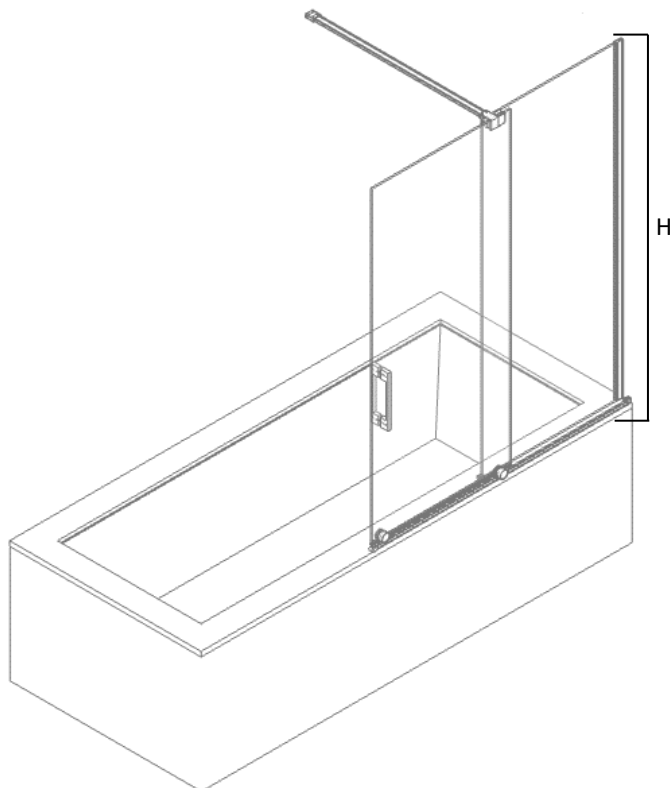

LEFT

RIGHT

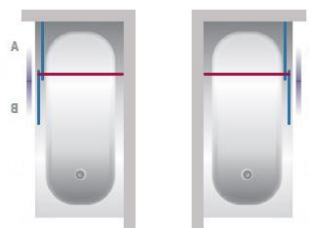

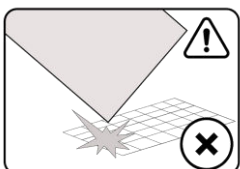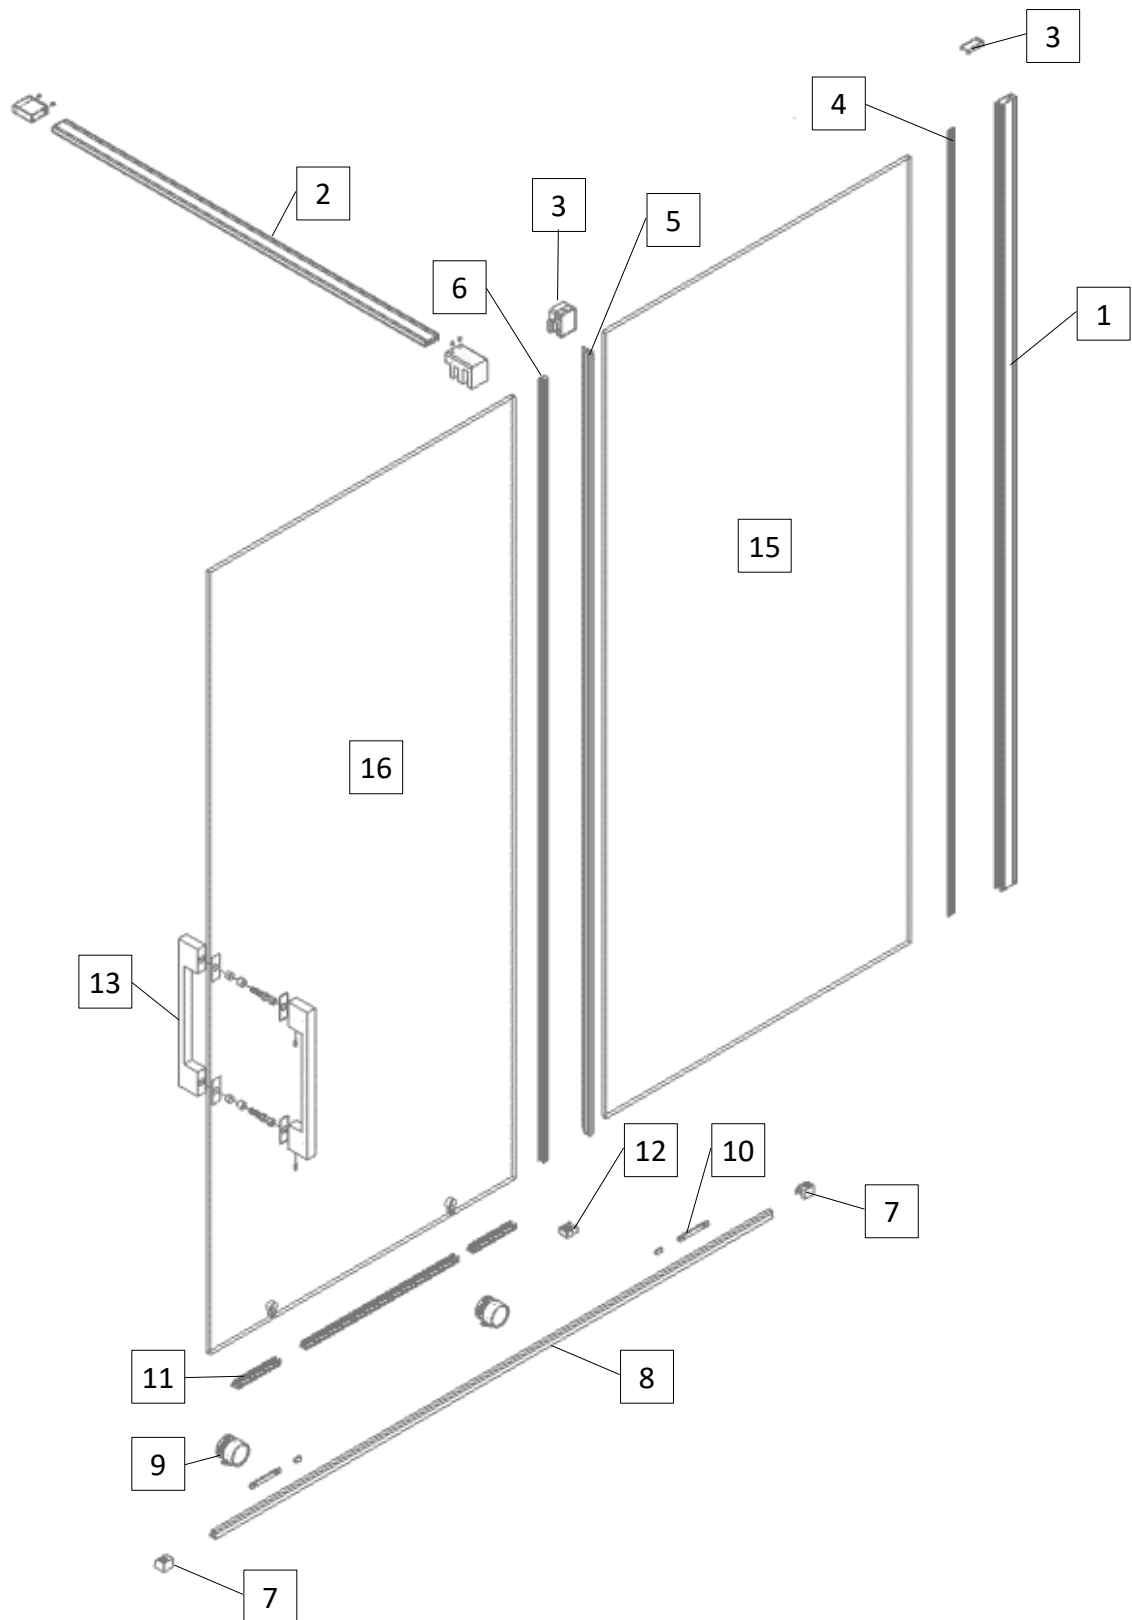

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

