


AMBRA


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions

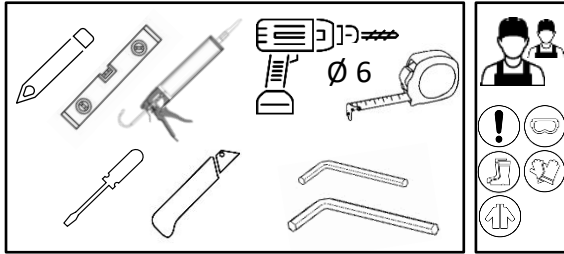

1.		284.01.081+SK 4SET	1
2.		3,5X35 SK1SET	2
3.		8 mm Safety Glass	1

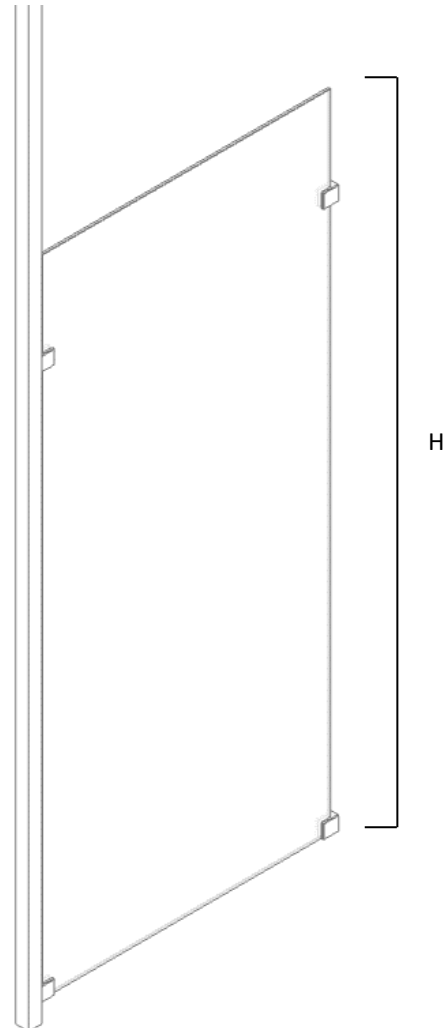



AMBRA	A (mm)	H (mm)
60AMB	635-645	2050
70AMB	735-745	2050
80AMB	835-845	2050
90AMB	935-945	2050
100AMB	1035-1045	2050
110AMB	1135-1145	2050
120AMB	1235-1245	2050



LEFT

RIGHT










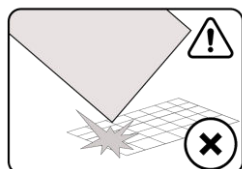
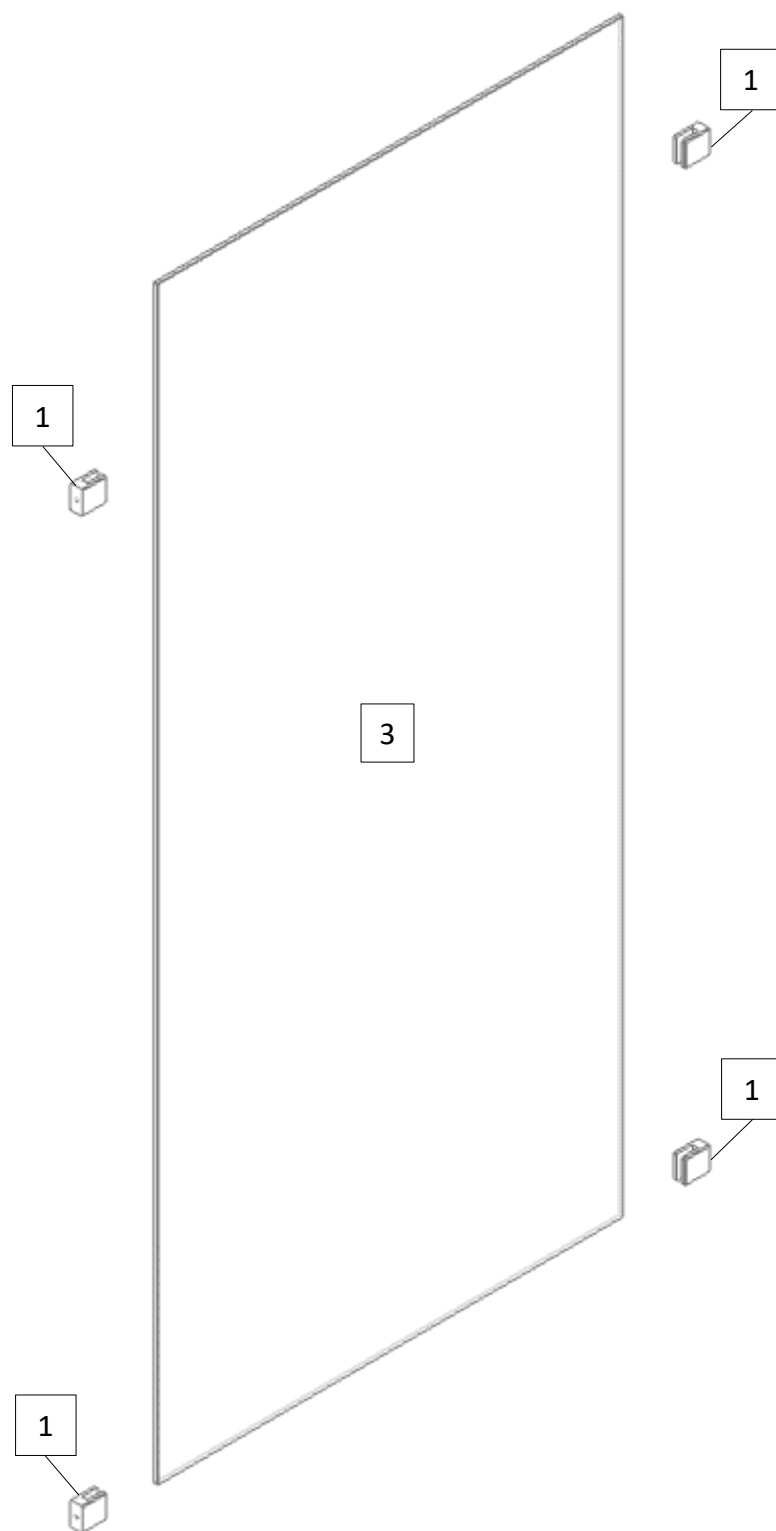


Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

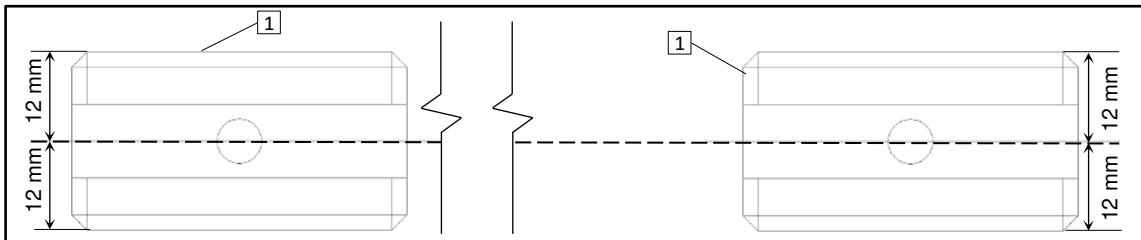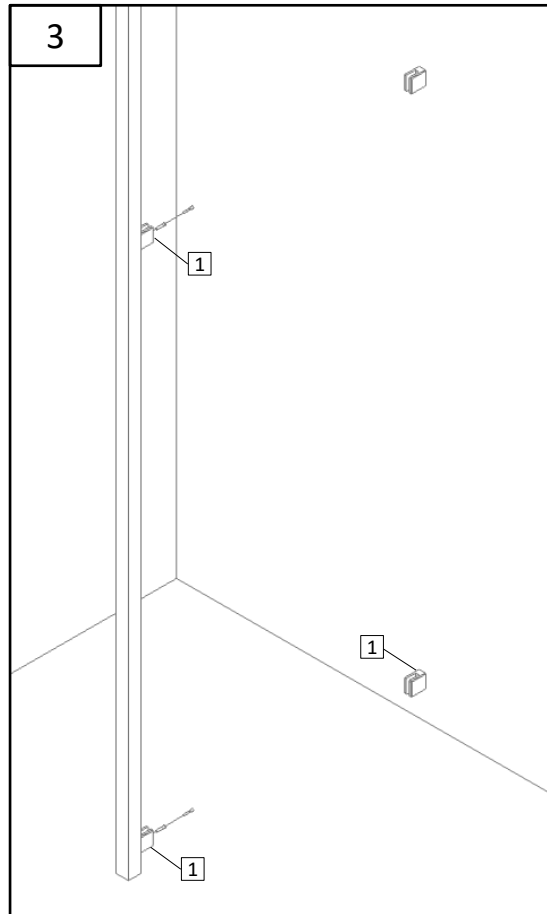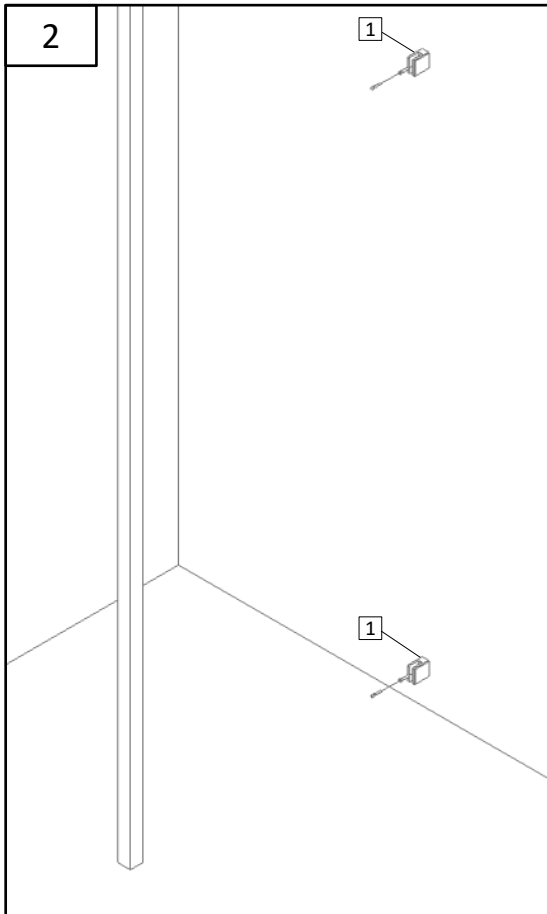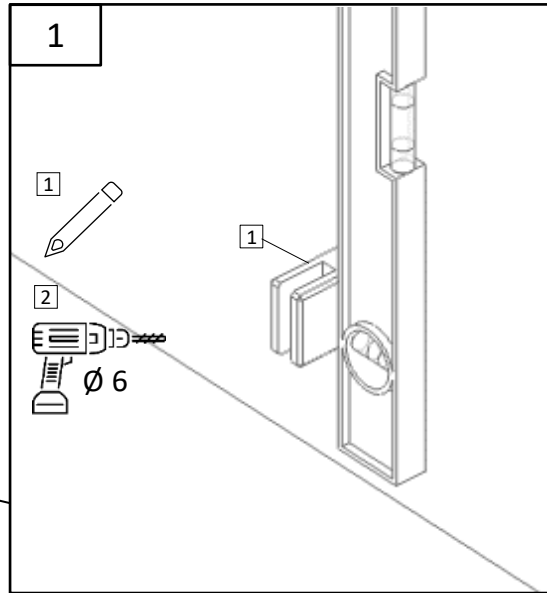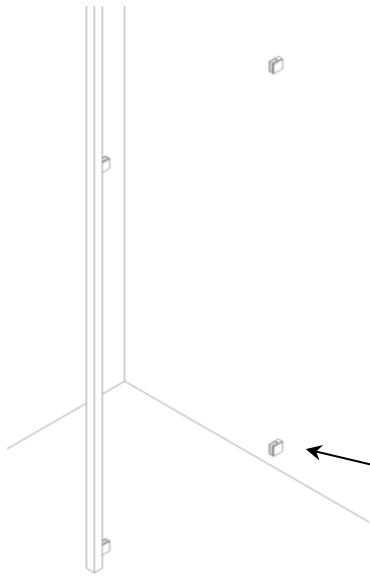

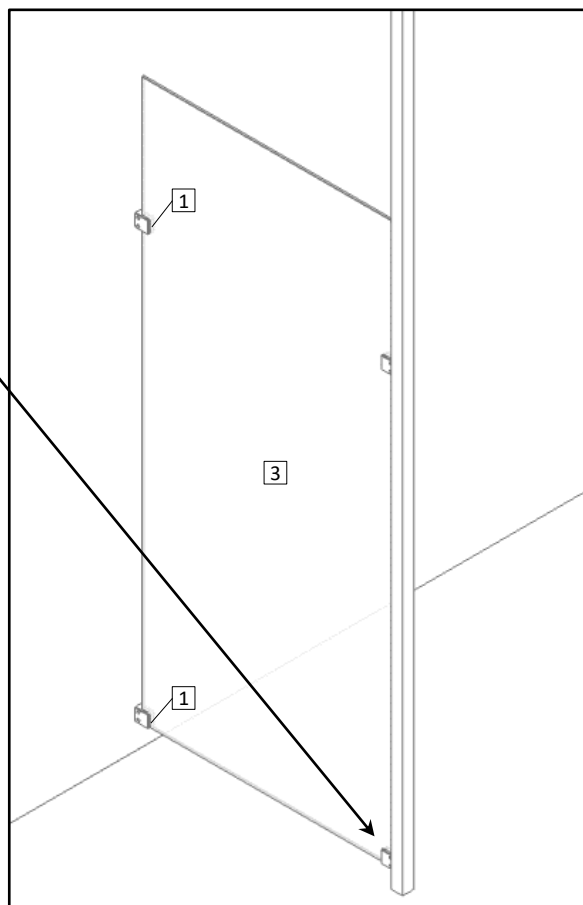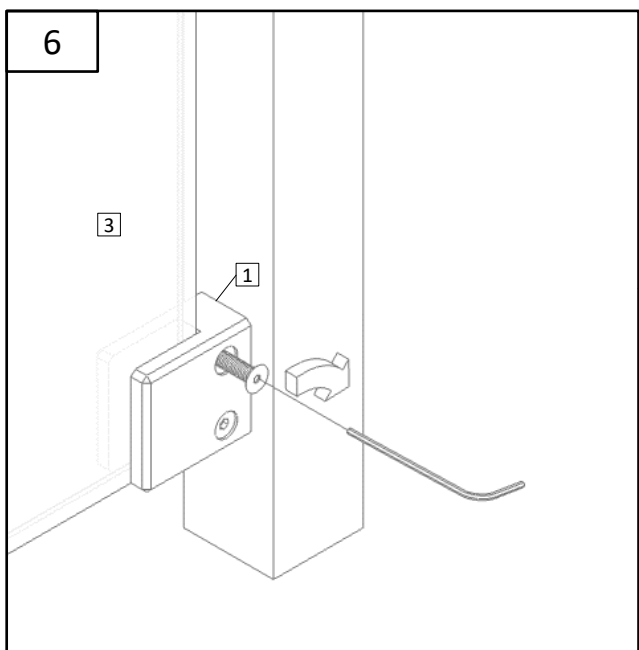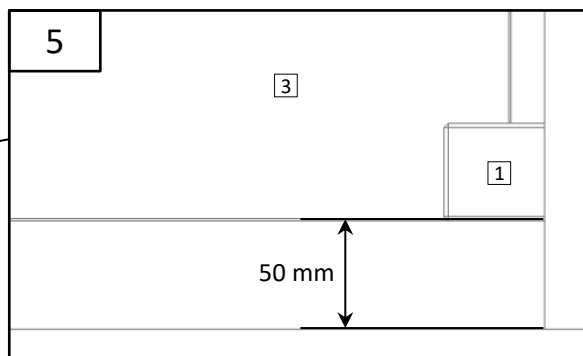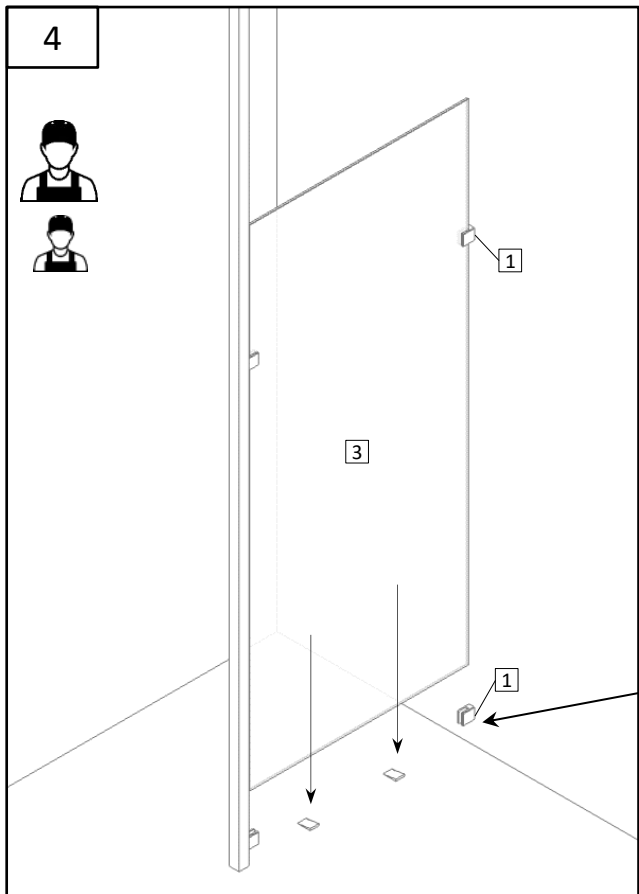

7



24 h

