


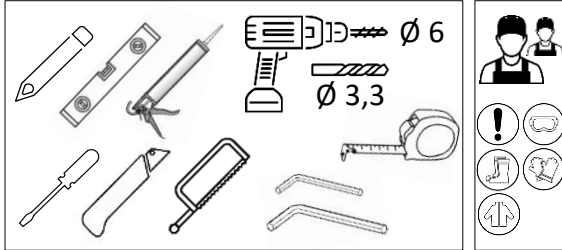

AMELIA



Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины


Shower enclosure installation assembly




1.		VIRA20CH	2
2.		MF-36/6-ER	1
3.		R1653308	2
4.		3,5x13 SK2SET	2
5.		SC-SL-UZL90G/G	1
6.		DR-CH32	2
7.		SC-ALU8X9NEW	2
8.		SC-SL-UZL180R/L	1
9.		3,5x35 SK1SET; Ø 6	2
10.		6 mm Safety Glass +VIRA20CH	1
11.		6 mm Safety Glass +VIRA20CH	1

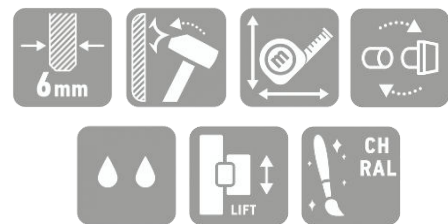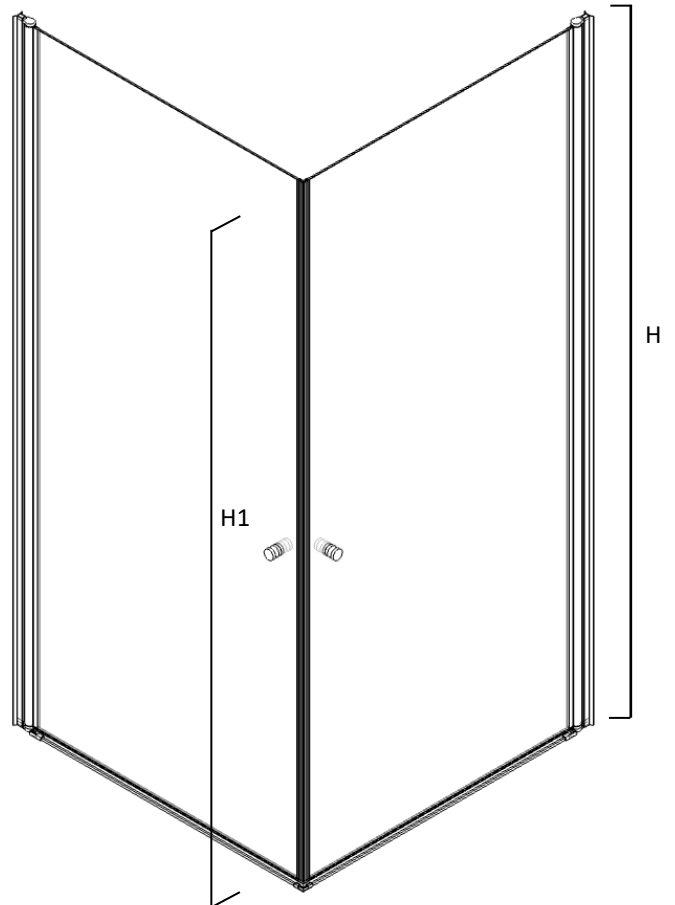

AMELIA	A (mm)	A1 (mm)	H (mm)	H1 (mm)
70X70AME	695-700	880	2008	1993
80X80AME	795-800	1020	2008	1993
90X90AME	895-900	1160	2008	1993
100X100AME	995-1000	1300	2008	1993

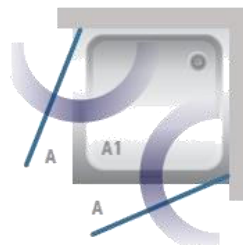

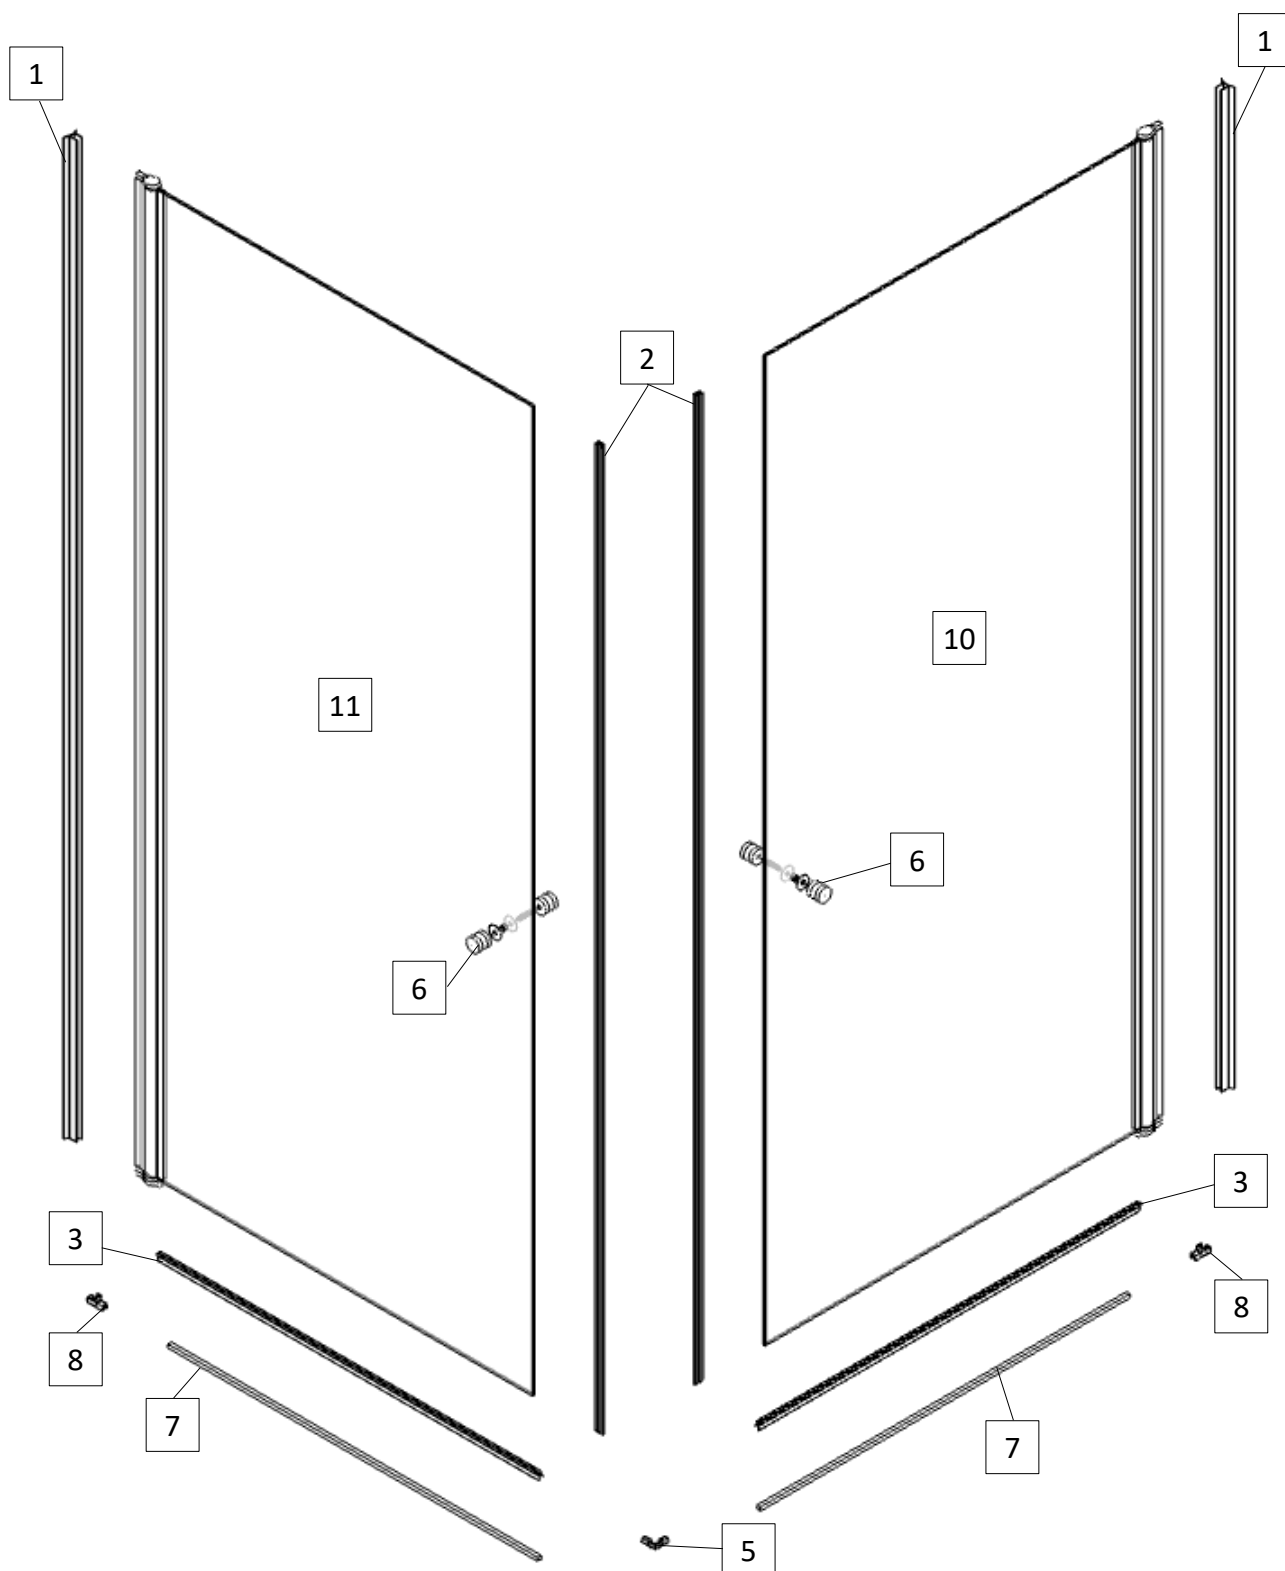





Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

1.A

AMELIA	P (mm)	A1 (mm)	B1 (mm)
70X70AME	700 x 700	689	689
80X80AME	800 x 800	789	789
90X90AME	900 x 900	889	889
100X100AME	1000 x 1000	989	989

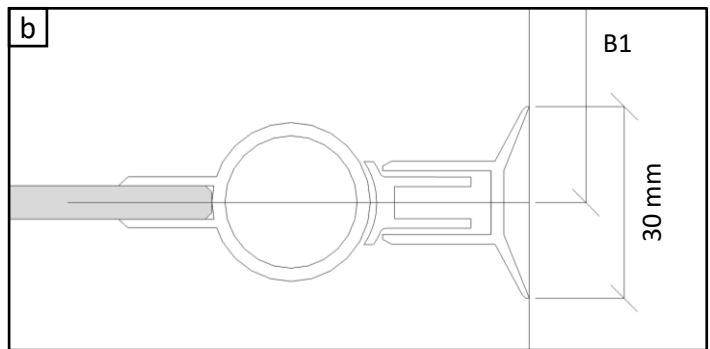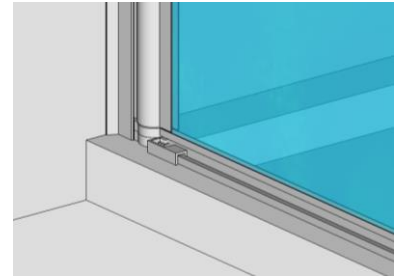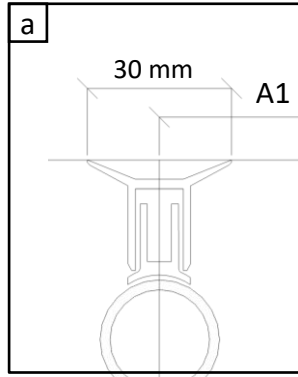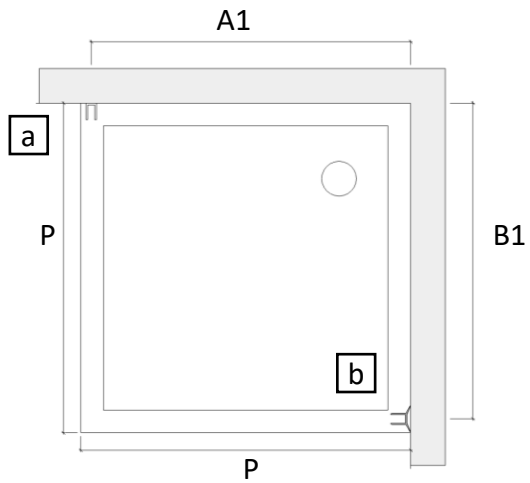

1.B

AMELIA	D	S
70X70AME	700	700
80X80AME	800	800
90X90AME	900	900
100X100AME	1000	1000

