


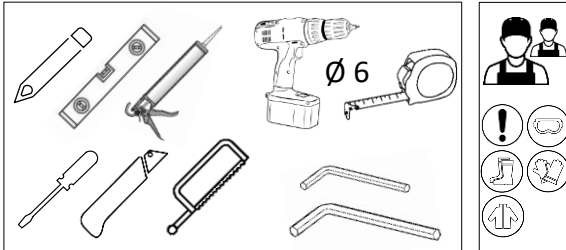










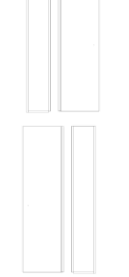
ANNA

Dušas kabīnes montāžas instrukcija




Инструкция по монтажу душевой кабины



Shower enclosure installation assembly



1.		VIRA20CH	2
2.		PAL-01B-AL	2
3.		SU45CH + SK2SET1	2
4.		R1653308	2
5.		DR-CH32	2
6.		3,5x13 SK2SET	2
7.		3,5x35 SK1SET; Ø 6	2
8.		MF-36/6-ER	1
9.		SC-SL-UZL180L	1
10.		SC-SL-UZL180R	1
11.		SC-SL-UZL90G/G	1
12.		SC-ALU8X9NEW	2
13.		6 mm Safety Glass +VIRA20CH	1
14.		6 mm Safety Glass +VIRA20CH	1
15.		6 mm Safety Glass +VIRA20CH	1
16.		6 mm Safety Glass +VIRA20CH	1

ANNA	A + B (mm)	A1 (mm)	B (mm)	H (mm)
70X70ANN	670-675	610	200	1993
80X80ANN	770-775	750	200	1993
90X90ANN	870-875	750	300	1993
100X100ANN	970-975	890	300	1993
110X110ANN	1070-1075	890	400	1993
120X120ANN	1170-1175	890	500	1993

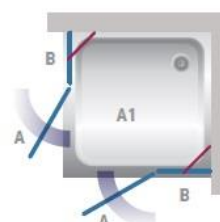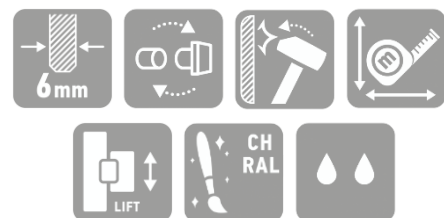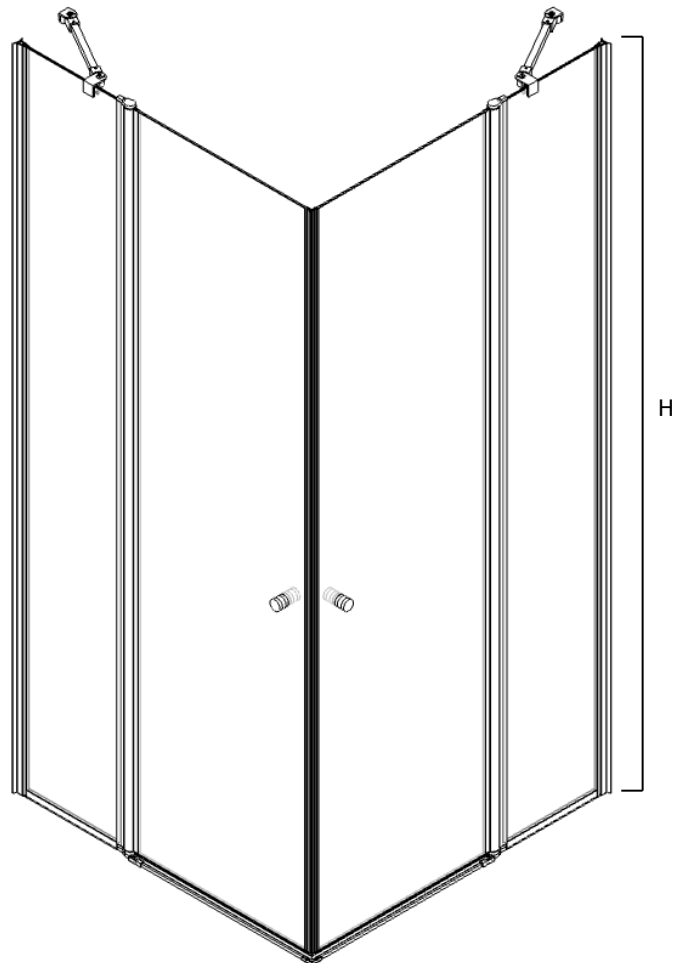

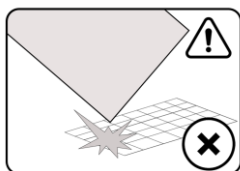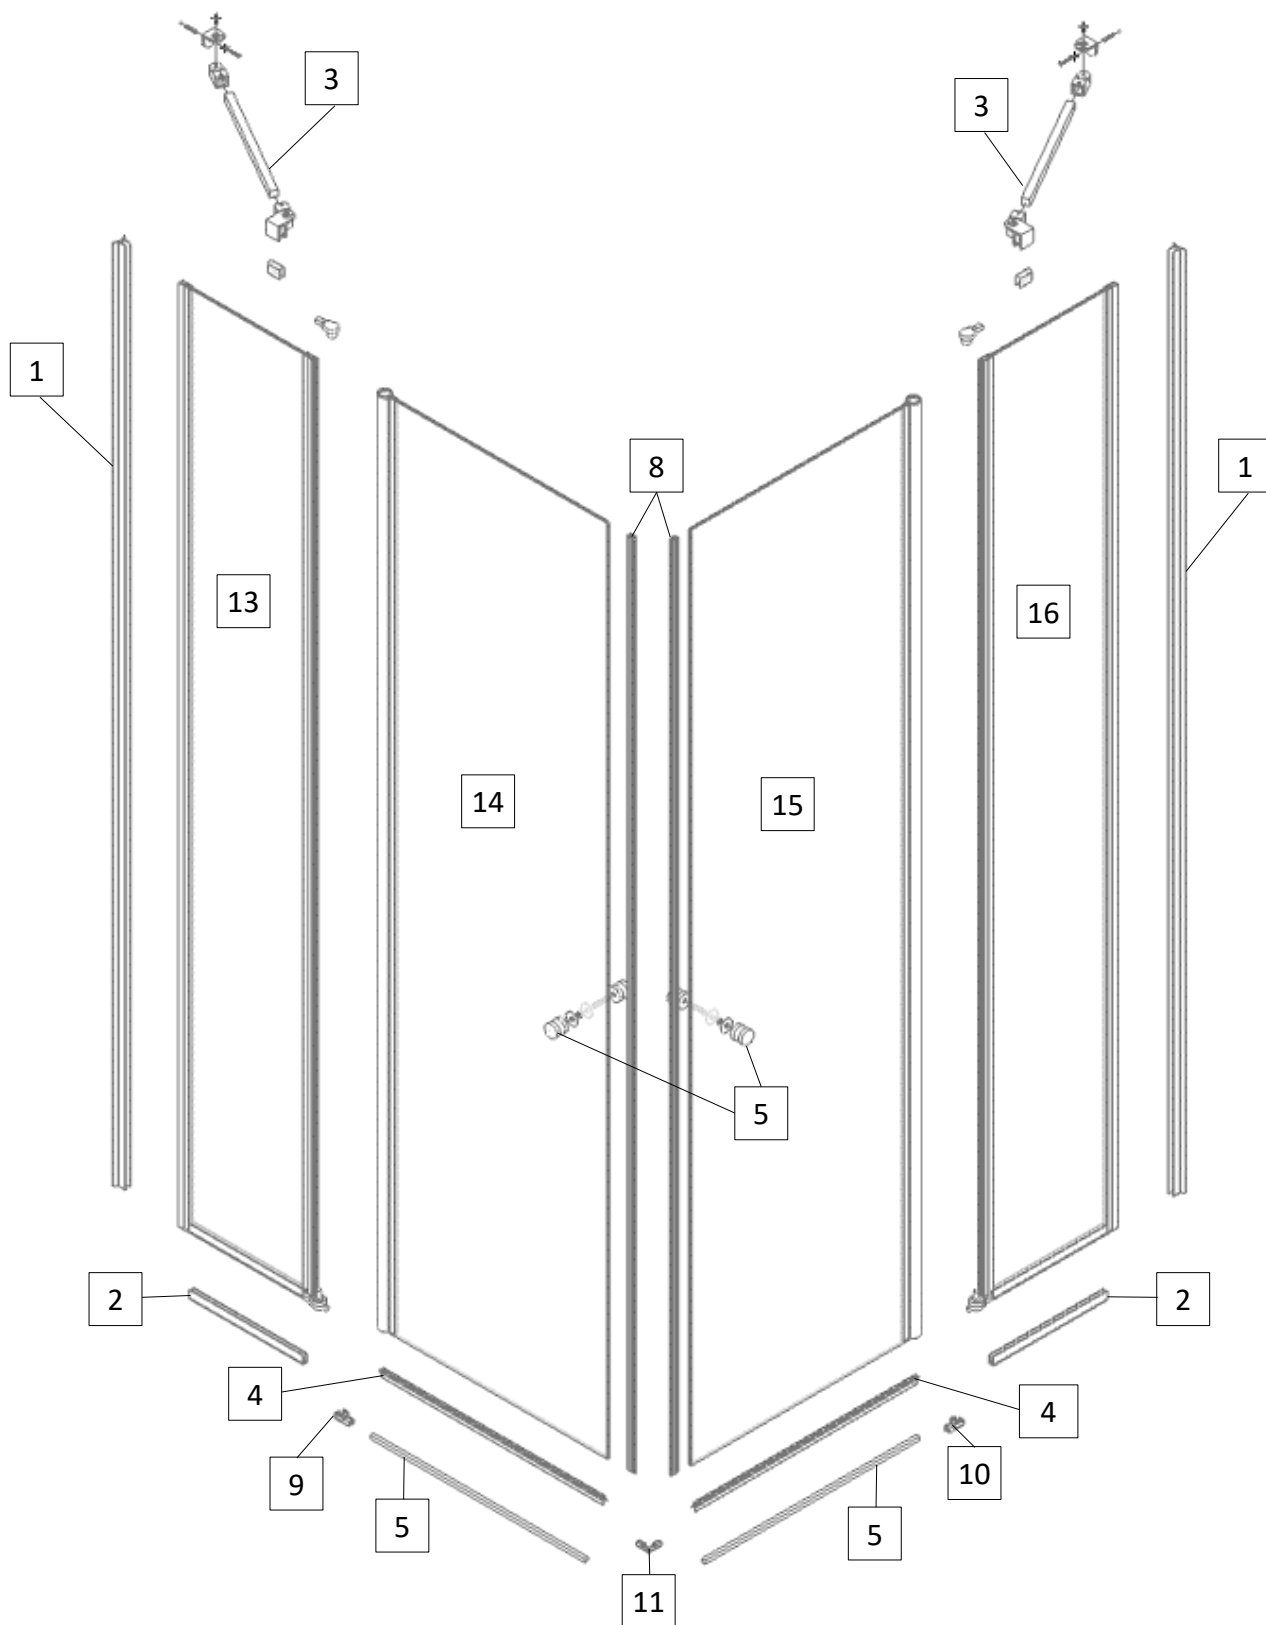





Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.





1.A




ANNA	P (mm)	C (mm)
70X70ANN	700 x 700	688
80X80ANN	800 x 800	788
90X90ANN	900 x 900	888
100X100ANN	1000 x 1000	988
110X110ANN	1100 x 1100	1088
120X120ANN	1200 x 1200	1188









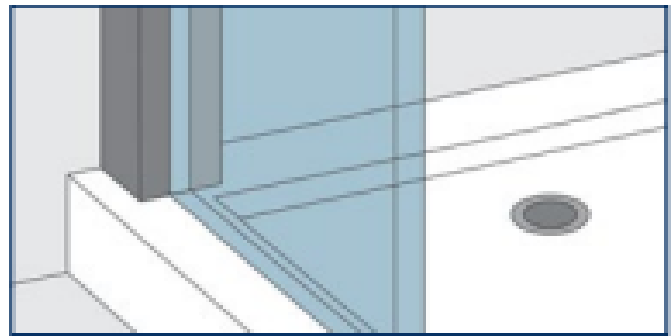
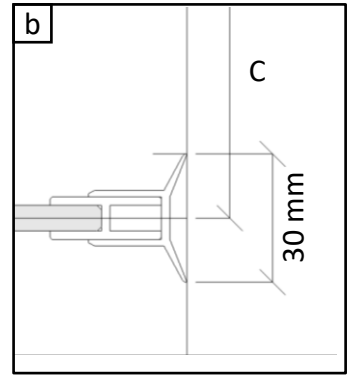
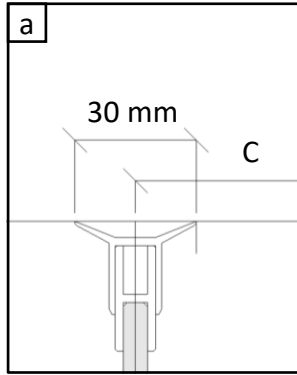
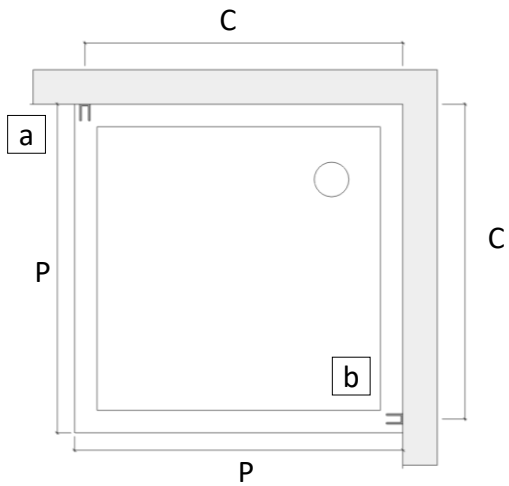







1.B






ANNA	D (mm)	S (mm)
70X70ANN	700	700
80X80ANN	800	800
90X90ANN	900	900
100X100ANN	1000	1000
110X110ANN	1100	1100
120X120ANN	1200	1200


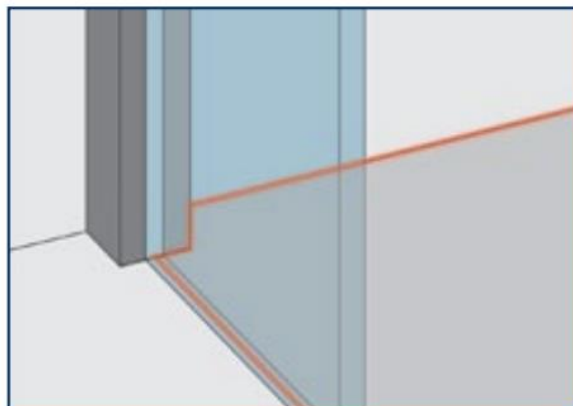
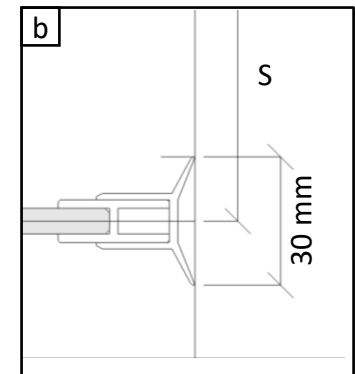
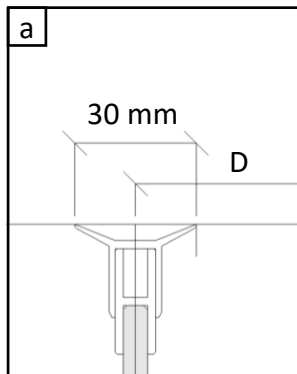
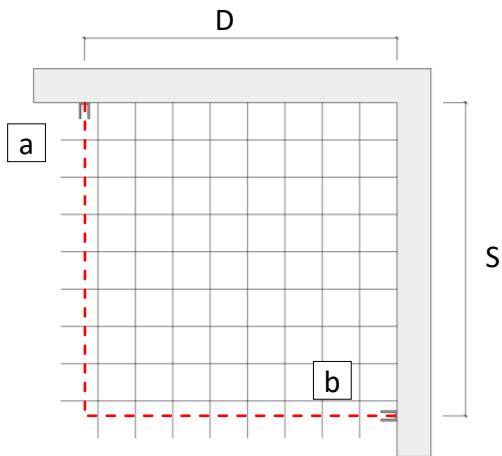






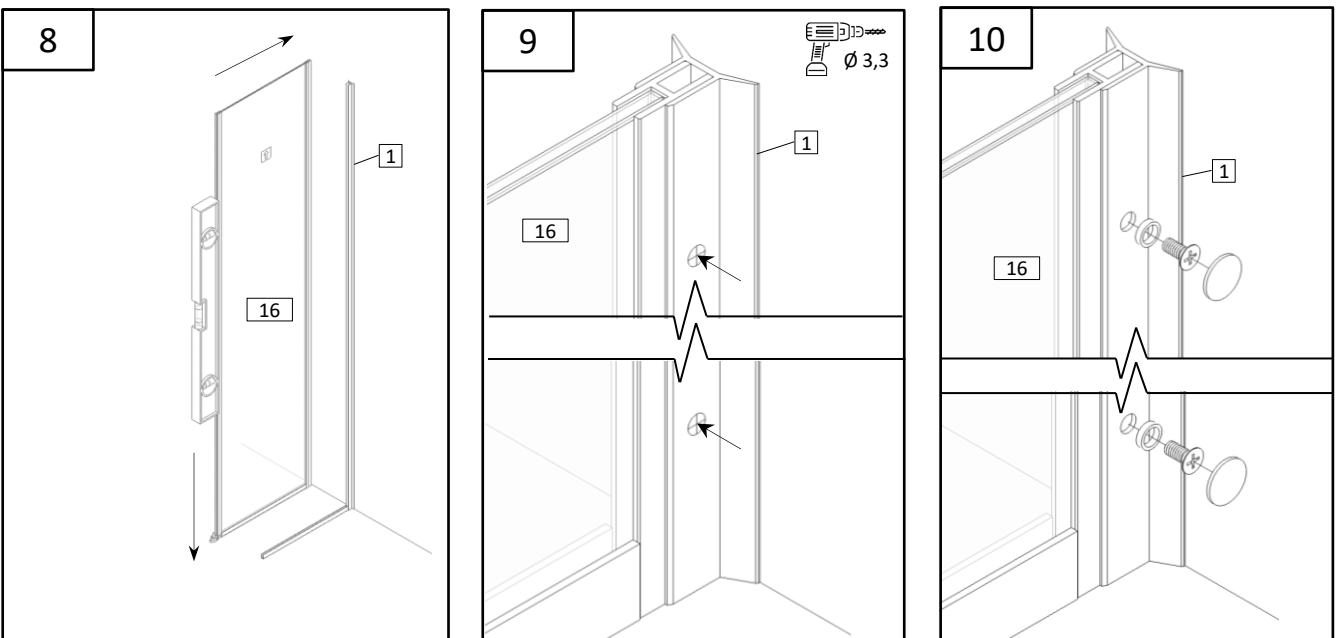
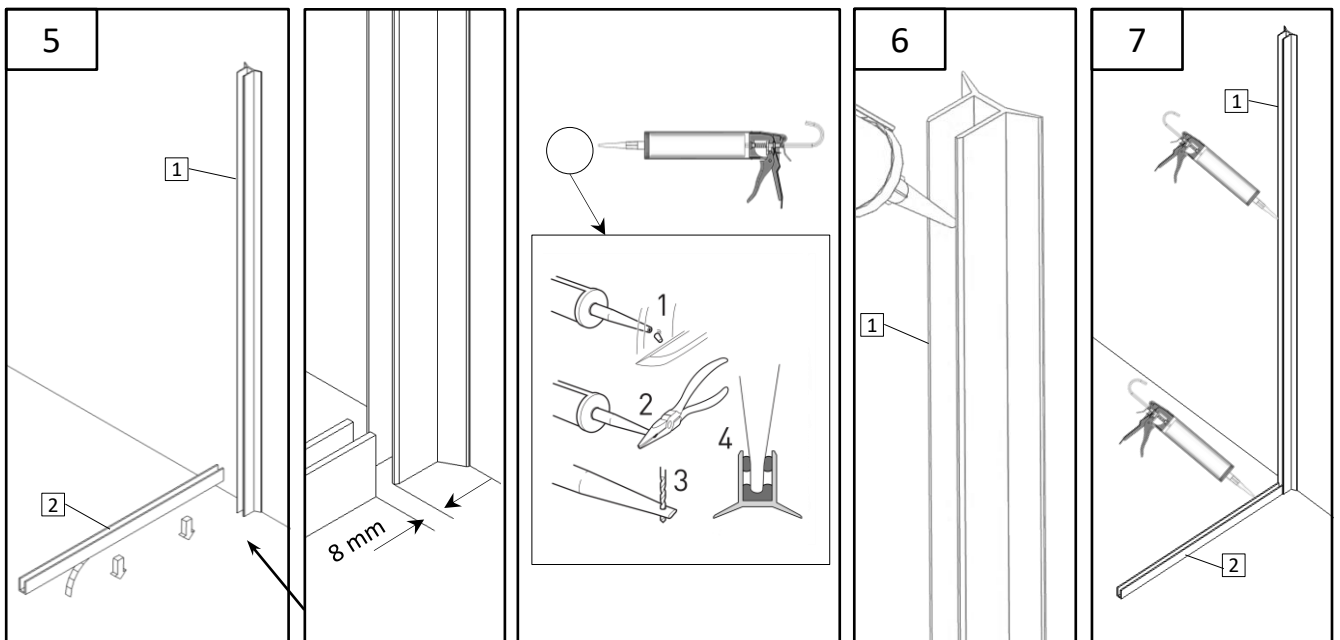
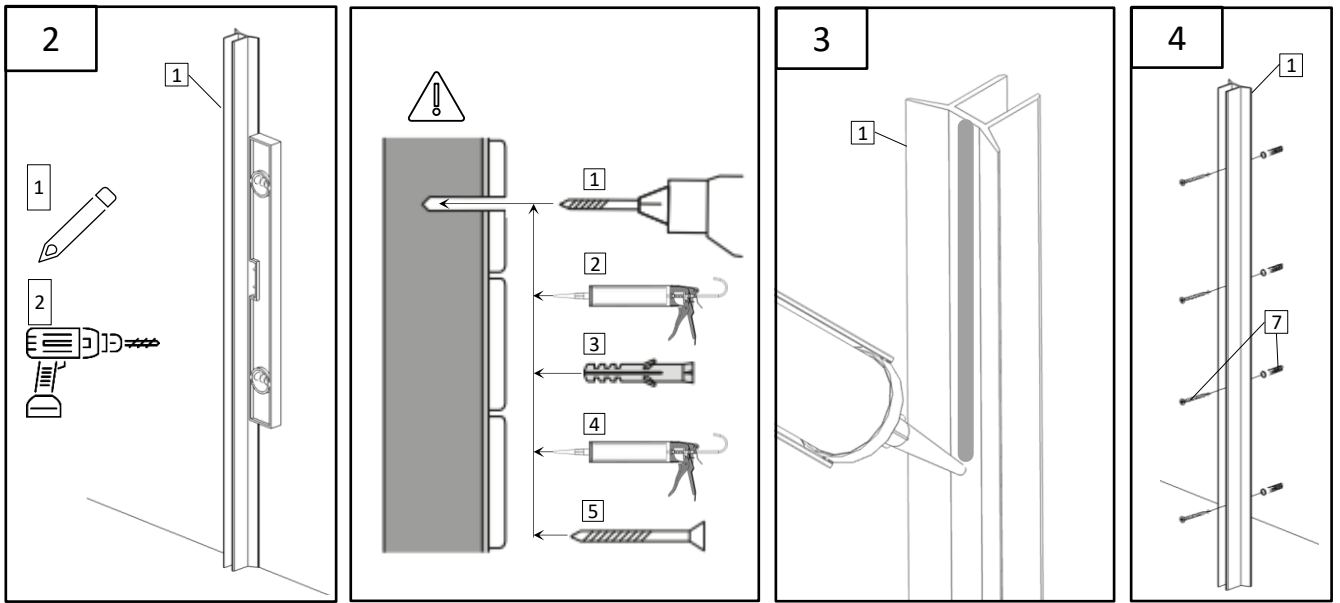


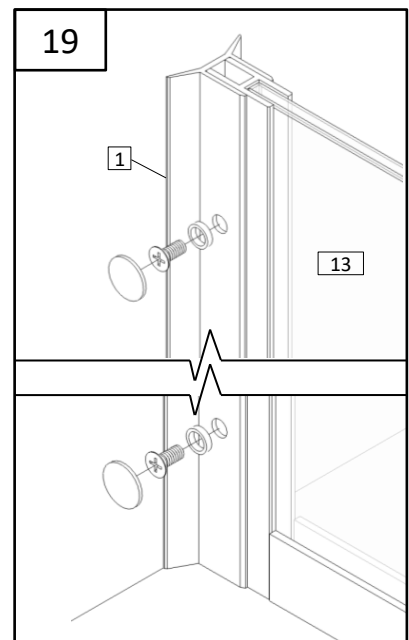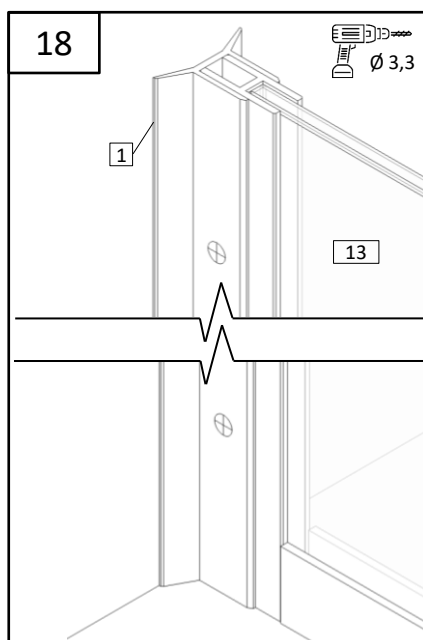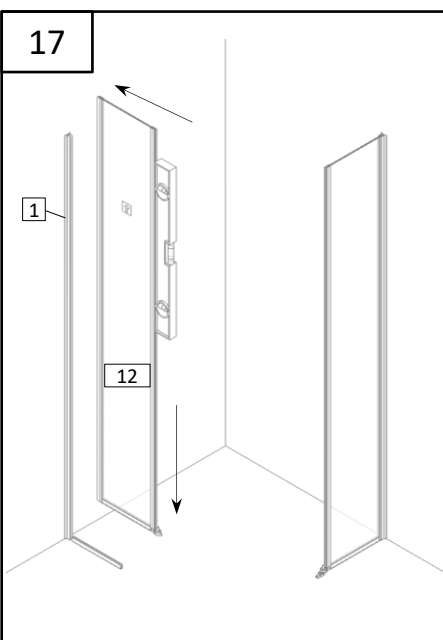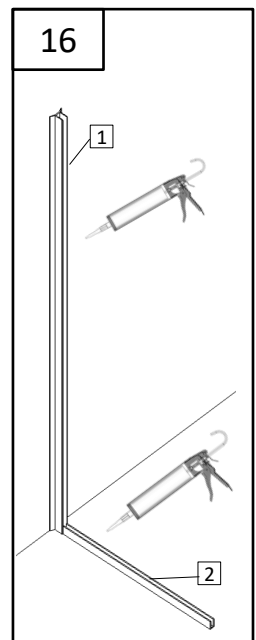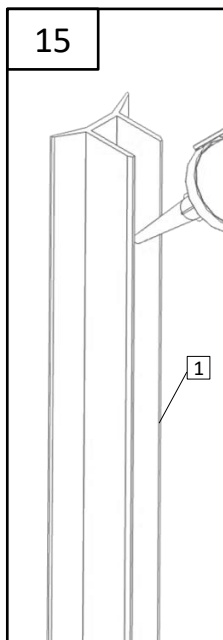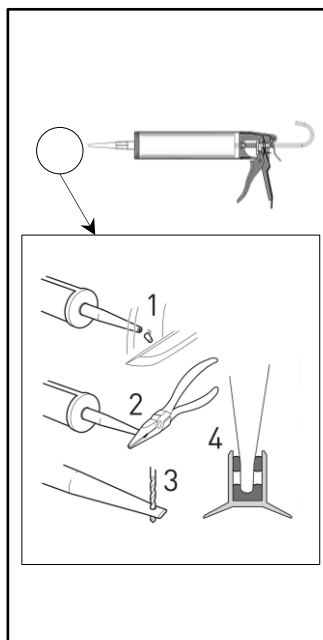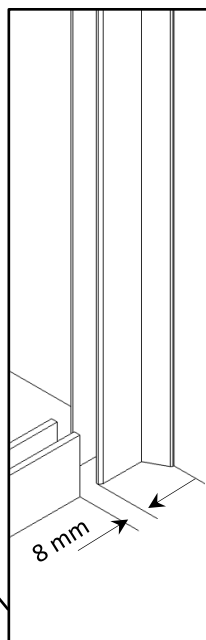
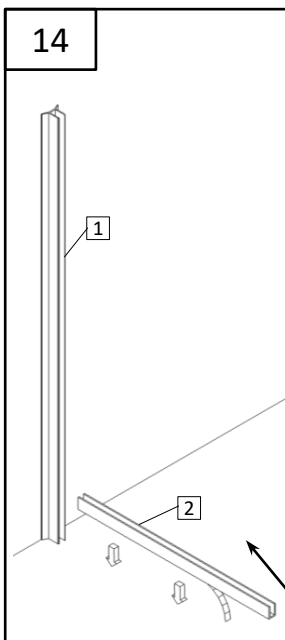
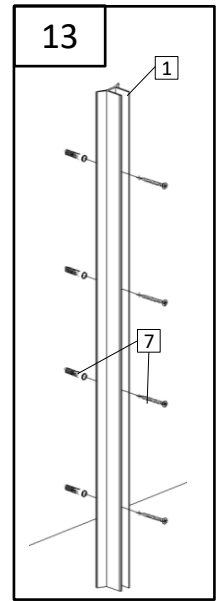
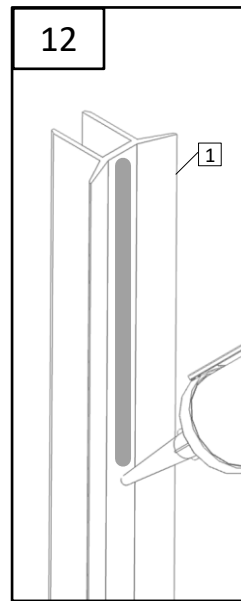
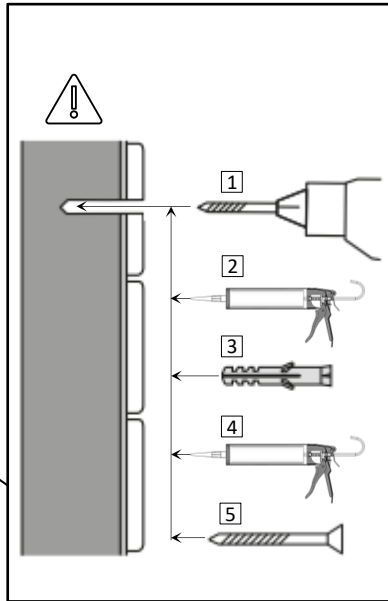
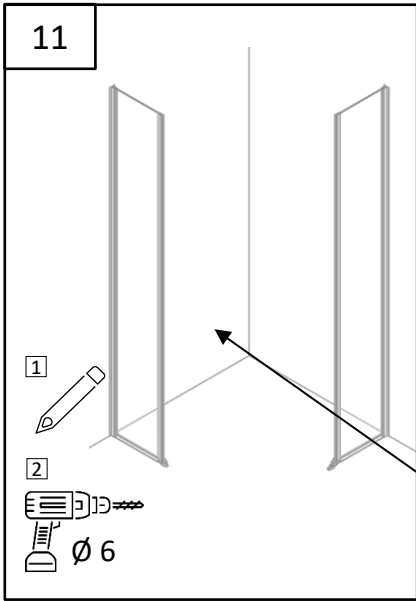


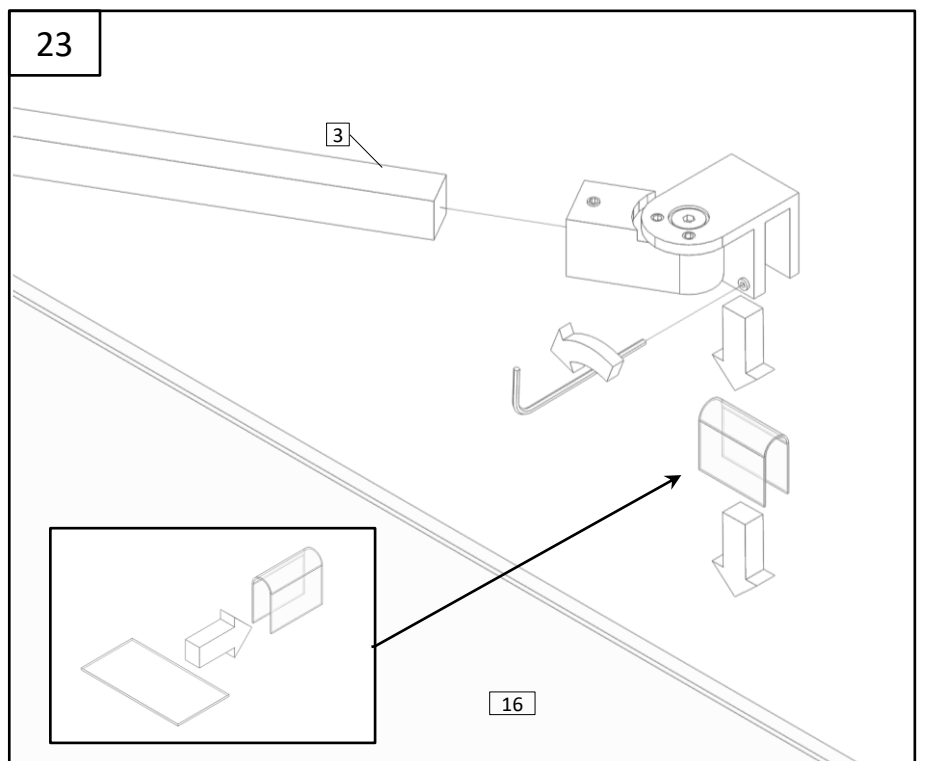
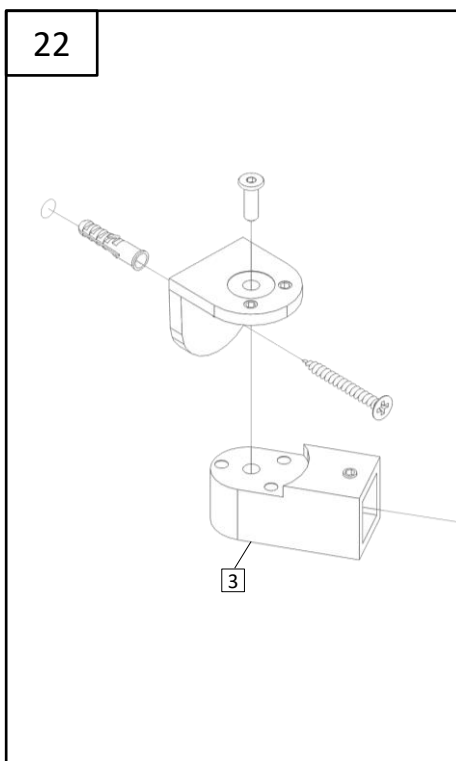
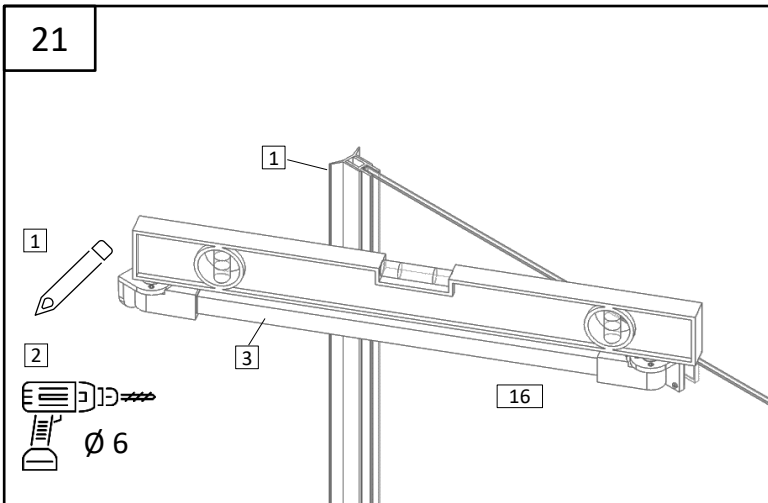
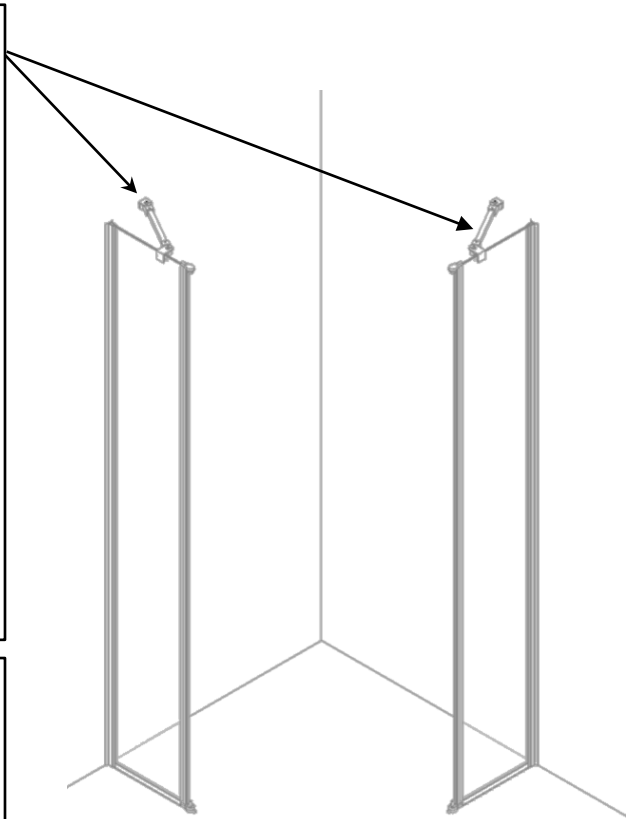
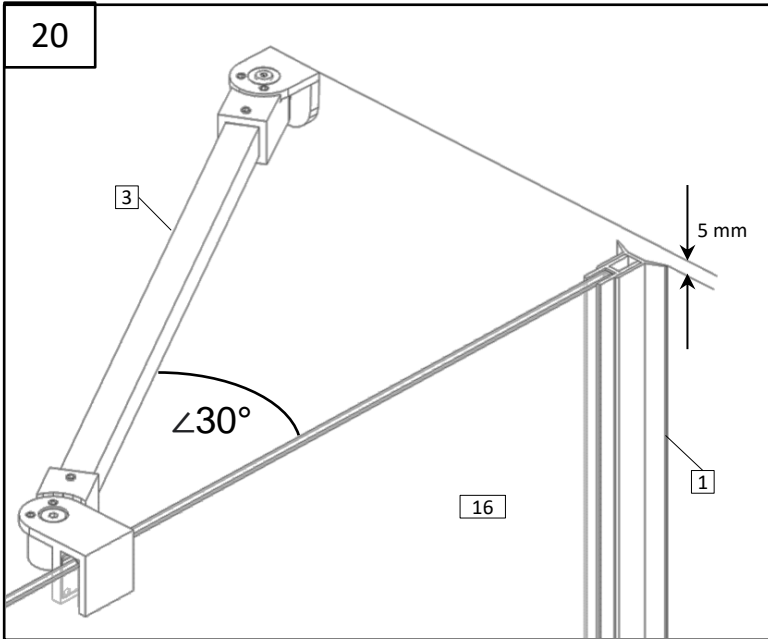


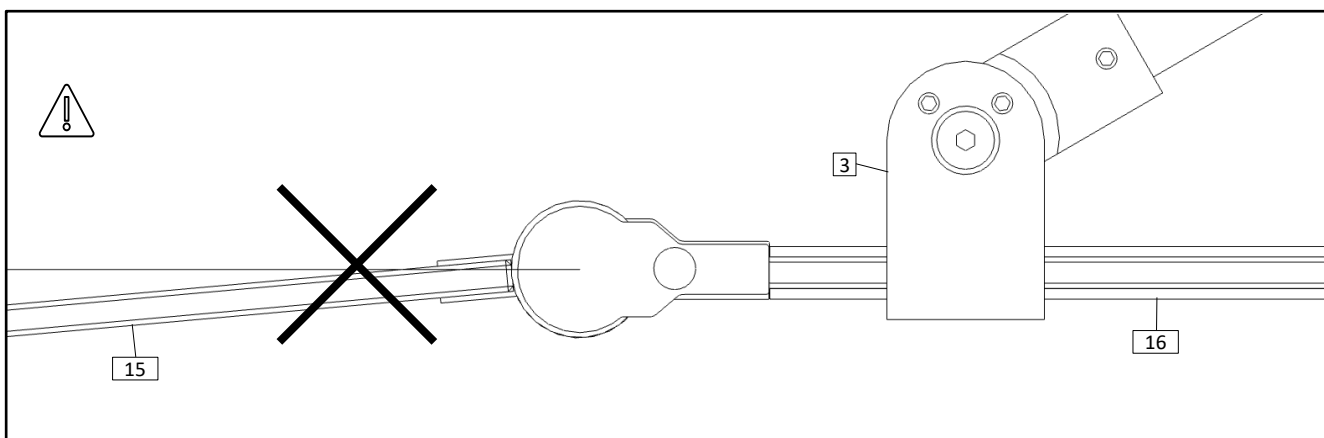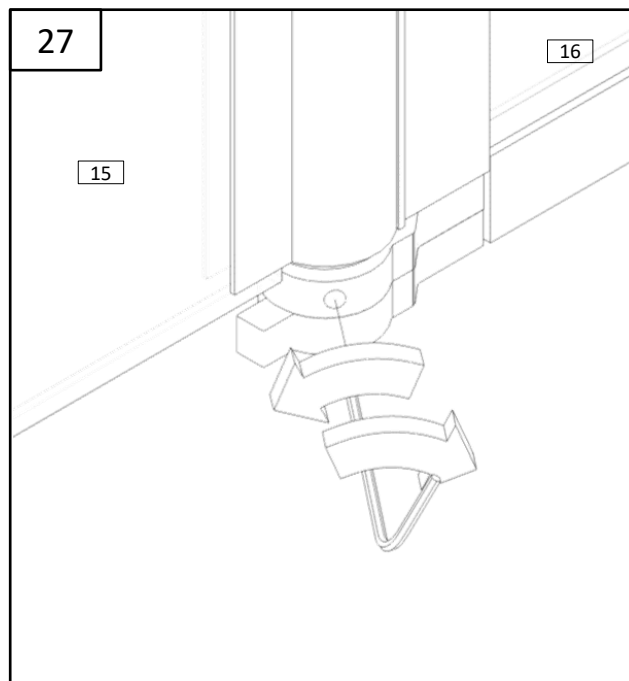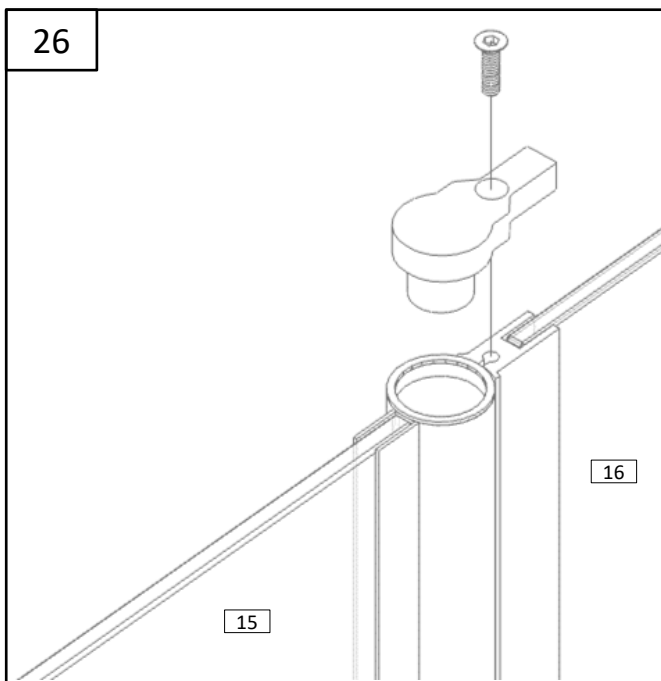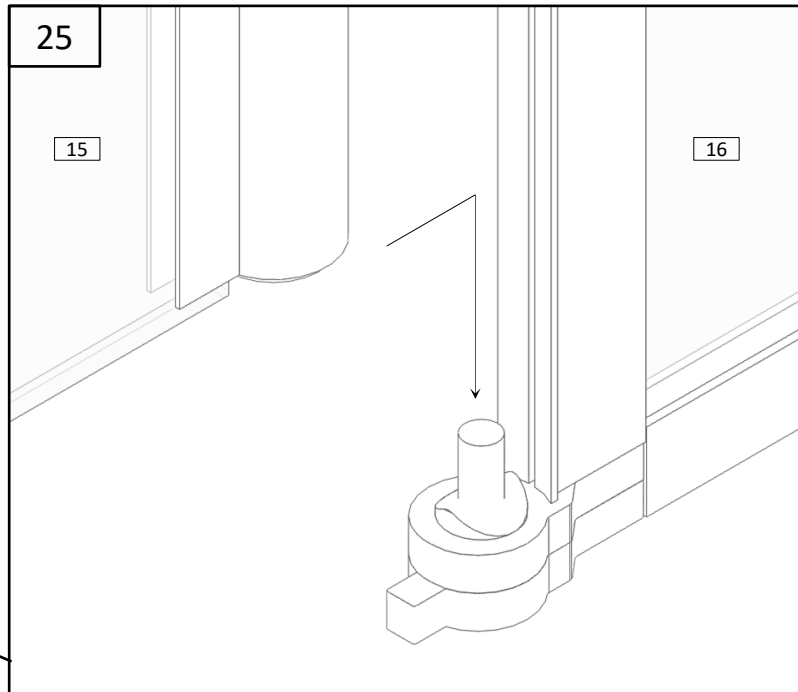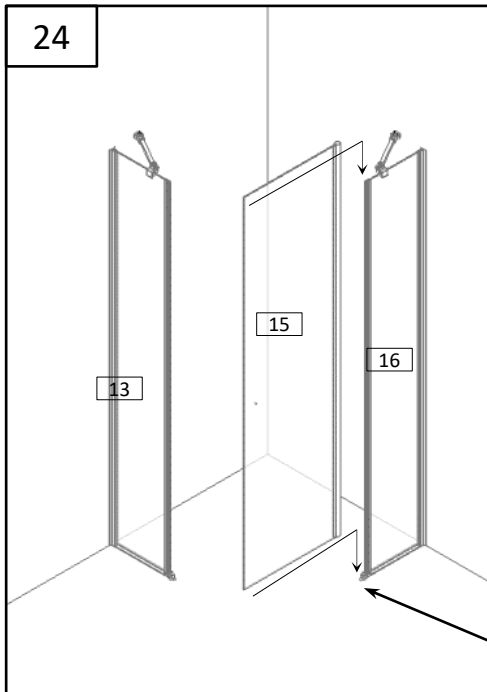

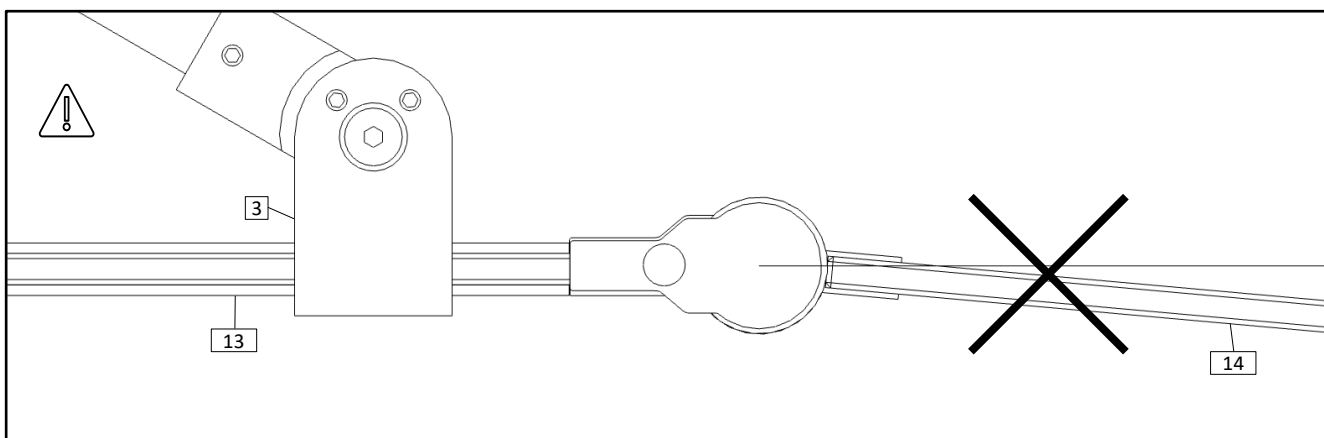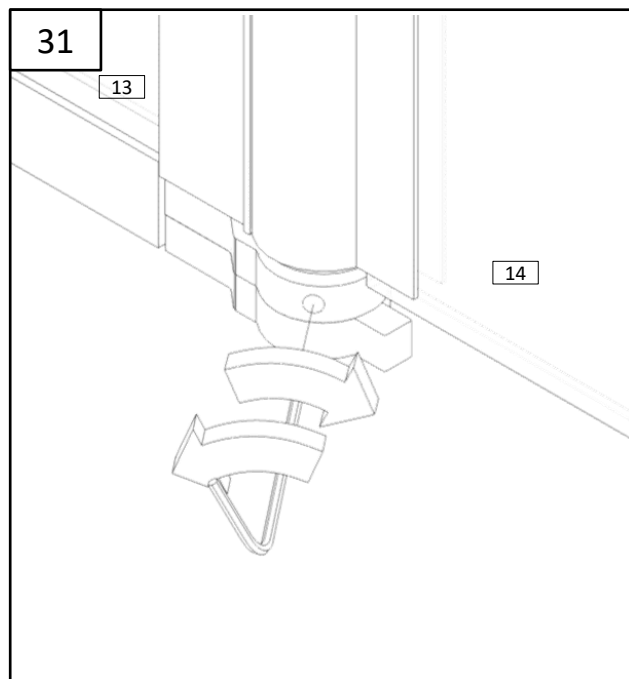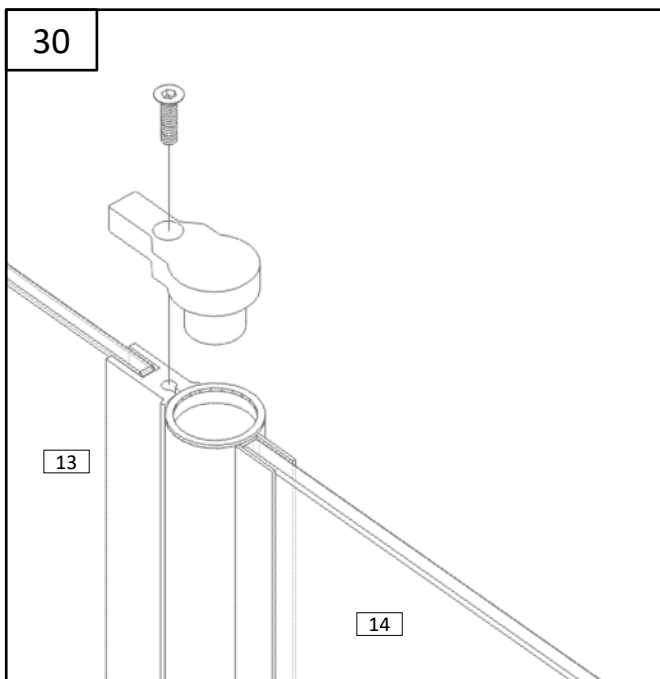
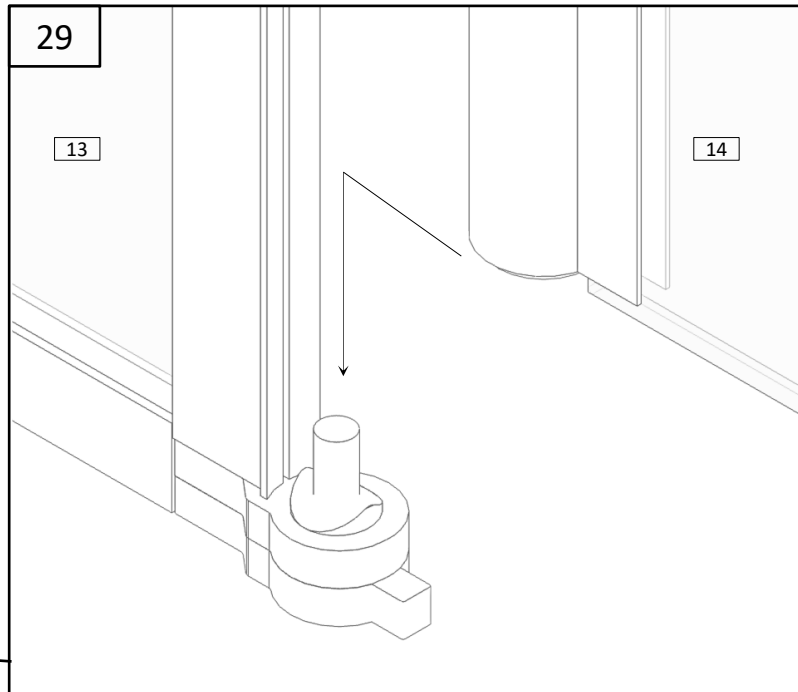
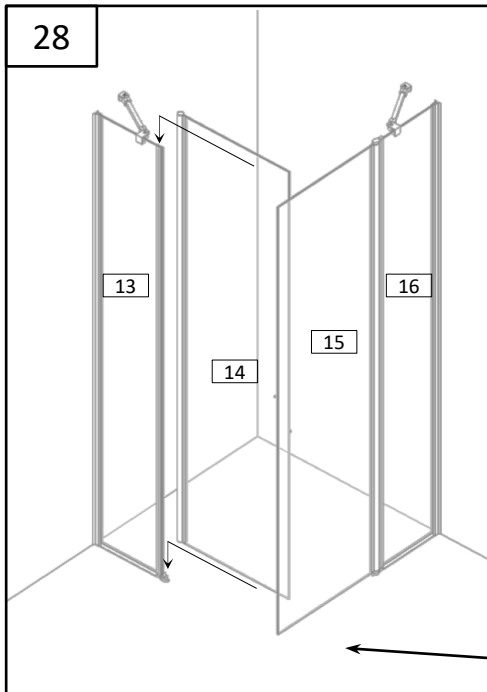


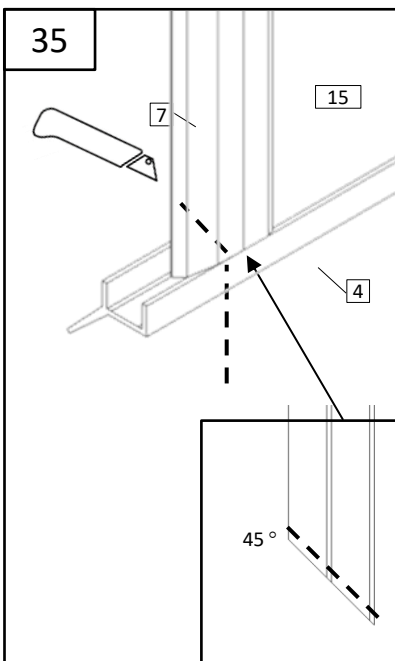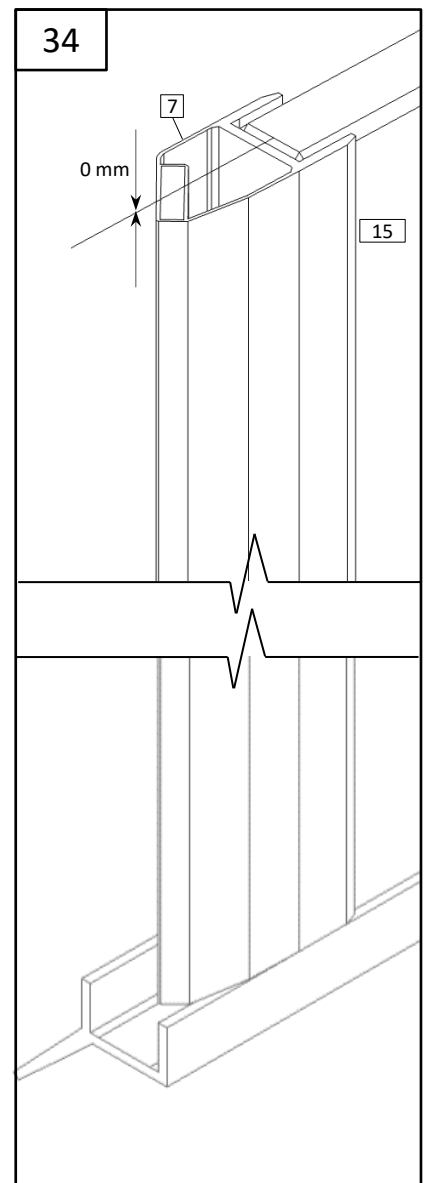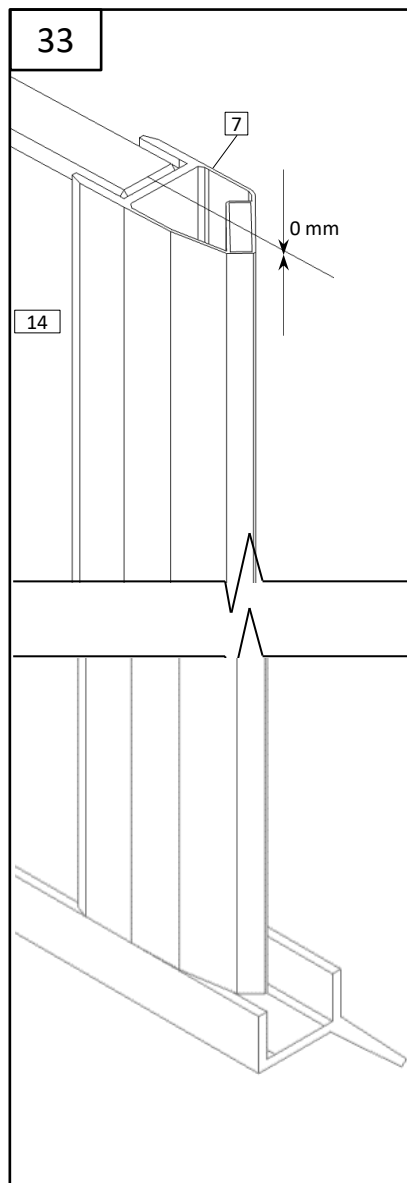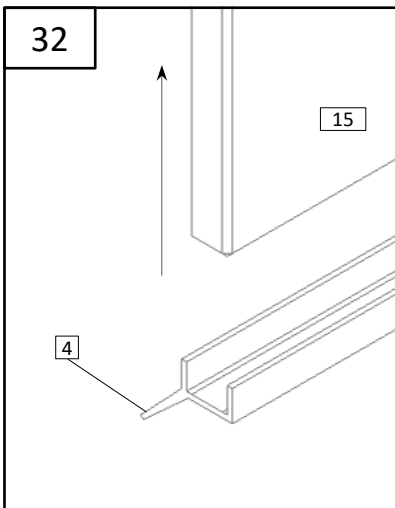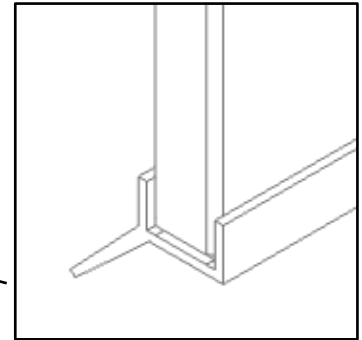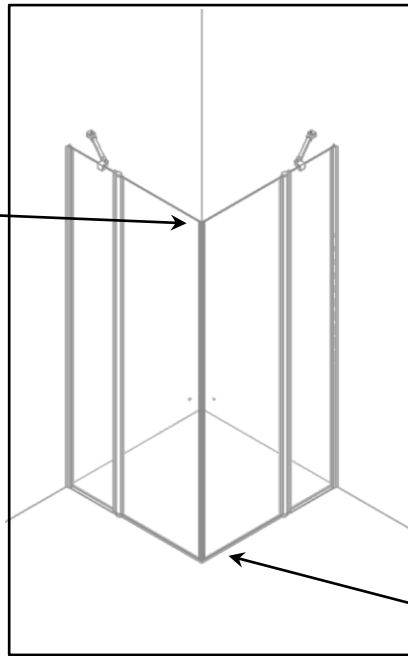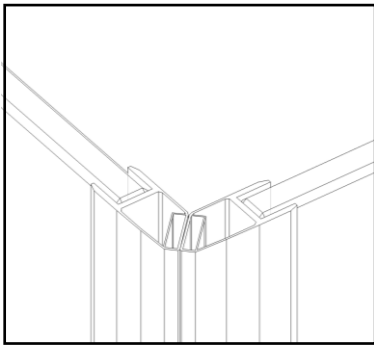

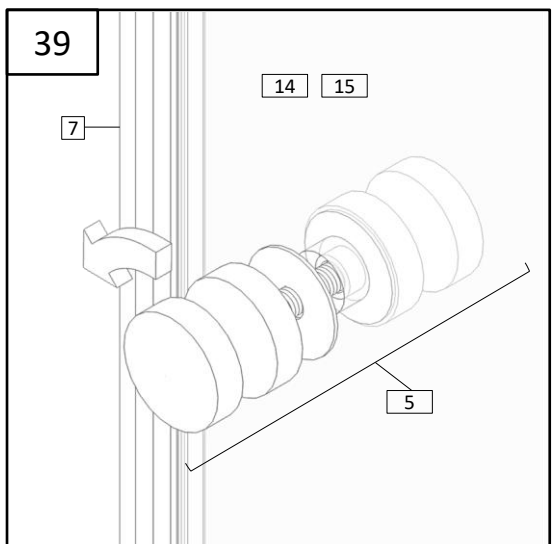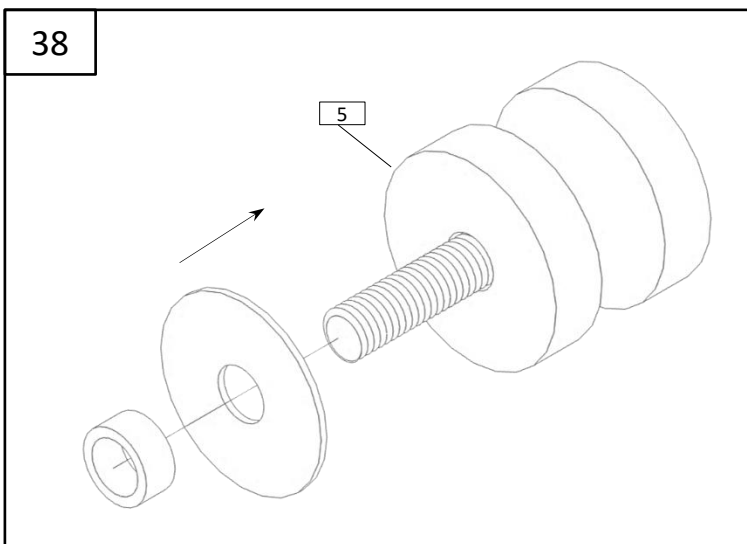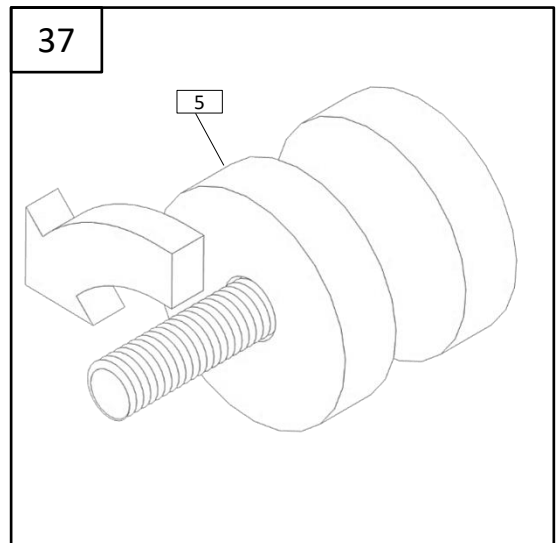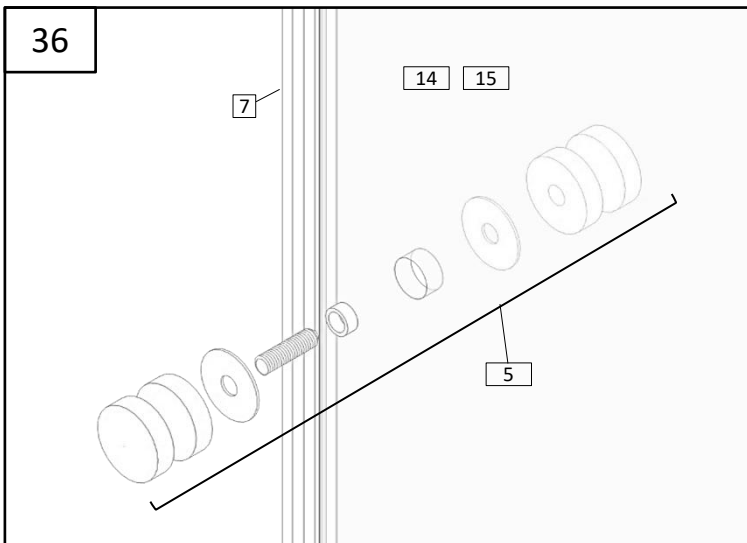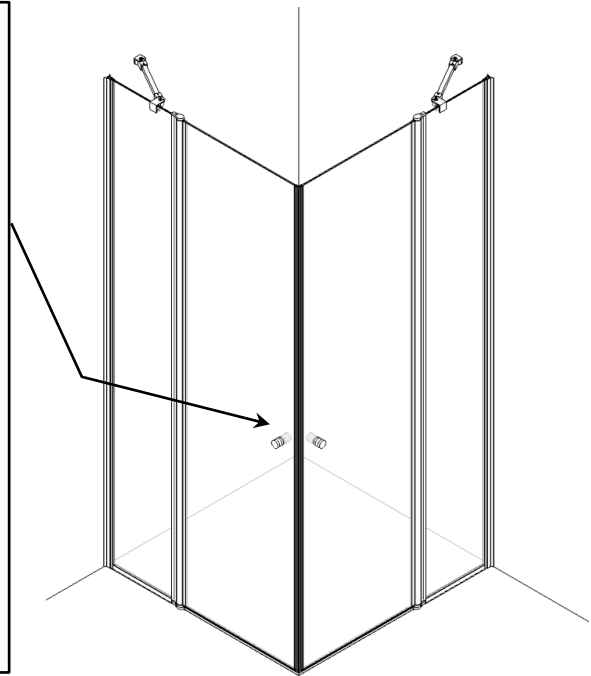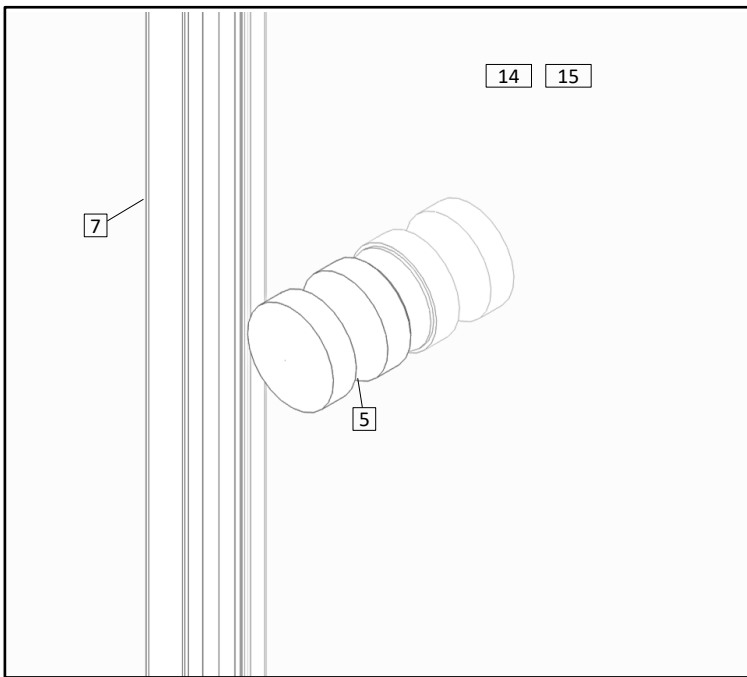

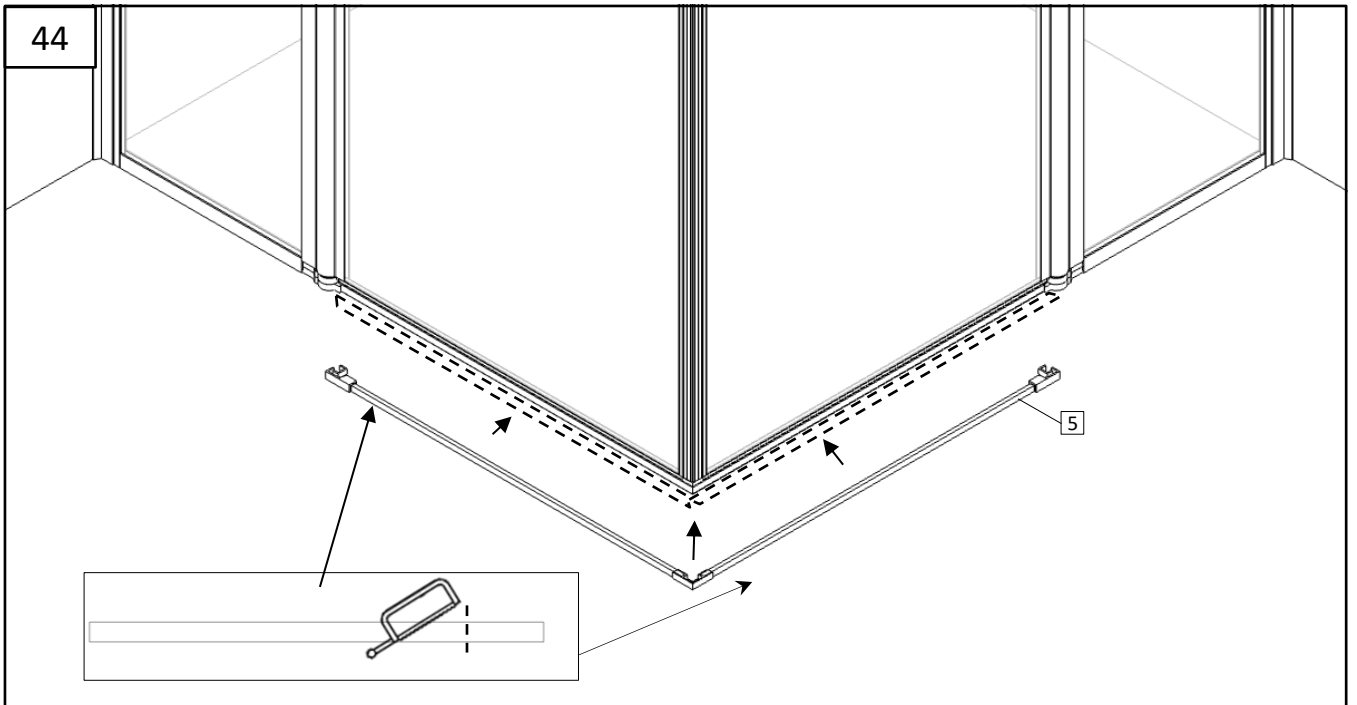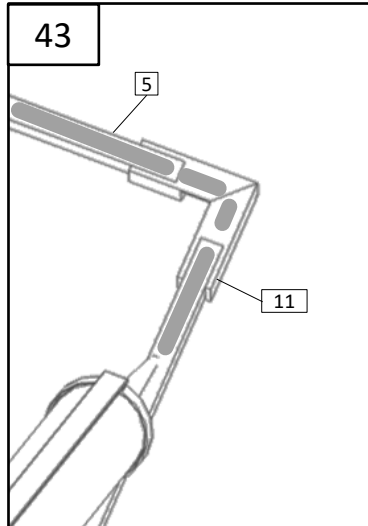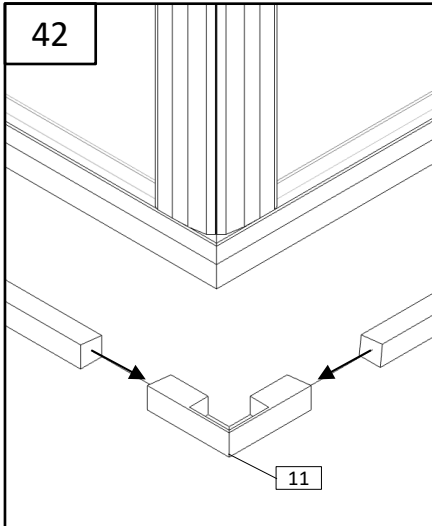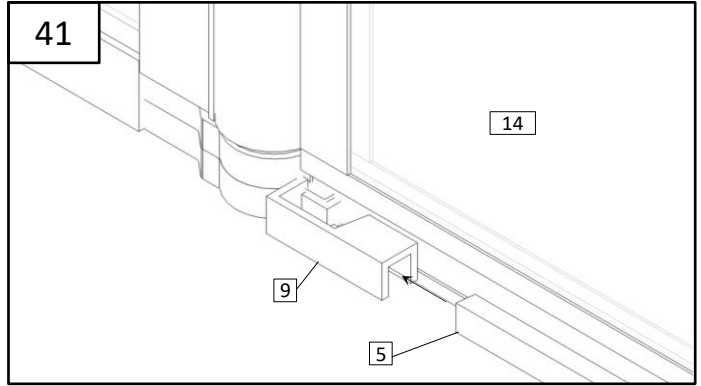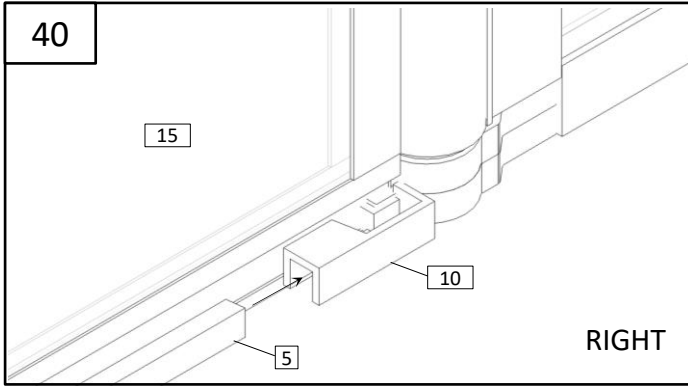

45

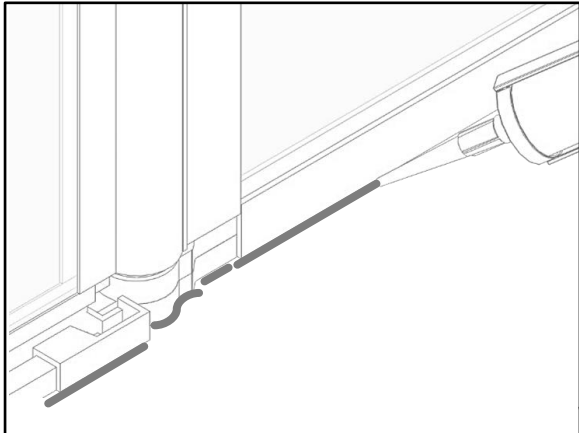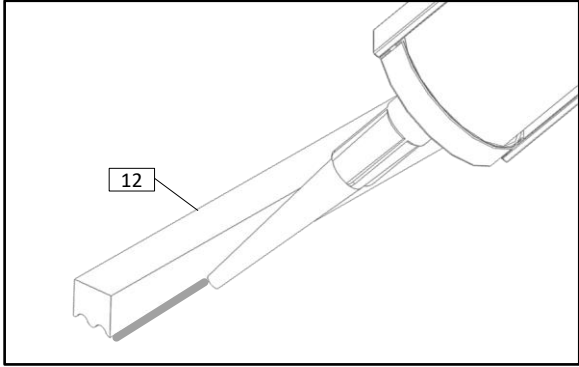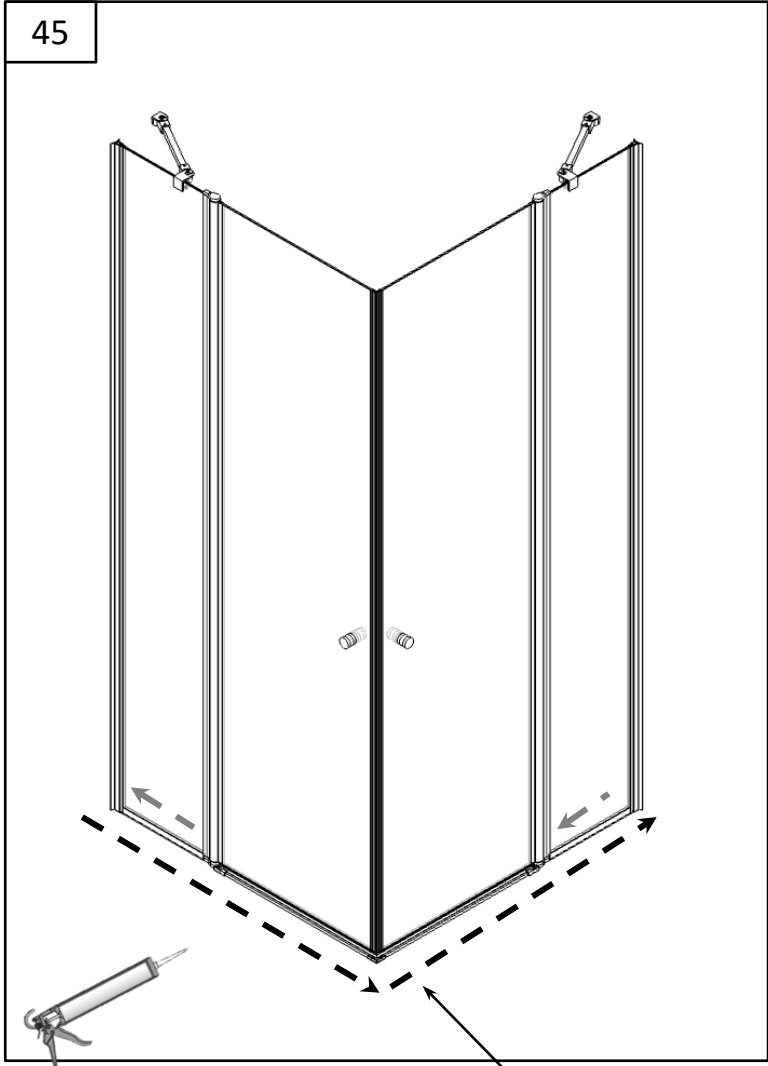

46

