


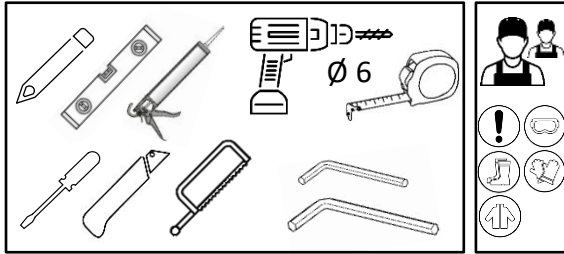






ARCO BLACK DEEP 1


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions



1.		NLO-KP-2732	1
2.		NLO-KP-001	1
3.		NTK-TW012	1
4.		PAL-01	1
5.		PAL-01B	1
6.		8mm LVS_EN 12150 2:2004	1
7.		3,5x35 SK1SET Ø 6	1

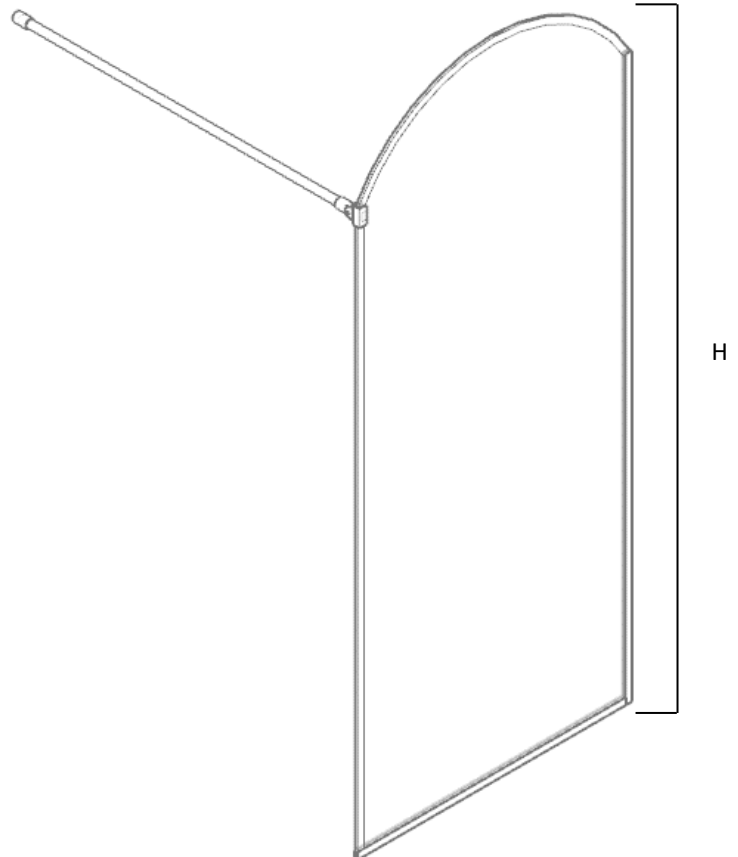

ARCO BLACK DEEP 1	A (mm)	H (mm)
60ARC_B_D1	568-573	2250
70ARC_B_D1	668-673	2250
80ARC_B_D1	768-773	2250
90ARC_B_D1	868-873	2250
100ARC_B_D1	968-973	2250
110ARC_B_D1	1068-1073	2250
120ARC_B_D1	1168-1173	2250





LEFT

RIGHT



ARCO BLACK DEEP 1

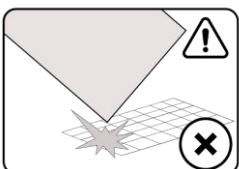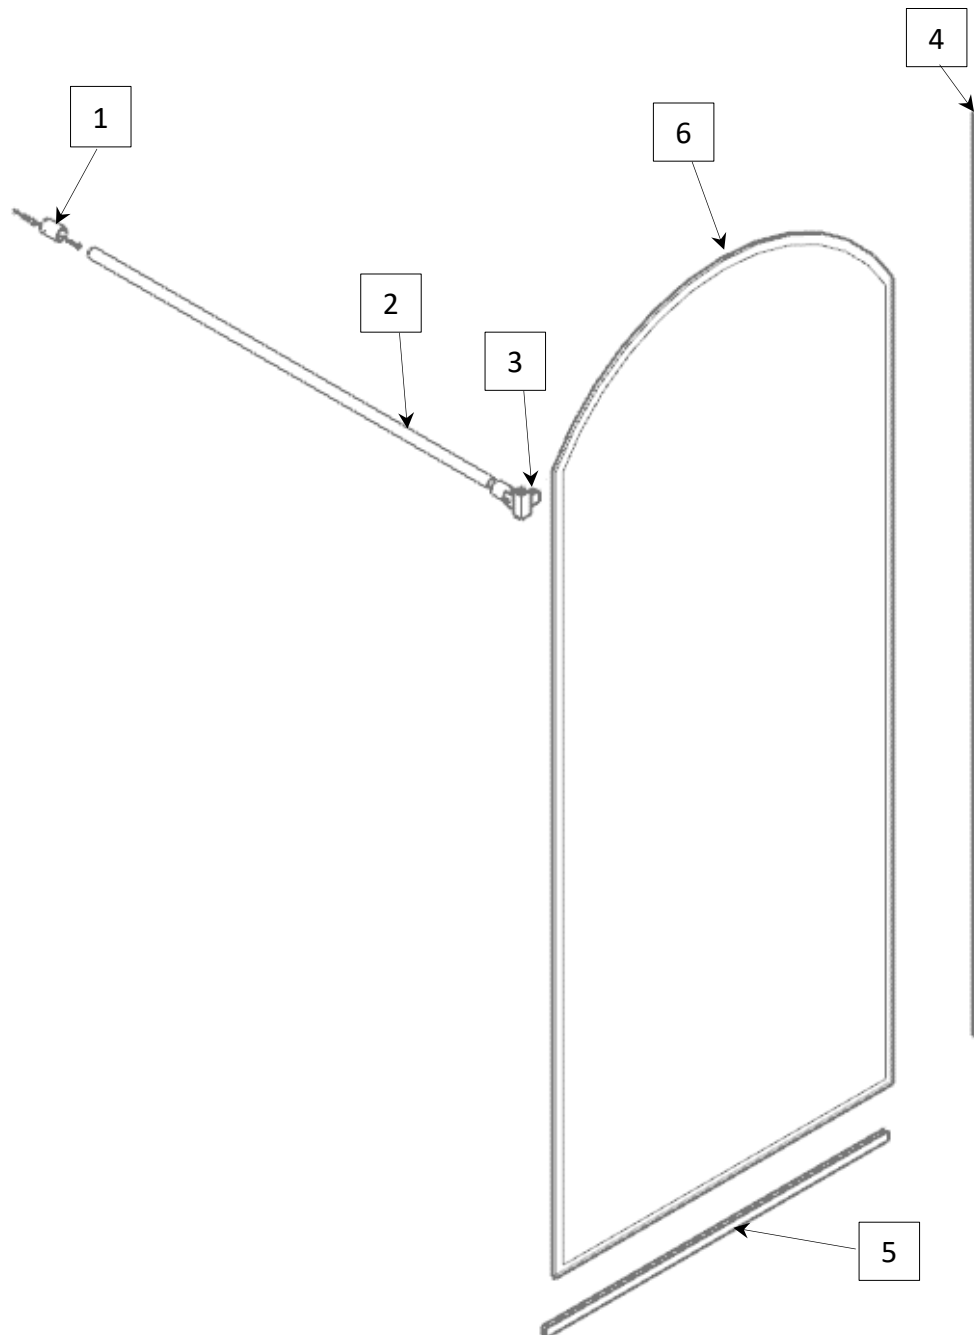

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

