








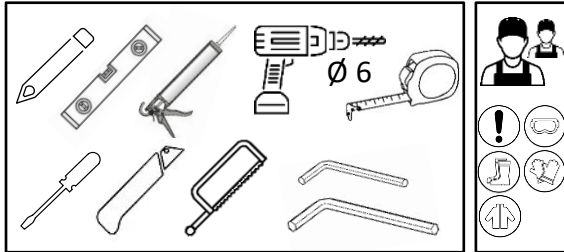







ARIANNA



Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions



1.		PAL-01	1
2.		PAL-01B	1
3.		GC-2032/ MF-29-5MAGN	1
4.		8850KUO-8-2010	1
5.		2919-8-2SERE	1
6.		SF67-8-SERE	1
7.		8864-KUO-8	1
8.		S001-PROF-SER	1
9.		S001-SER + SK2SET	1
10.		SC-ALU8X9NEW	1
11.		R50CH-SER	1
12.		3,5X35 SK1SET	2
13.		8 mm Safety Glass	1
14.		8 mm Safety Glass	1

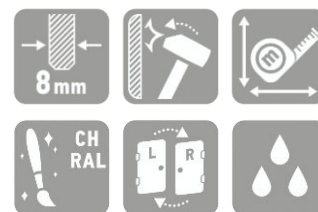
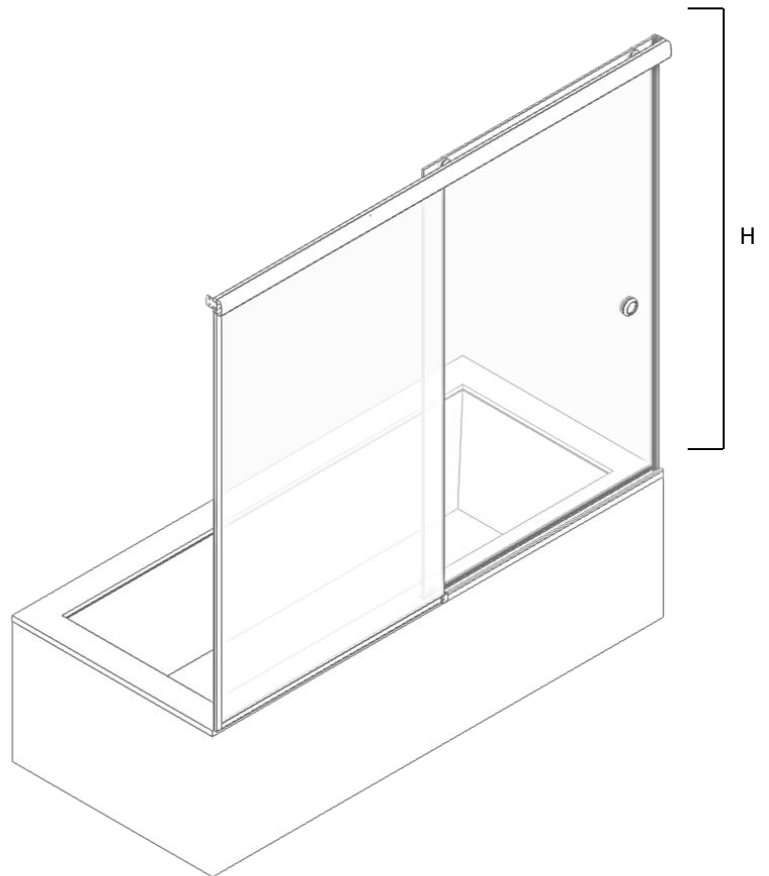


LEFT

RIGHT



ARIANNA	A (mm)	B (mm)	H (mm)
120ARI	1180-1200	610	1500
130ARI	1280-1300	660	1500
140ARI	1380-1400	710	1500
150ARI	1480-1500	760	1500
160ARI	1580-1600	860	1500
170ARI	1680-1700	960	1500
180ARI	1780-1800	1060	1500

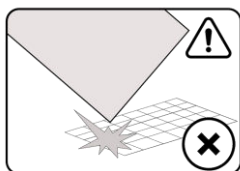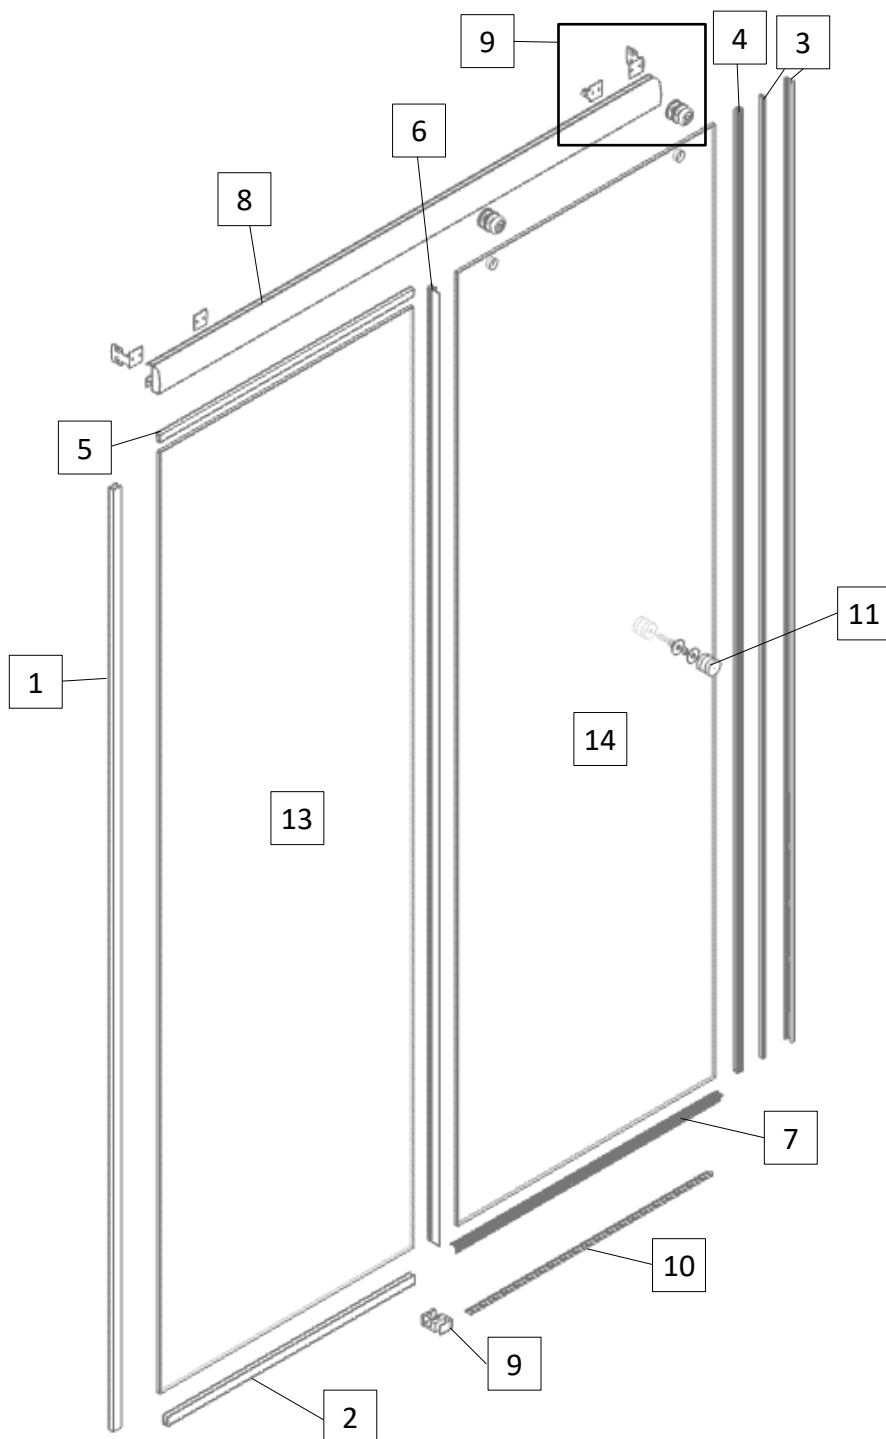

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

