







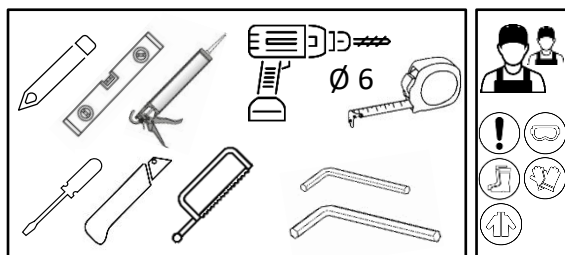






# AZZURA



## Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions




1.		SU45CH + SK2SET	1
2.		PAL-01	1
3.		PAL-01B	1
4.		MF-42/8-ER	1
5.		40021PS – 009	1
6.		400211PS-013	1
7.		SC-ALU8X9NEW	1
8.R		SC-SL-UZL180R	1
8.L		SC-SL-UZL180L	1
9.		PSDF-5CH-90CH	2
10.		3,5x35 SK1SET; Ø 6	2
11.		8 mm Safety Glass	1
12.		8 mm Safety Glass	1

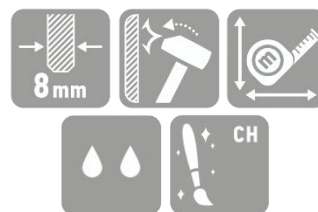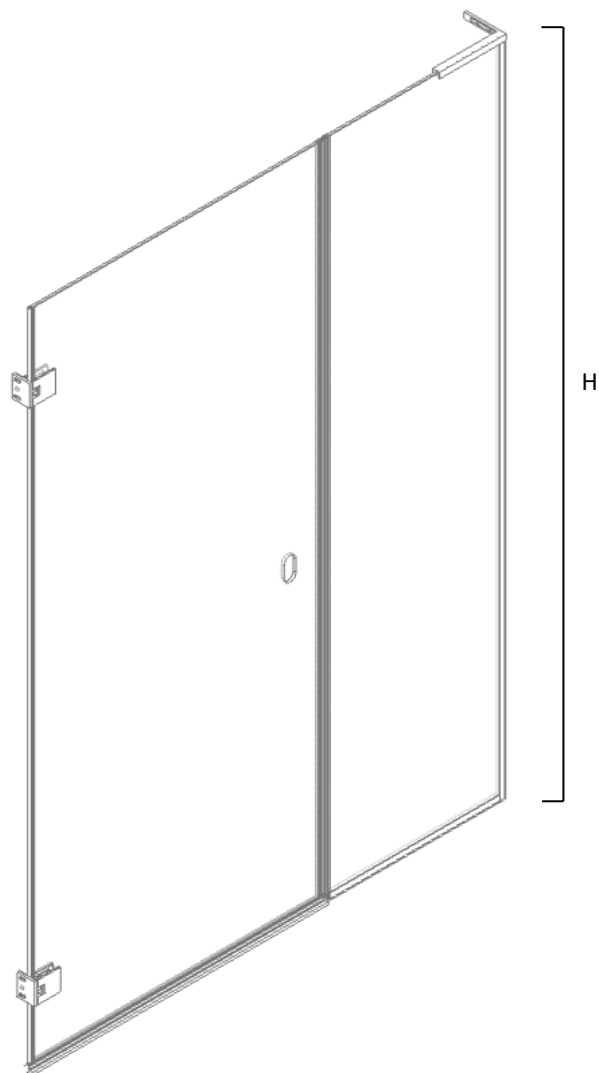


LEFT

RIGHT

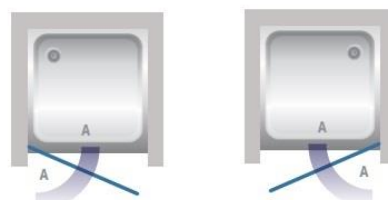

AZZURRA	A (mm)	H (mm)
70AZZ+	698-703	1988
80AZZ+	798-803	1988
90AZZ+	898-903	1988
100AZZ+	998-1003	1988
110AZZ+	1098-1103	1988
120AZZ+	1198-1203	1988

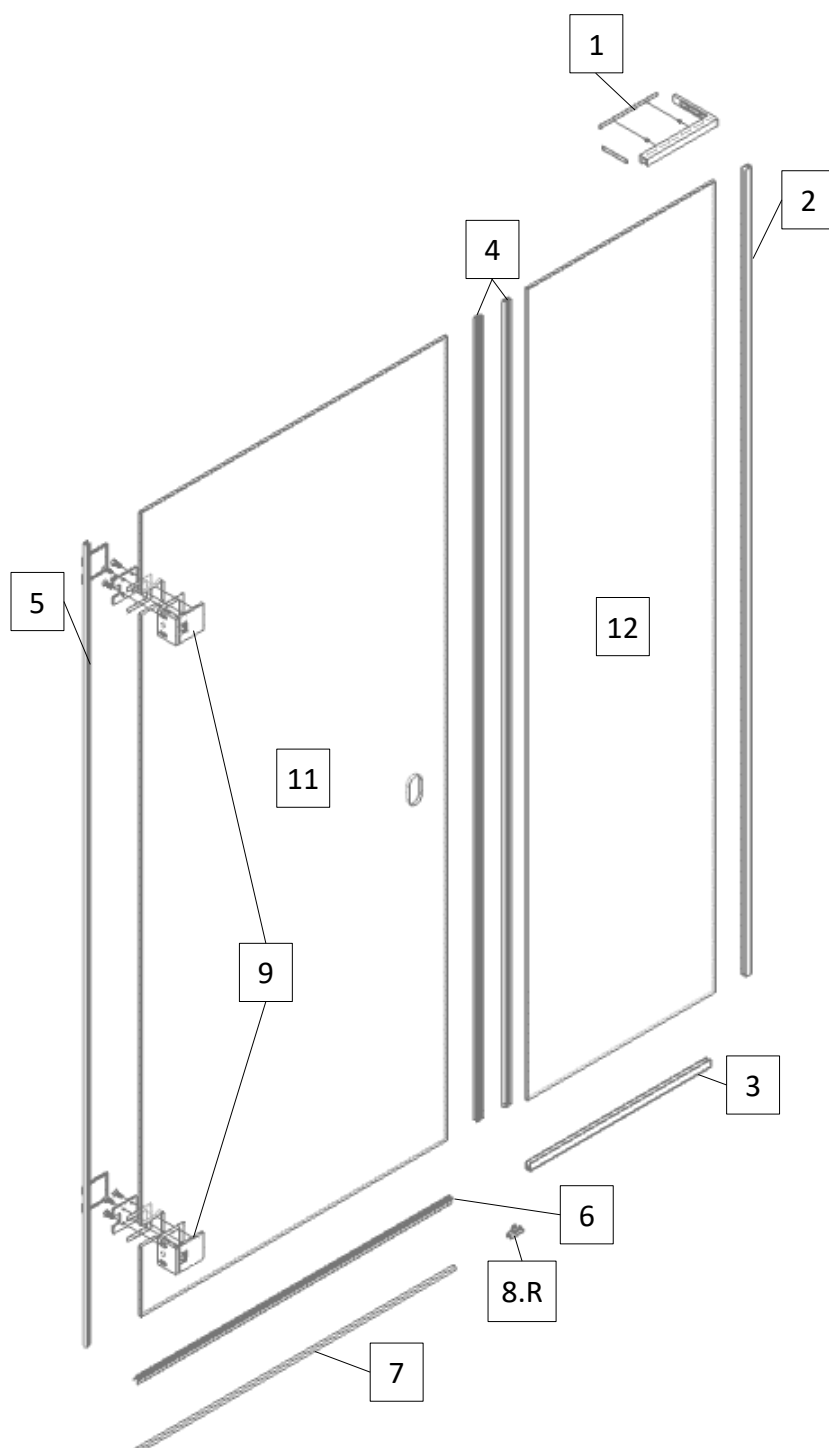

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

