


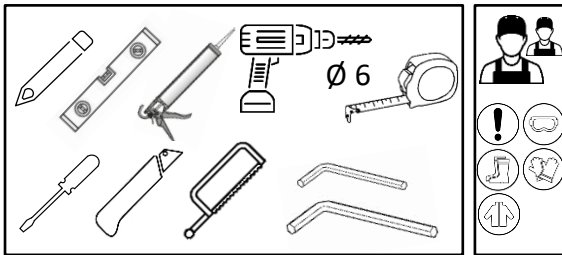
















# BIANCA



## Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions



|     |   |                                |   |
|-----|---|--------------------------------|---|
| 1.  |    | SR4                            | 2 |
| 2.  |    | SP1                            | 1 |
| 3.  |    | SD3R                           | 1 |
| 4.  |    | SD3L                           | 1 |
| 5.  |    | SR8                            | 2 |
| 6.  |   | SD3L                           | 2 |
| 7.  |  | SR2KIT                         | 1 |
| 8.L |  | SR2KIT-L                       | 1 |
| 8.R |  | SR2KIT-R                       | 1 |
| 9.  |  | P10                            | 1 |
| 10. |  | SR12                           | 1 |
| 11. |  | SR6                            | 1 |
| 12. |  | SD7                            | 2 |
| 13. |  | SR11                           | 1 |
| 14. |  | 3,5X35 SK1SET                  | 2 |
| 15. |  | 6 mm Safety Glass +<br>PROFILE | 1 |
| 16. |  | 6 mm Safety Glass              | 1 |

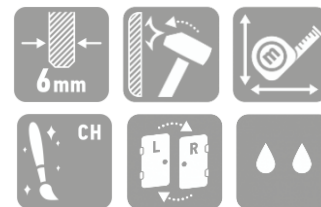
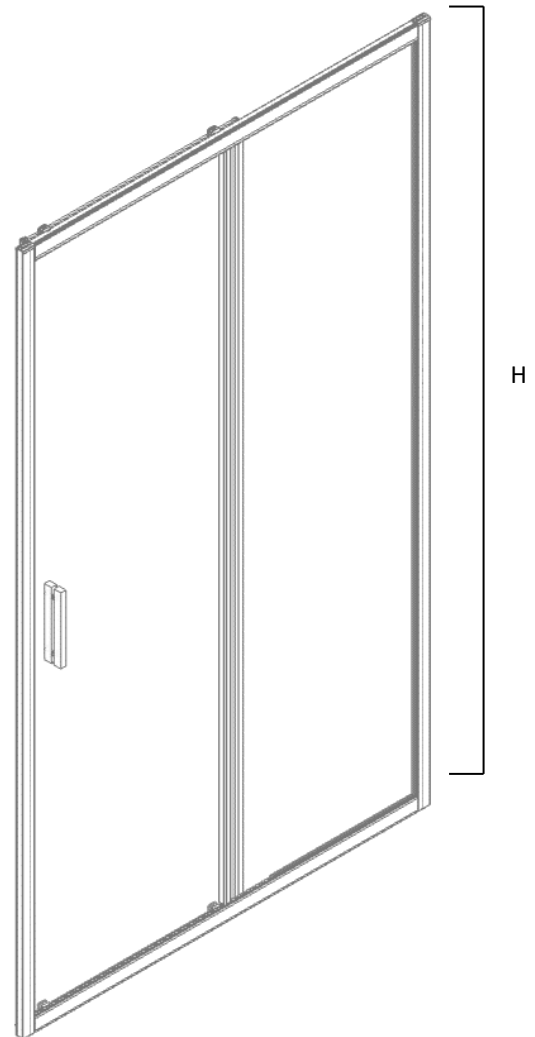


LEFT

RIGHT



| BIANCA  | A (mm)    | A1 (mm) | B (mm) | H (mm) |
|---------|-----------|---------|--------|--------|
| 100 BIA | 980-1000  | 470     | 520    | 2000   |
| 110BIA  | 1080-1100 | 520     | 570    | 2000   |
| 120BIA  | 1180-1200 | 570     | 620    | 2000   |

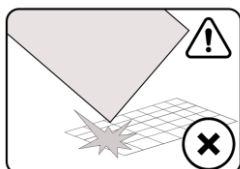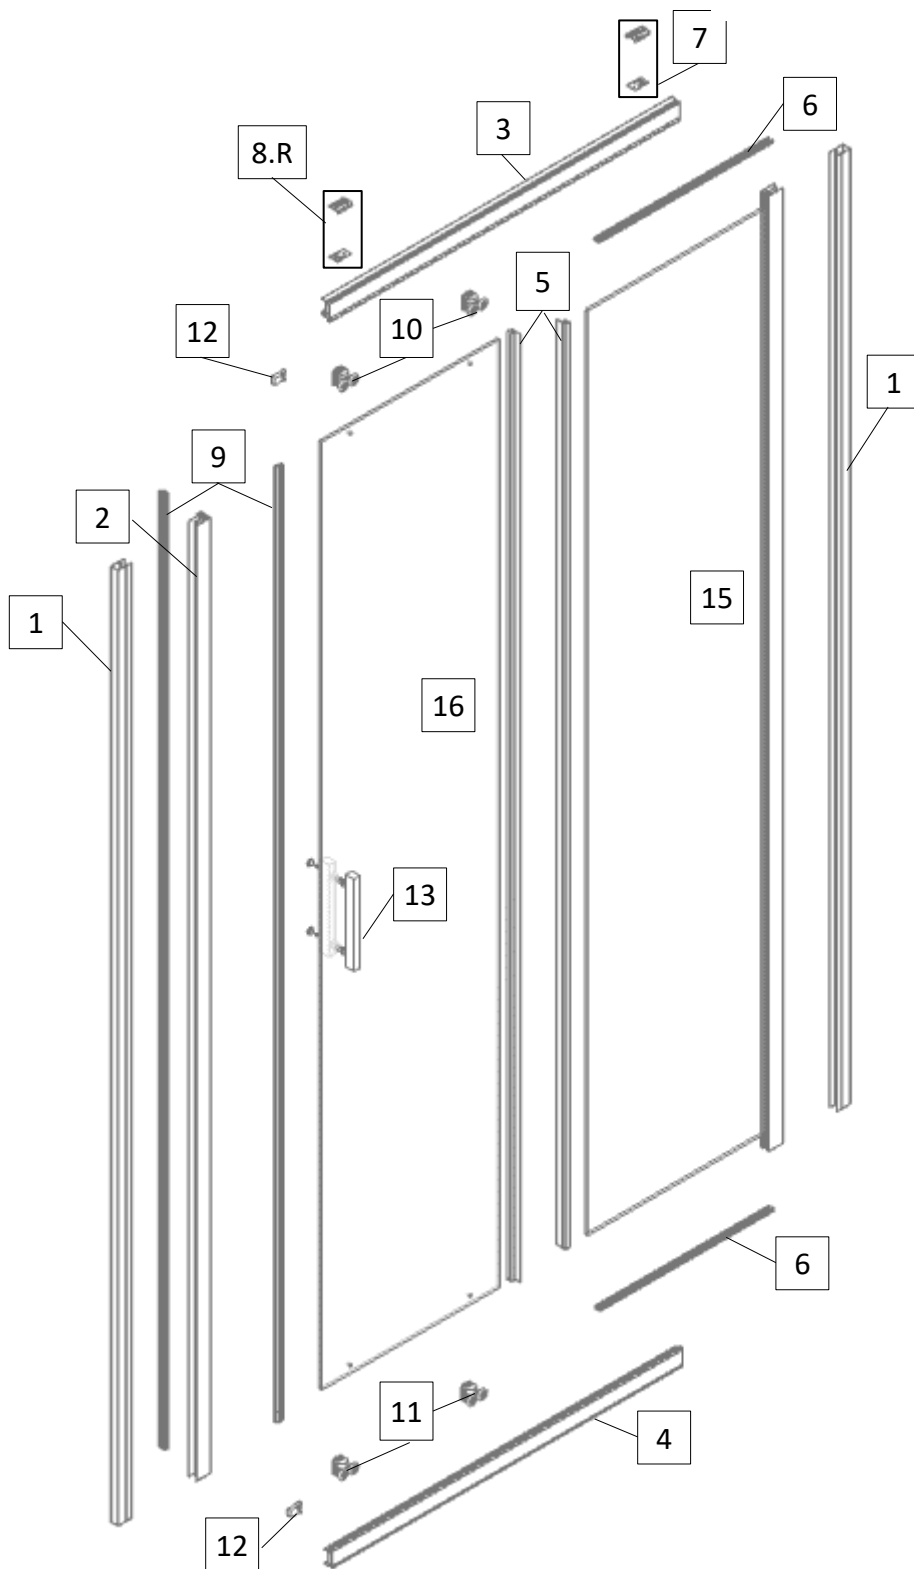

**Uzmanību!** Rūdīts stikls - rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

