


# CINQUE


## Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions

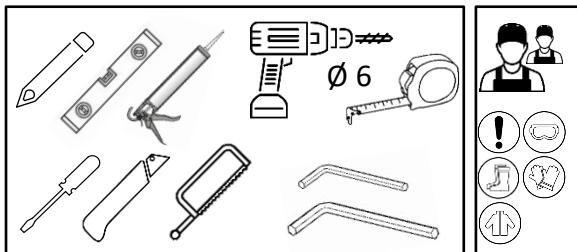

1.		DZT100CHR10X2 0 + SK2SET 1	1
2.		PAL-01	2
3.		PAL-01B	1
4.		PAL-01B-2	1
5.		PAL-01B-3	1
6.A		PGB-902	2
6.B		5213150	2
7.		BB 52 135 19	2
8.		3,5X35 SK1SET	2
9.		8mm Safety Glass	1
10.		8mm Safety Glass	1
11.		8mm Safety Glass	1

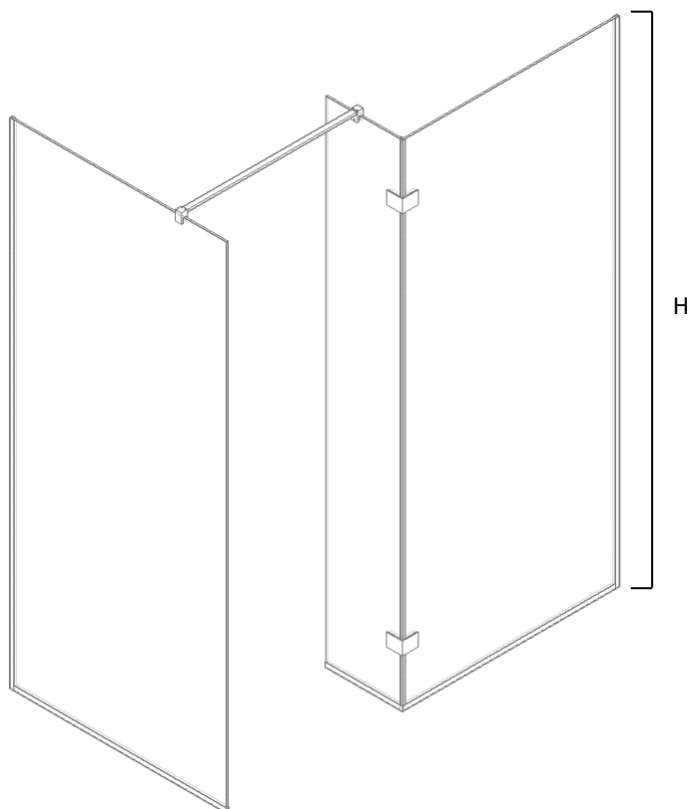

CINQUE	A (mm)	B (mm)	H (mm)
140_80CIN	1370-1400	768-773	1988
140_90CIN	1370-1400	868-873	1988
150_90CIN	1470-1500	868-873	1988
160_900CIN	1570-1600	868-873	1988
150_100CIN	1470-1500	968-973	1988
160_100CIN	1570-1600	968-973	1988





LEFT

RIGHT



# CINQUE

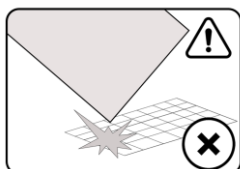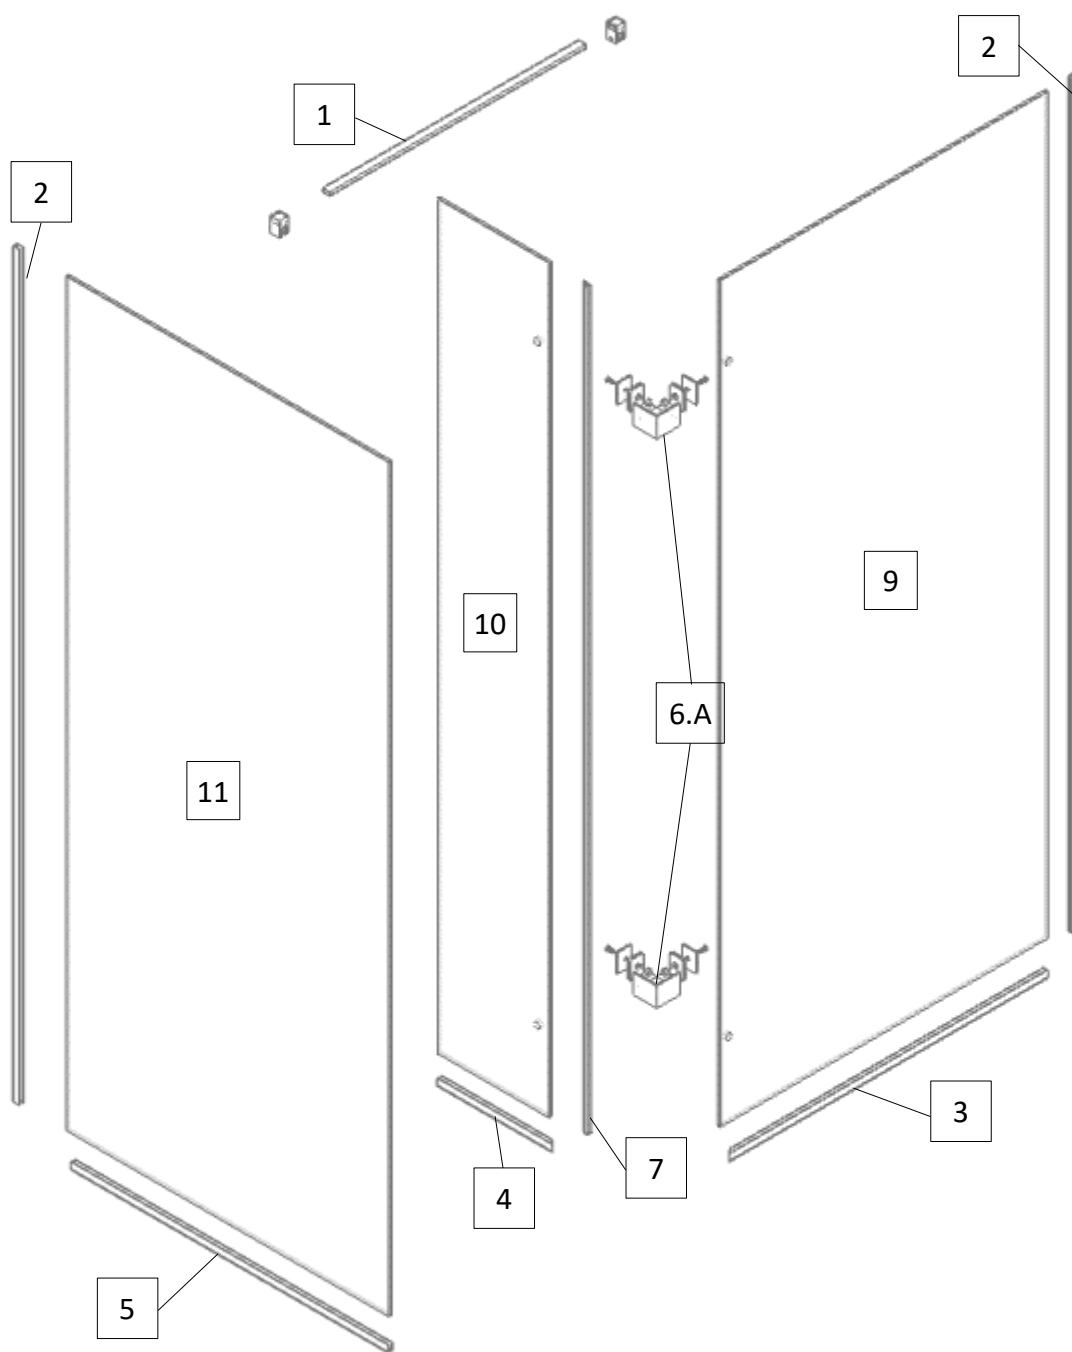

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

