


CONFORTO COR BLACK


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены


Shower wall installation instructions

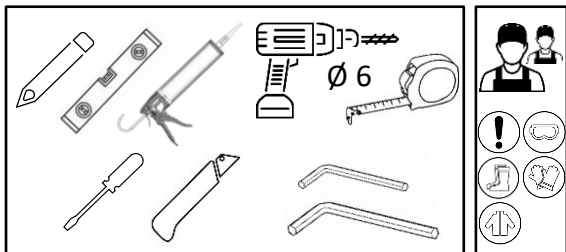

1.		SU45CH + SK2SET	1
2.		PAL-01	1
3.		PAL-01B	1
4.		3,5X35 SK1SET	1
5.		8 mm Safety Glass	1

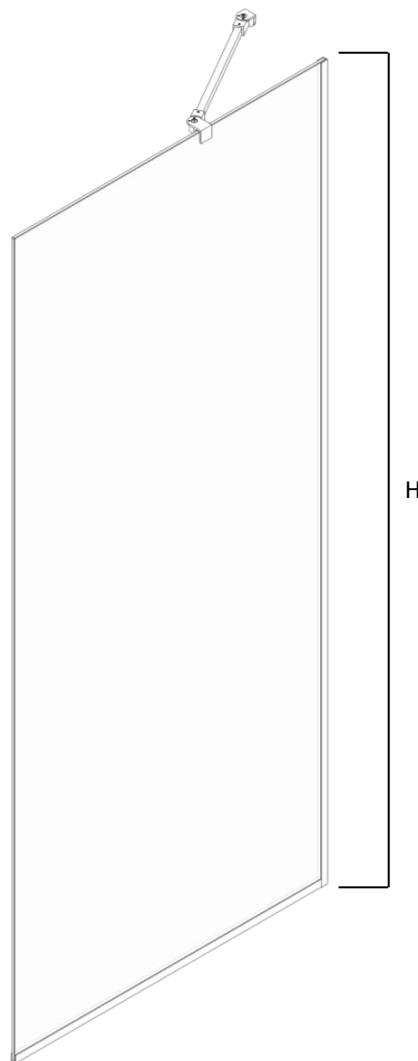

CONFORTO COR	A (mm)	H (mm)
60CON_C	568-573	1988
70CON_C	668-673	1988
80CON_C	768-773	1988
90CON_C	868-873	1988
100CON_C	968-973	1988
110CON_C	1068-1073	1988
120CON_C	1168-1173	1988

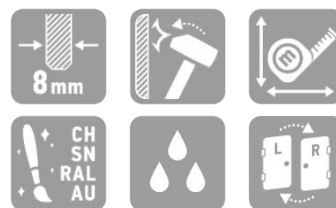


LEFT

RIGHT



CONFORTO COR BLACK

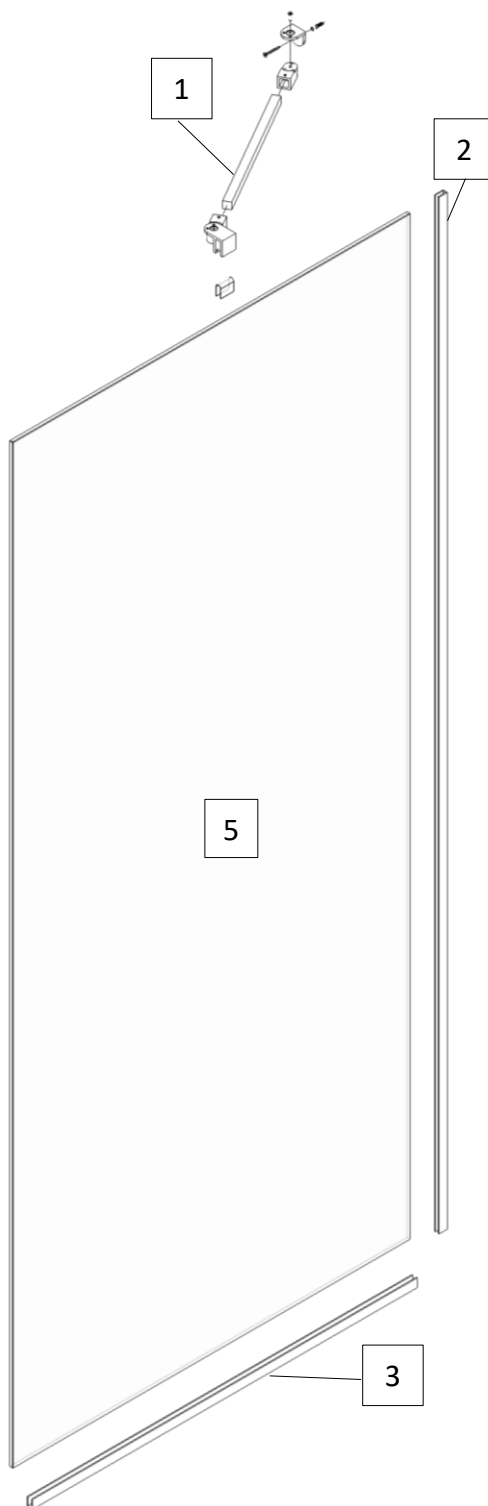

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

