



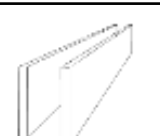
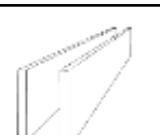


CONFORTO


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions

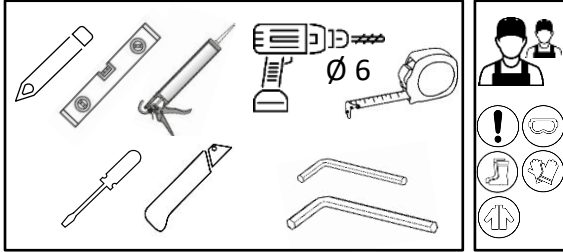

1.		DZT100CHRD19 + SK2SET	1
2.		PAL-01	1
3.		PAL-01B	1
4.		3,5X35 SK1SET	1
5.		8 mm Safety Glass	1

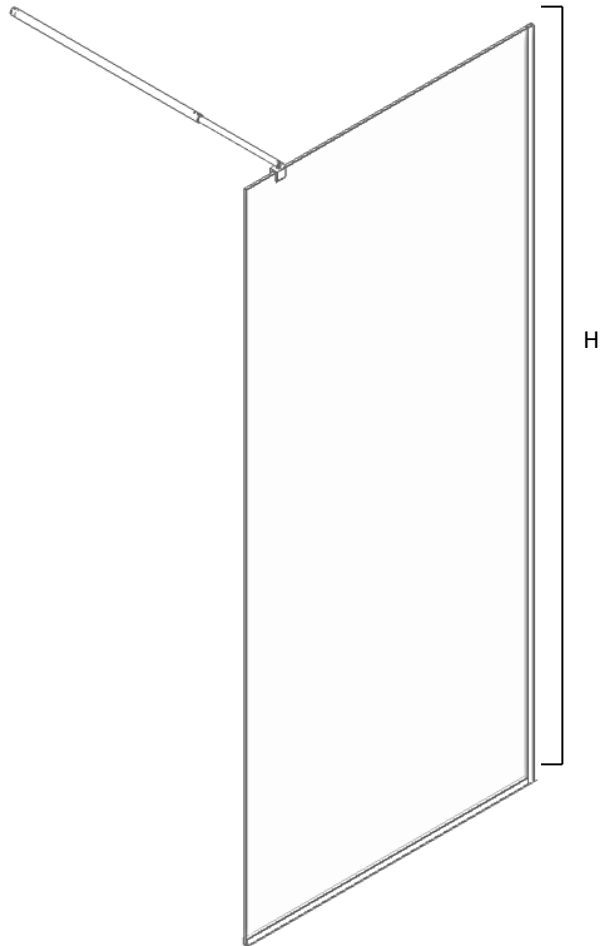




CONFORTO	A (mm)	H (mm)
60CON	568-573	1988
70CON	668-673	1988
80CON	768-773	1988
90CON	868-873	1988
100CON	968-973	1988
110CON	1068-1073	1988
120CON	1168-1173	1988



LEFT

RIGHT

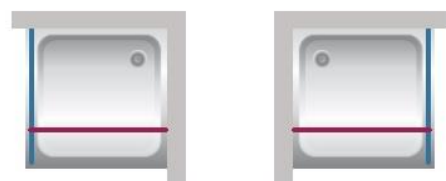

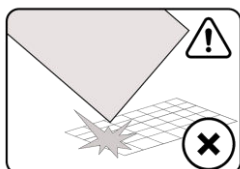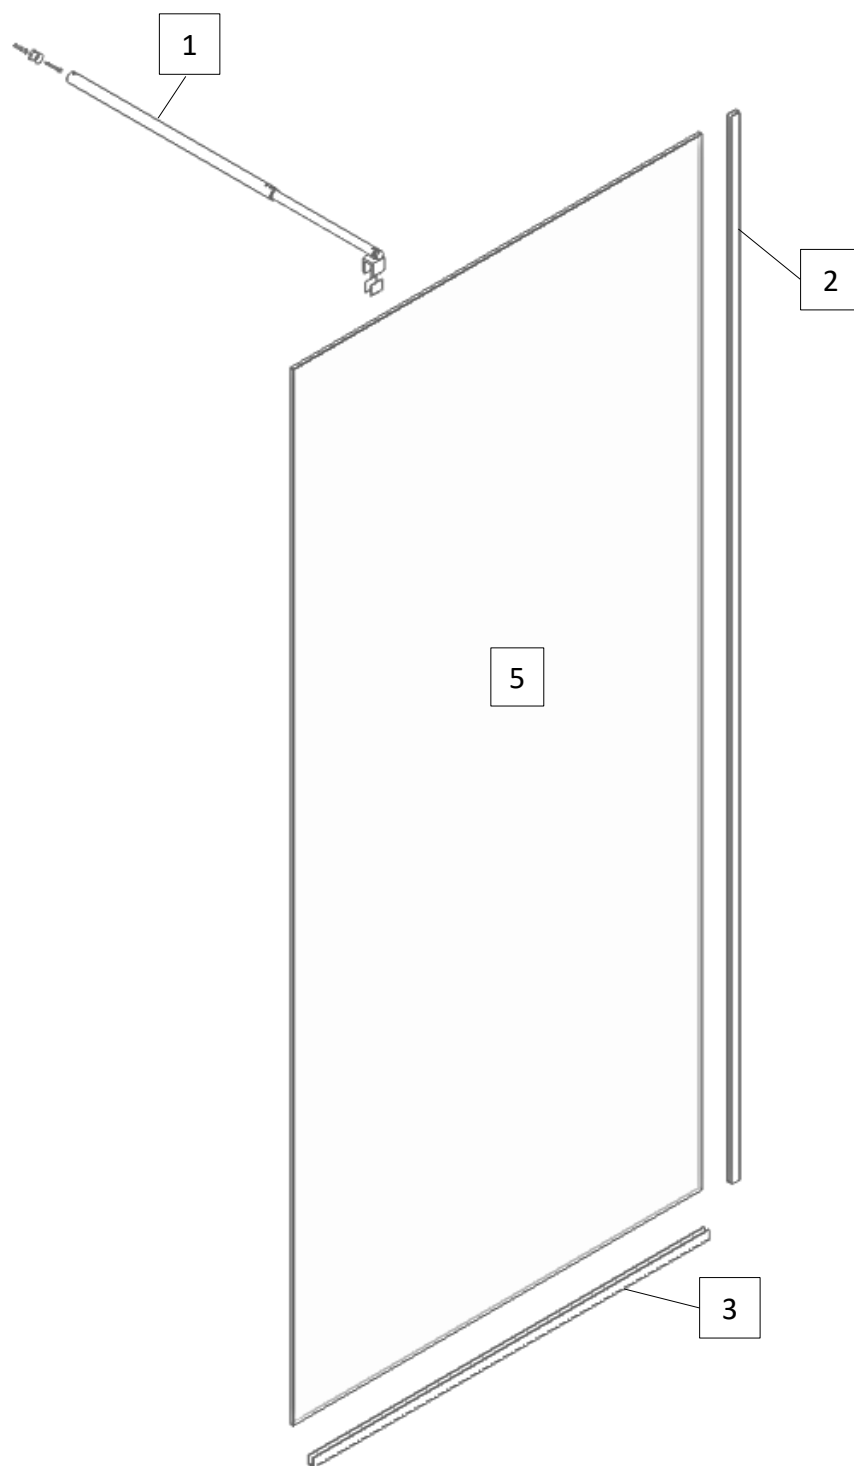

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

