


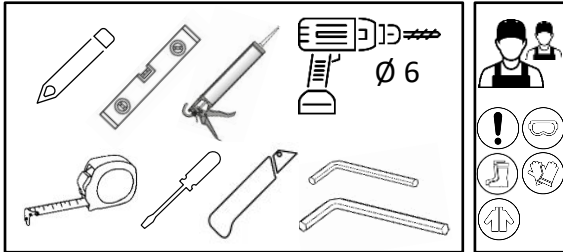




DANIELA


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions




1.		VIRA20CH	1
2.		R1656715	1
3.		DR-CH32	1
4.		3,5x35 SK1SET Ø 6	1
5.		6 mm Safety Glass	1


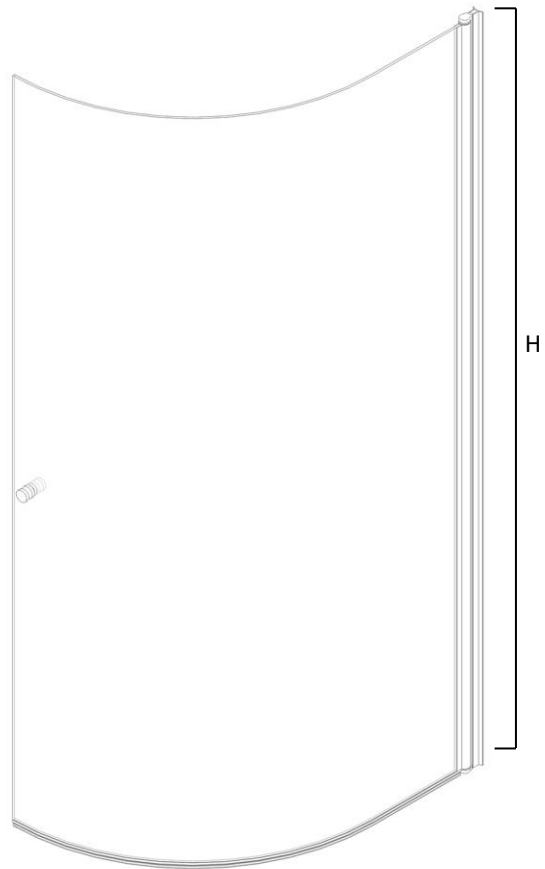


LEFT

RIGHT

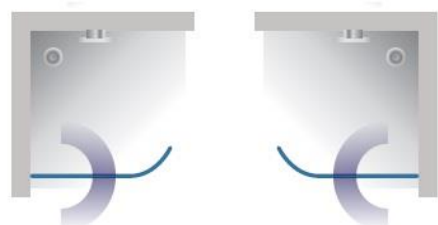









DANIELA	A (mm)	H (mm)
75DAN	755 - 765	1988





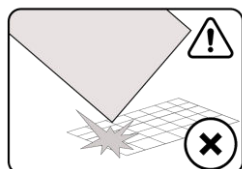
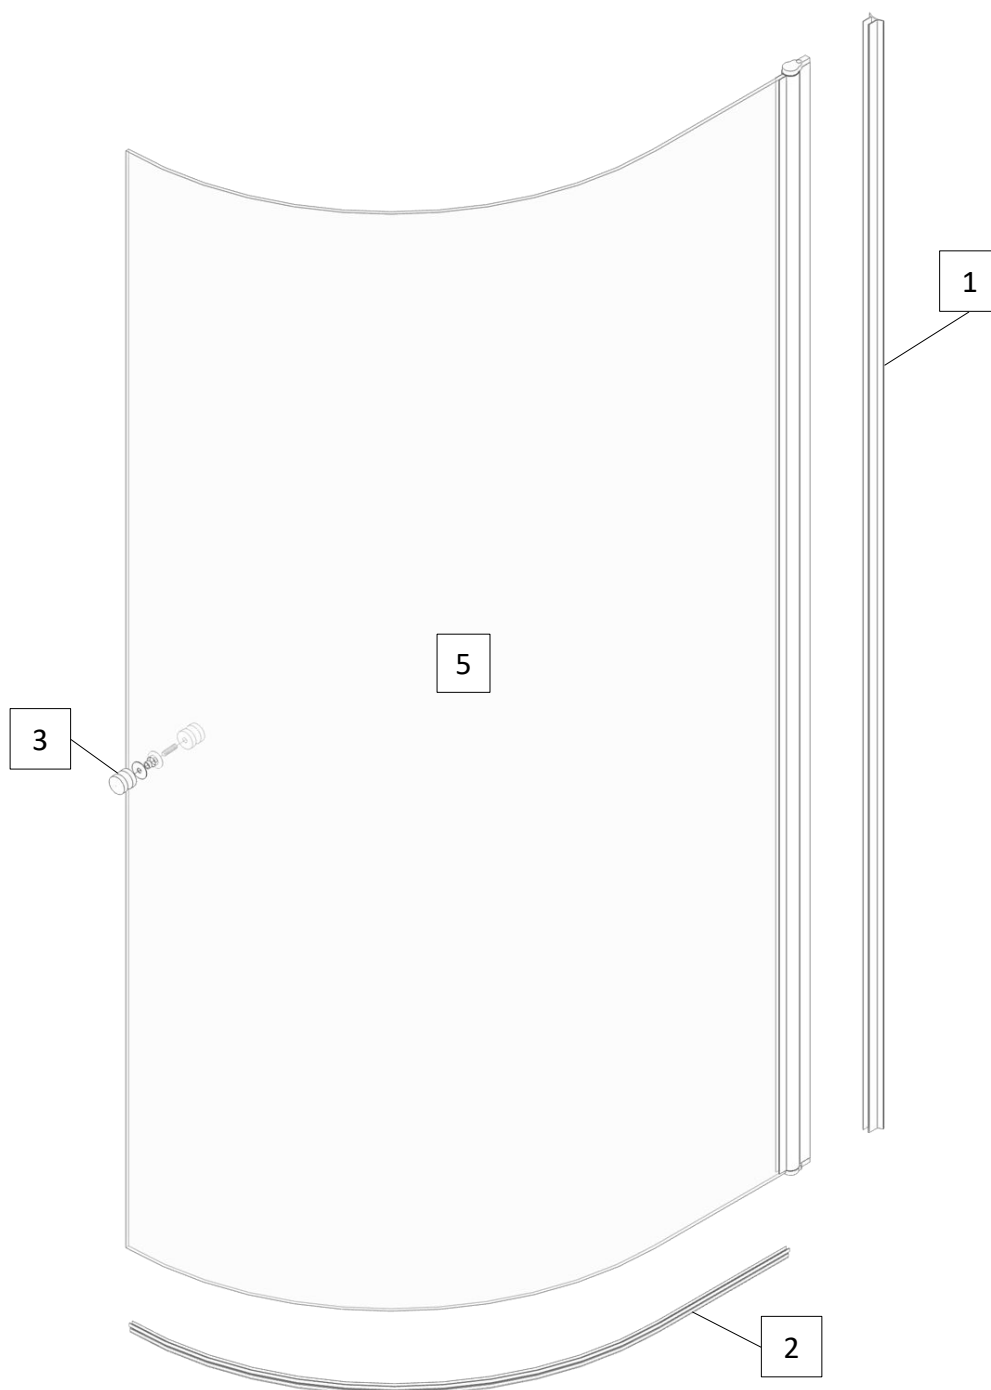








Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

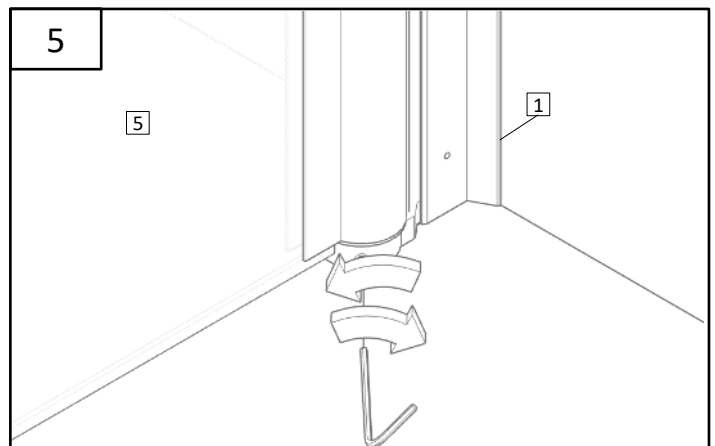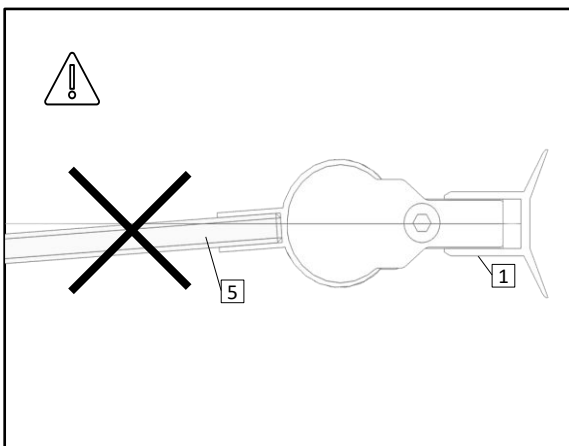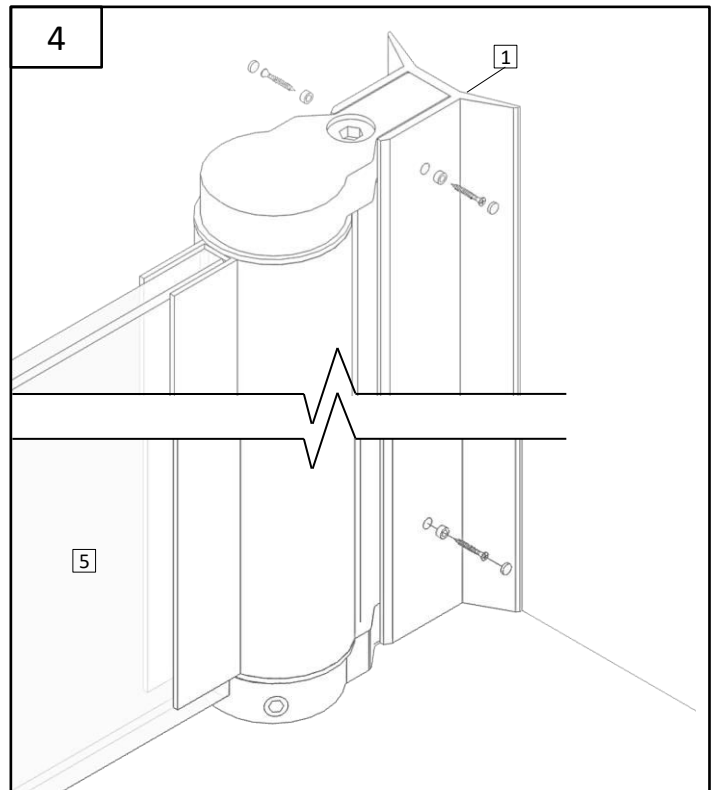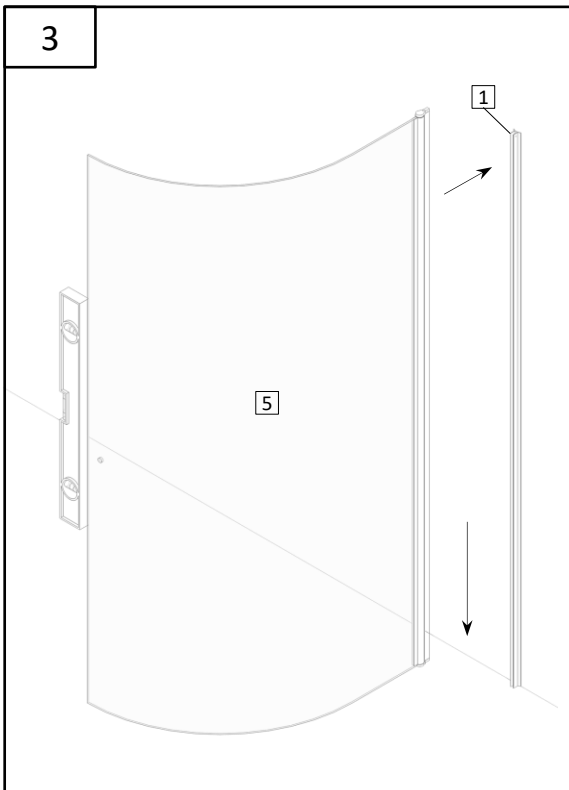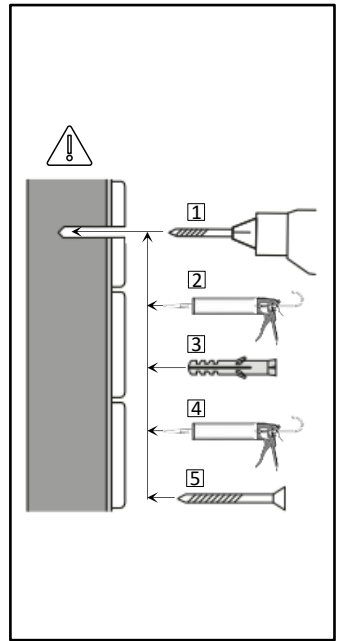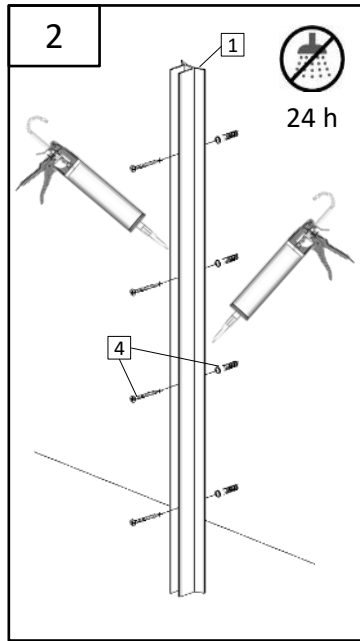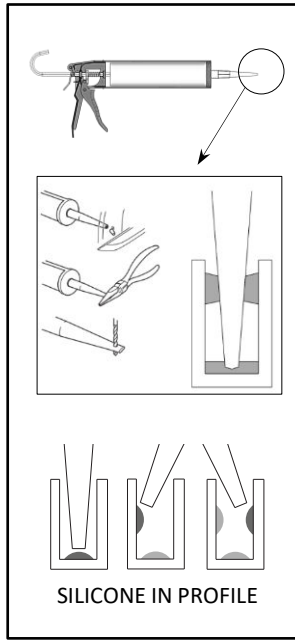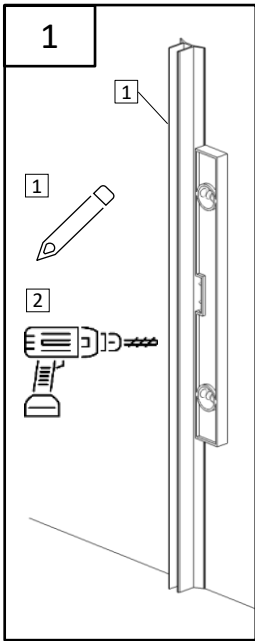

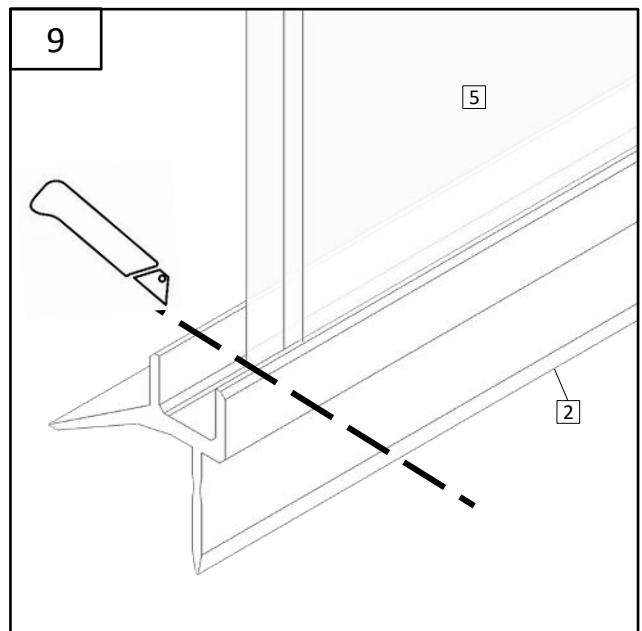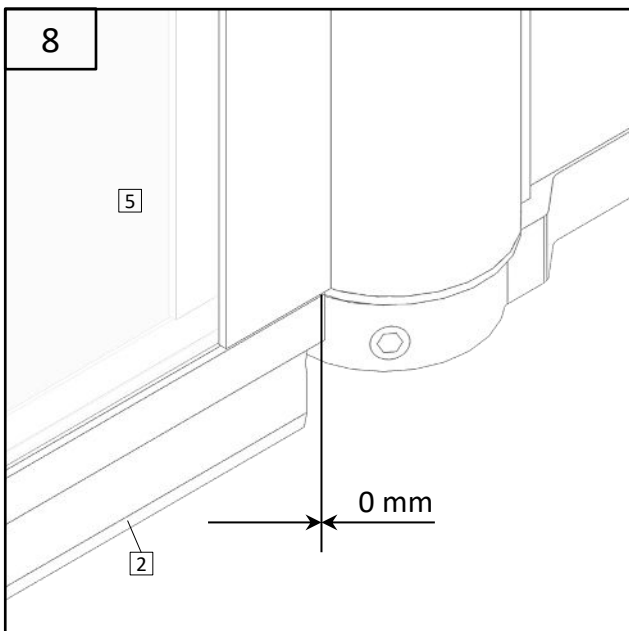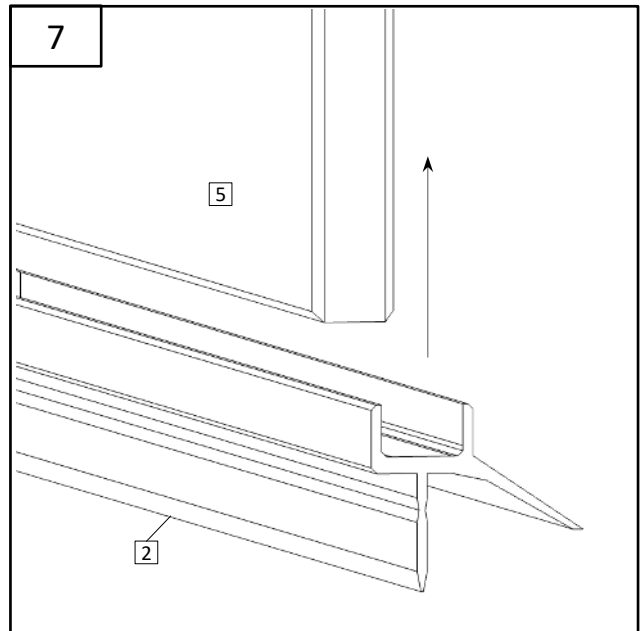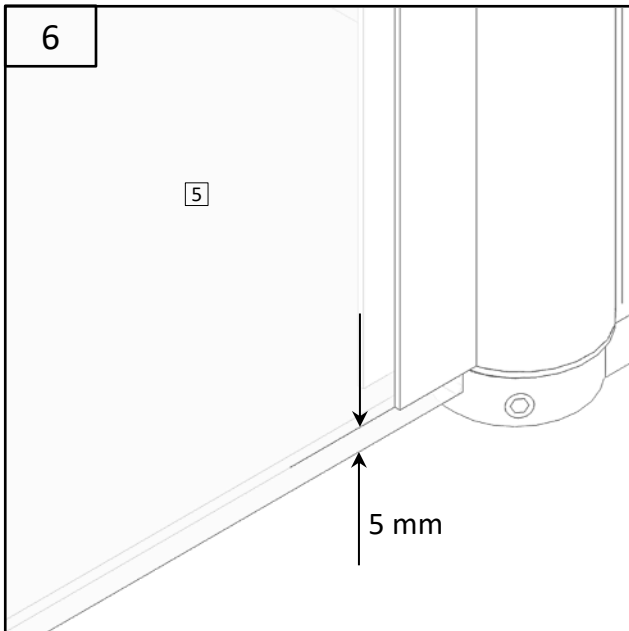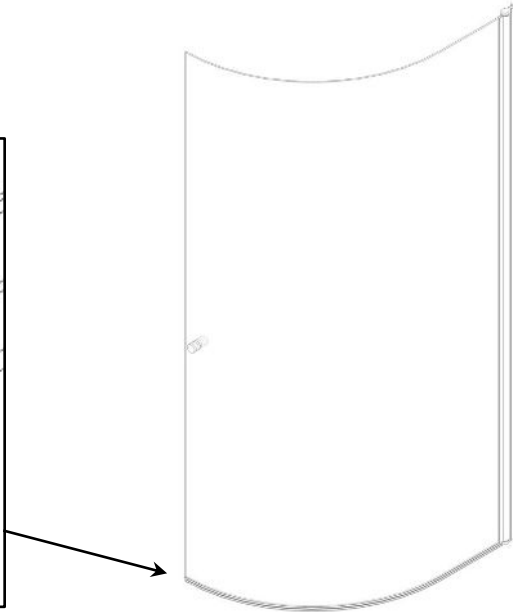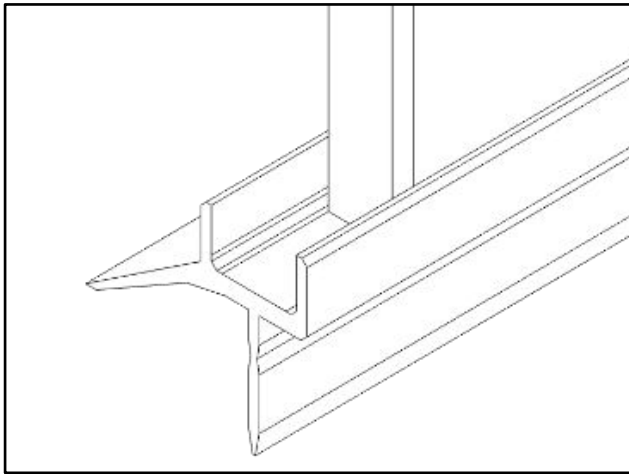

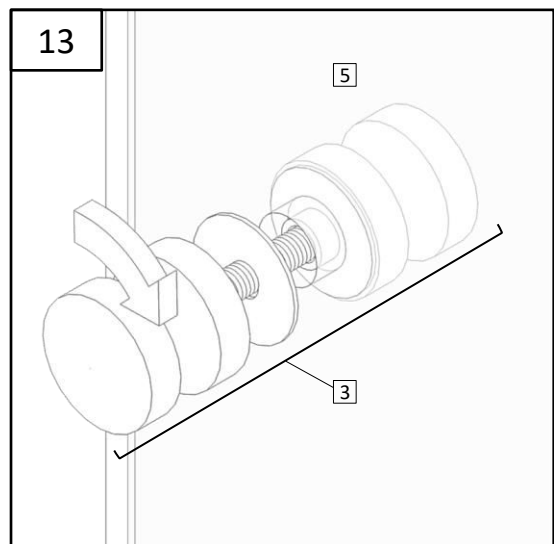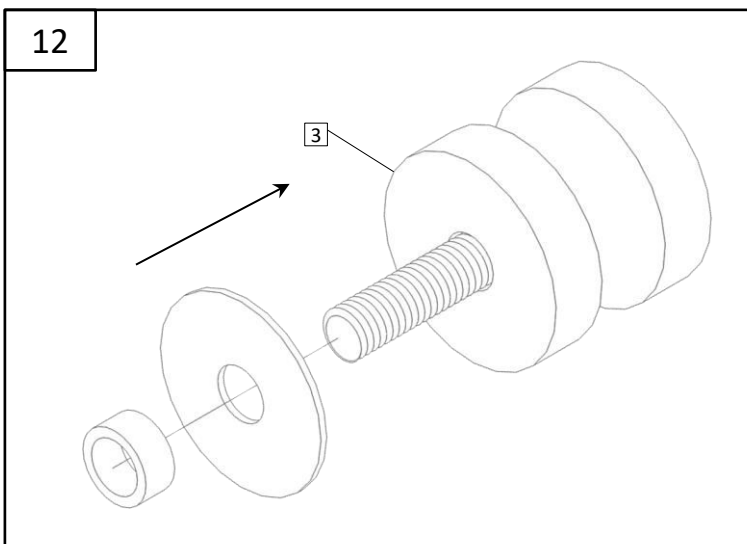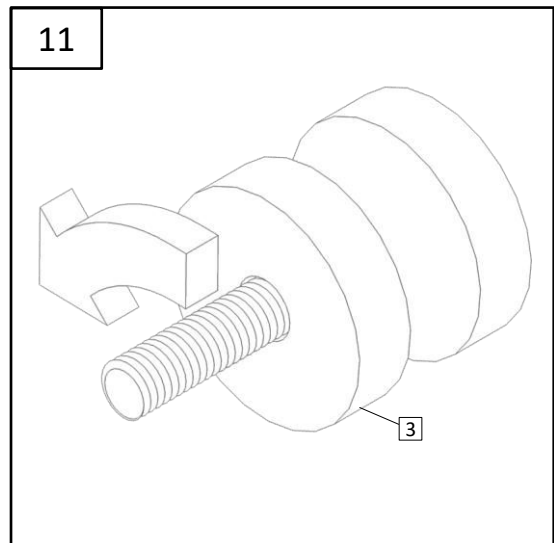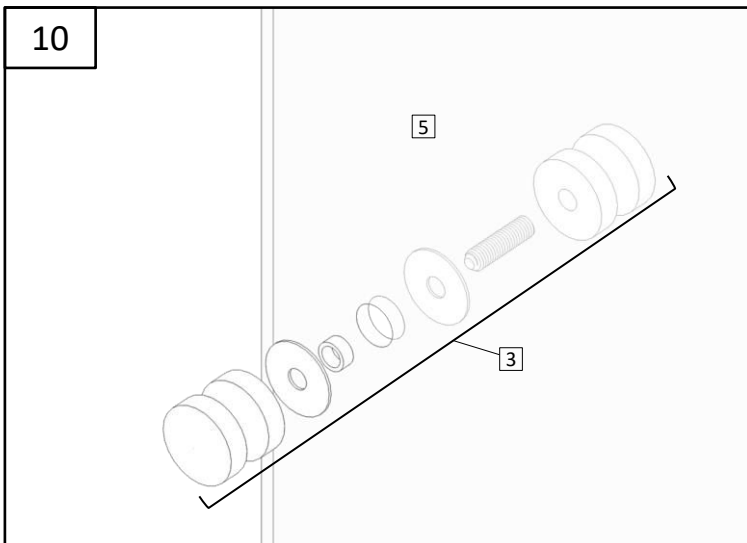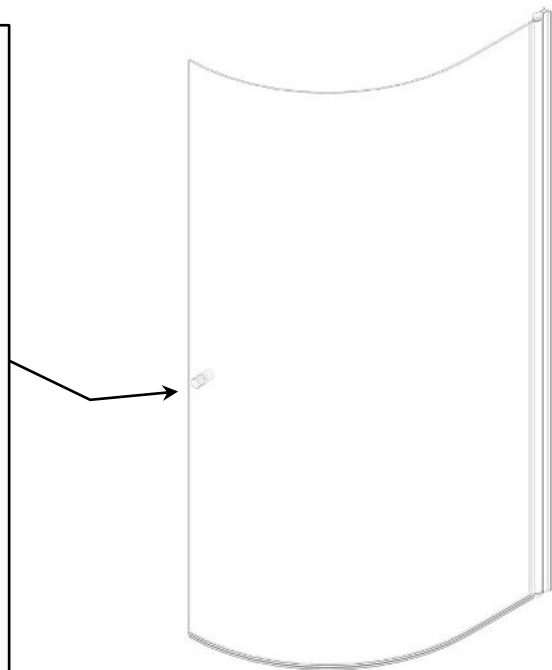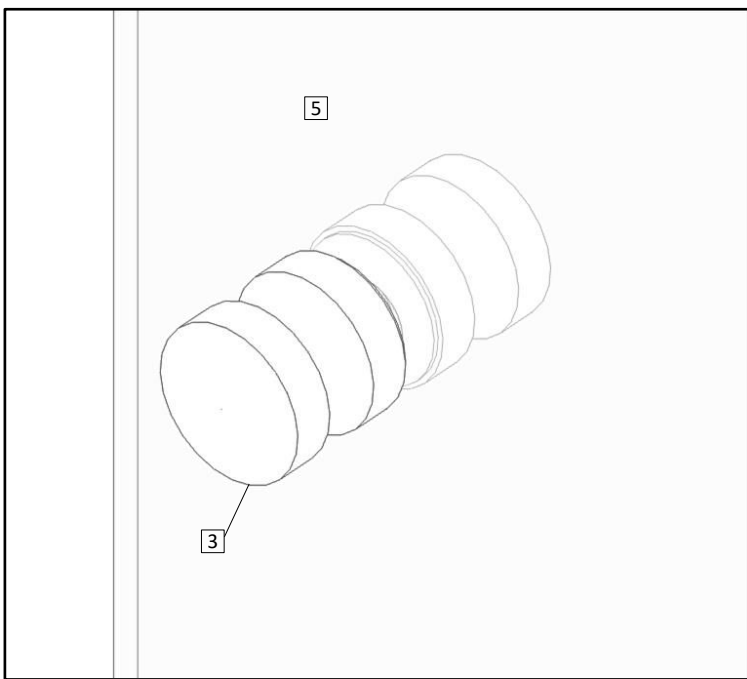

14



24 h

