





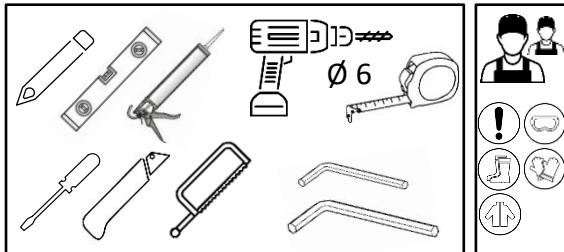



DUE FIX


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions



1.		PAL-01	1
2.		PAL-01B	1
3.		PAL-01B_1	1
4.		DZT100CHR10X 20 + SK2SET 1	1
5.		2919-8-2SERE	1
6.		3,5x35 SK1SET Ø 6	1
7.		8mm Safety Glass	1
8.		8mm Safety Glass	1

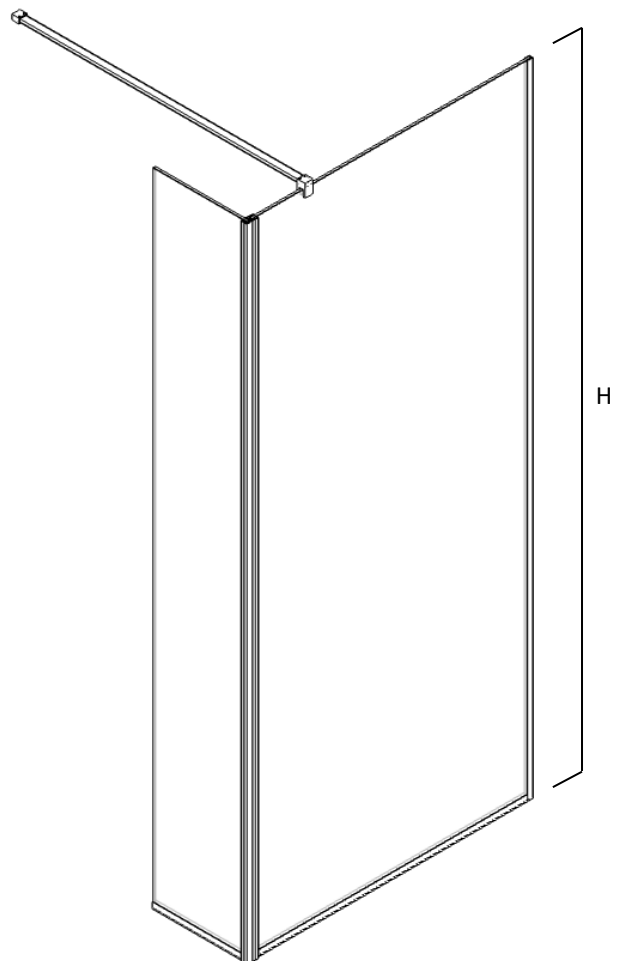


DUE FIX	A (mm)	H (mm)
80DUE_F	788-793	1988
90DUE_F	888-893	1988
100DUE_F	988-993	1988
110DUE_F	1088-1093	1988
120DUE_F	1188-1193	1988
140DUE_F	1388-1393	1988
160DUE_F	1588-1593	1988




LEFT

RIGHT

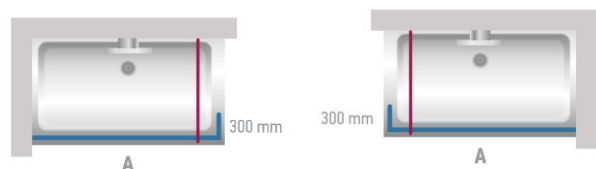

DUE FIX

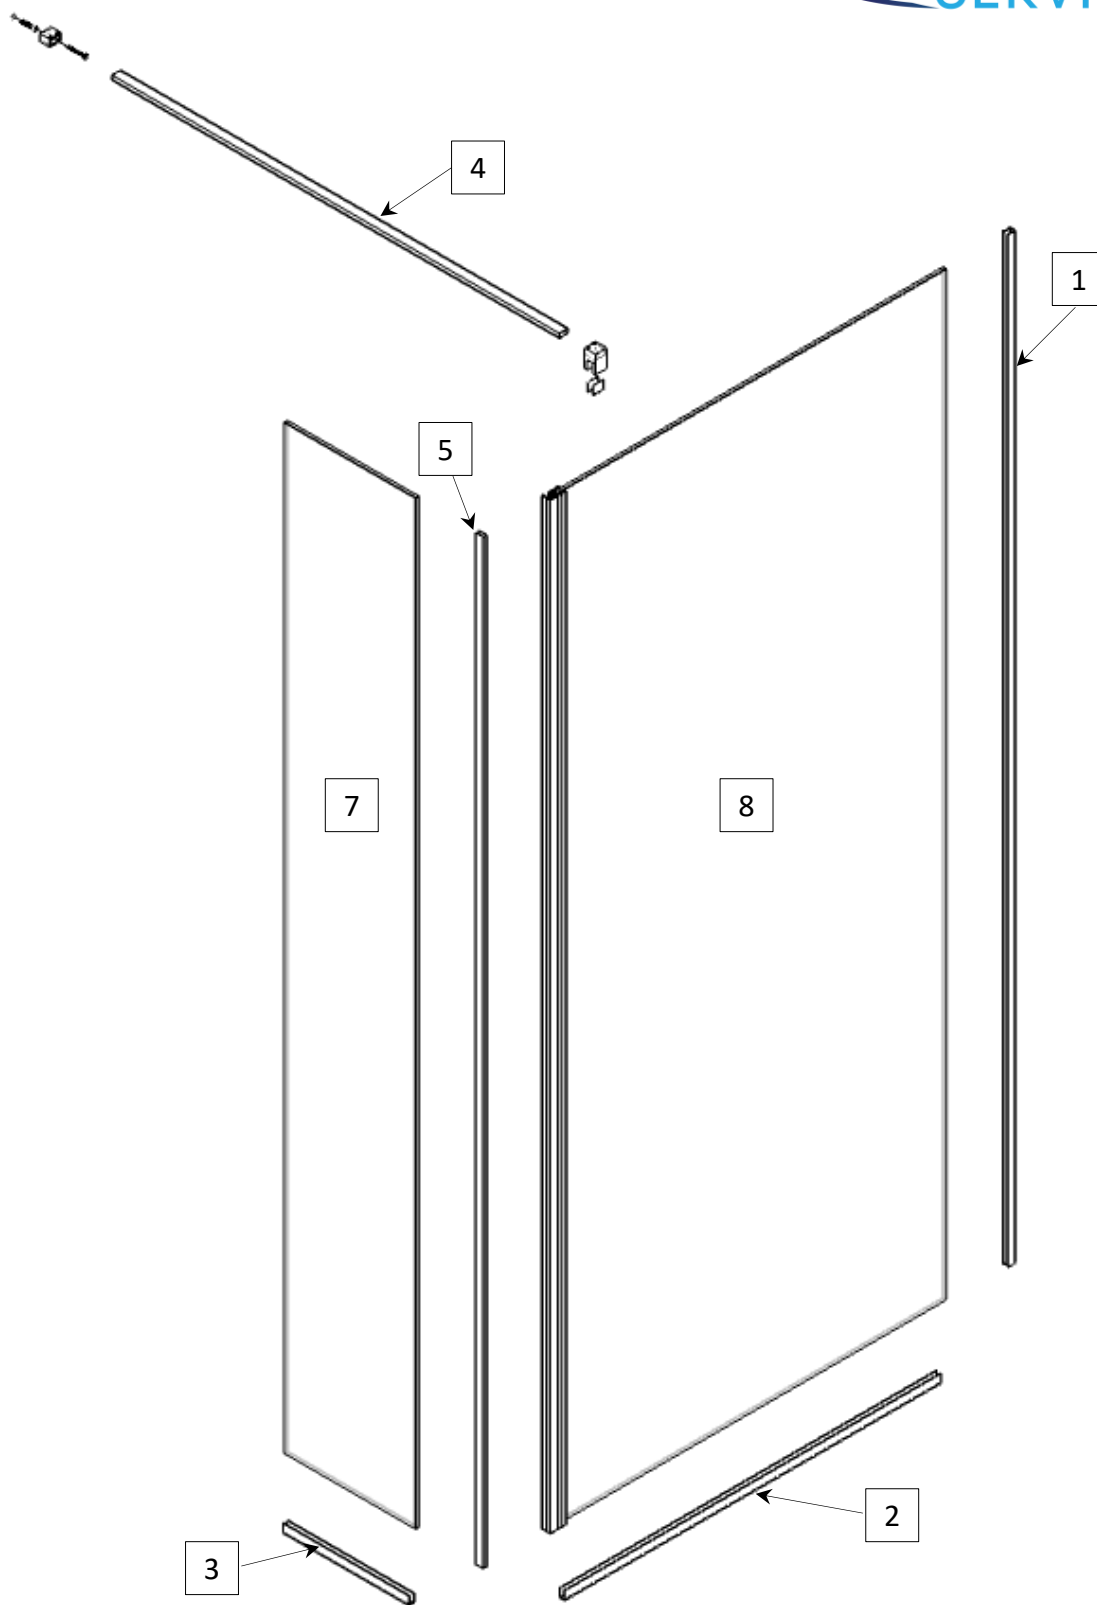





Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.





1.A








DUE FIX	A+B1
80DUE_F	793
90DUE_F	893
100DUE_F	993
110DUE_F	1093
120DUE_F	1193
140DUE_F	1393
160DUE_F	1593




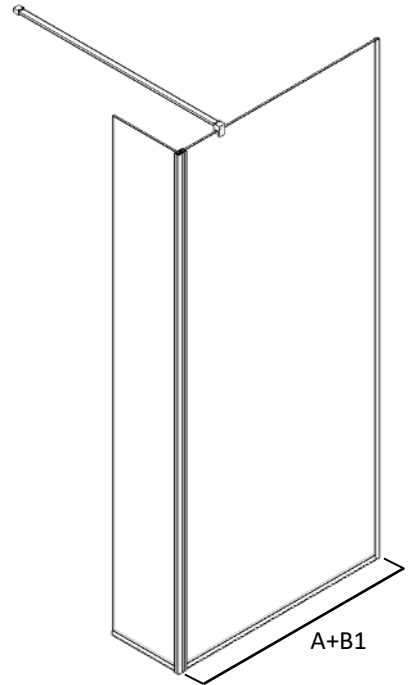
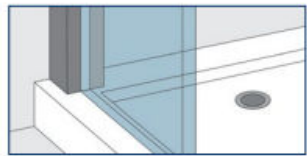
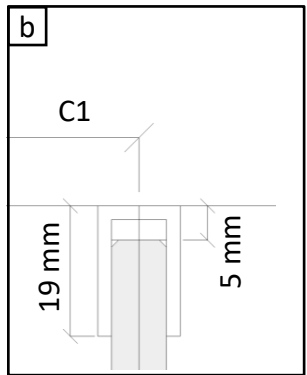
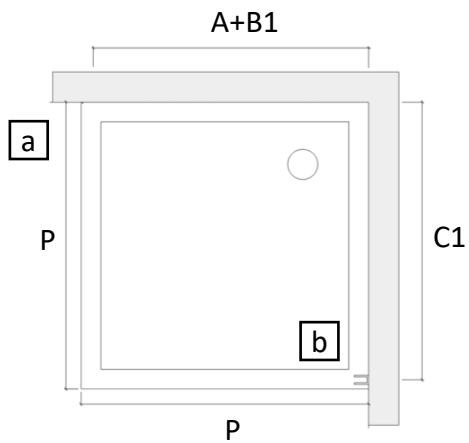







1.B

DUE FIX	D
80DUE_F	800
90DUE_F	900
100DUE_F	1000
110DUE_F	1100
120DUE_F	1200
140DUE_F	1400
160DUE_F	1600

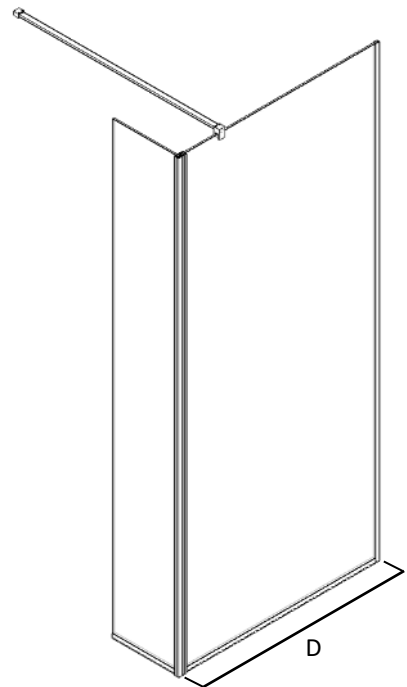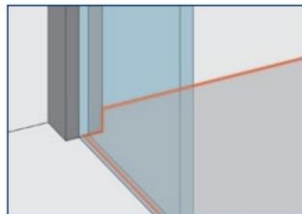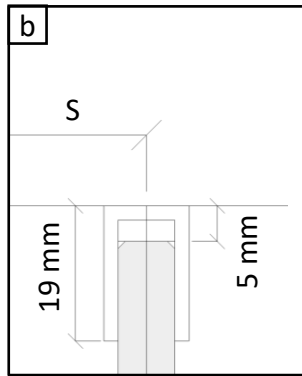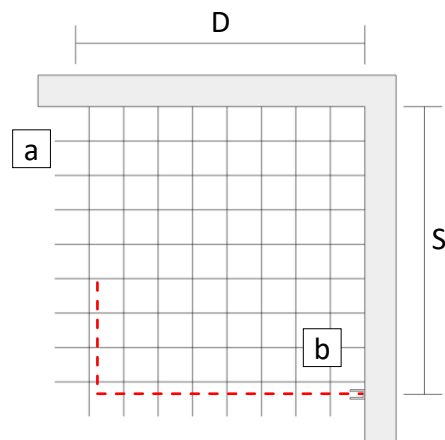

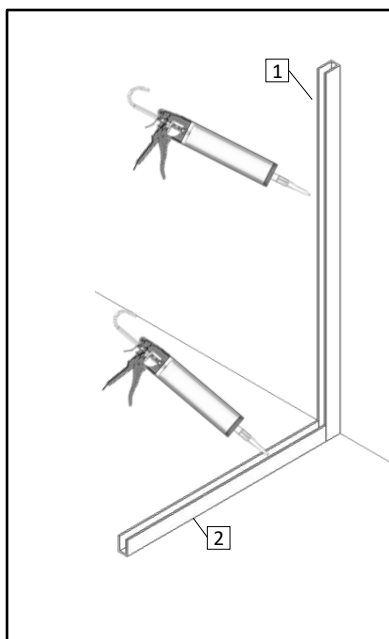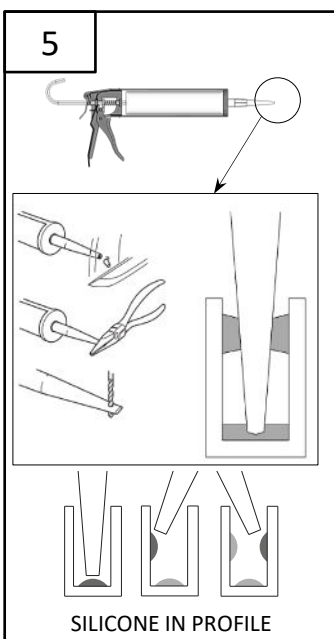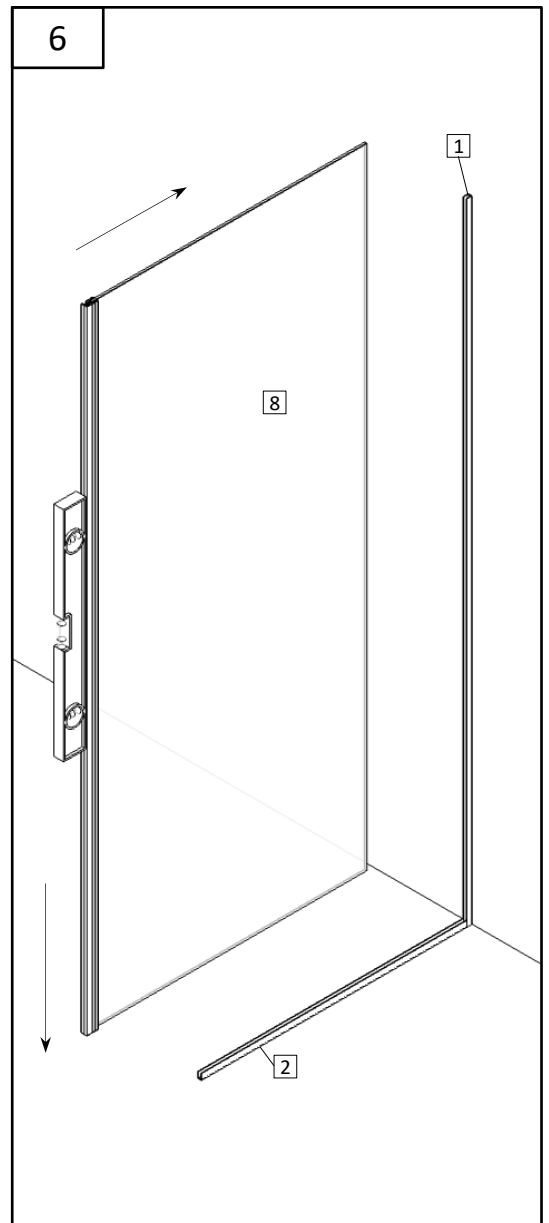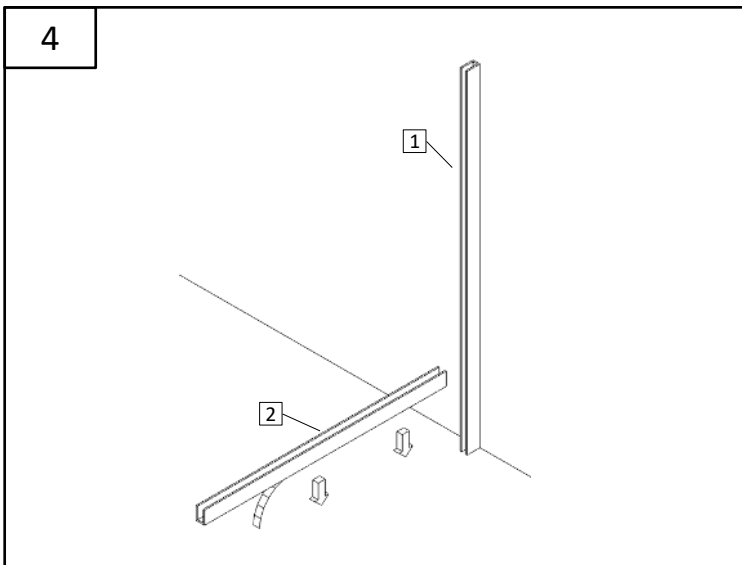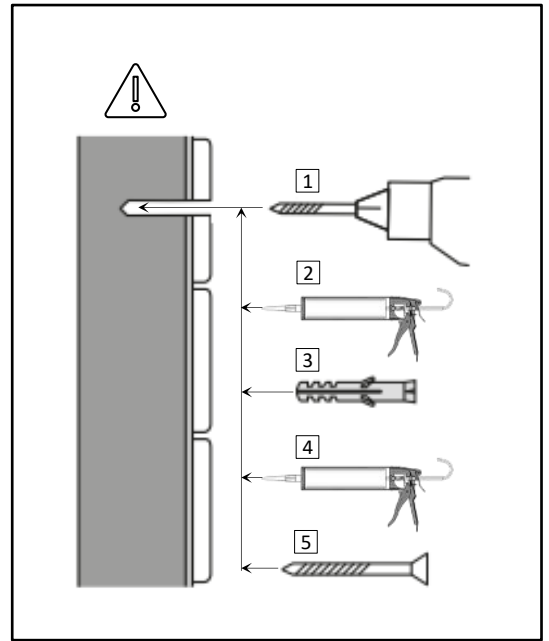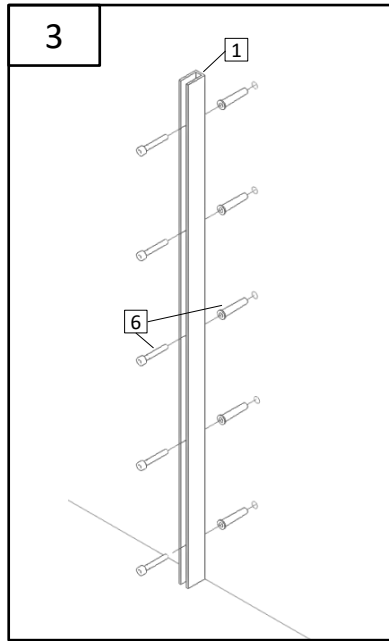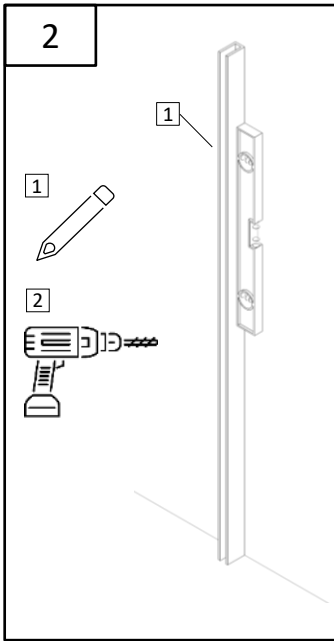

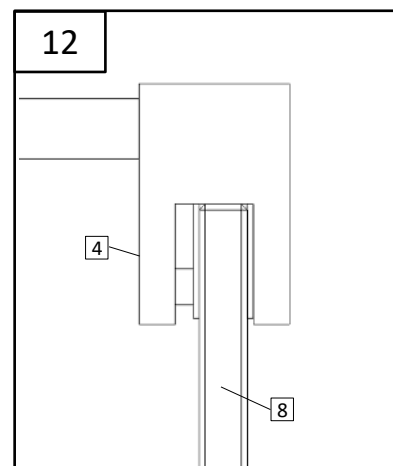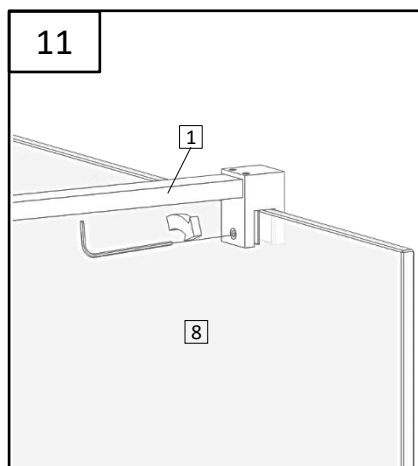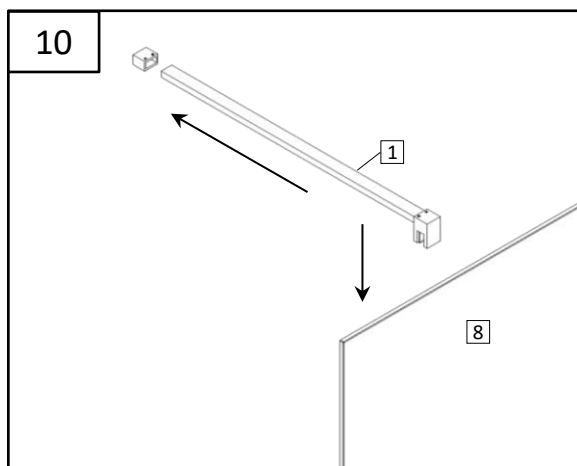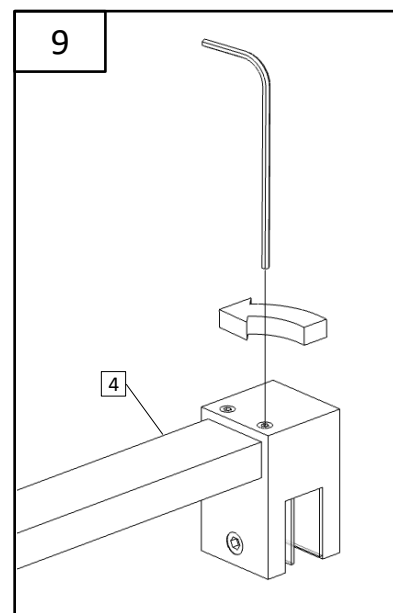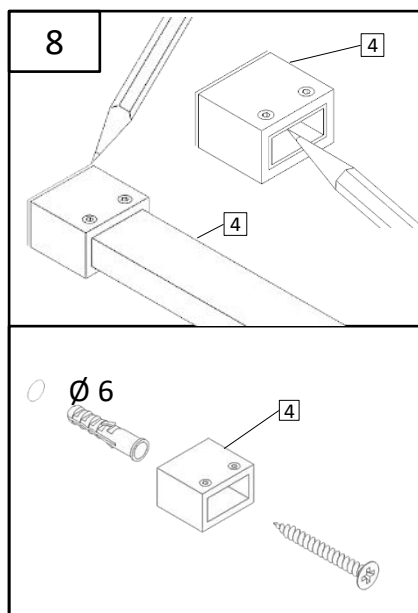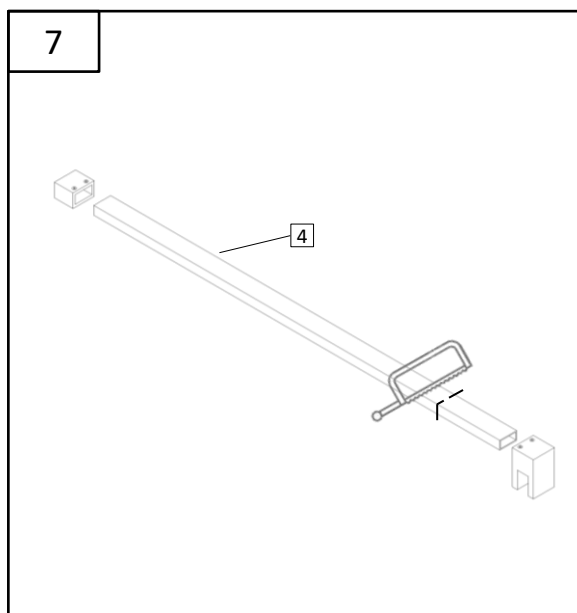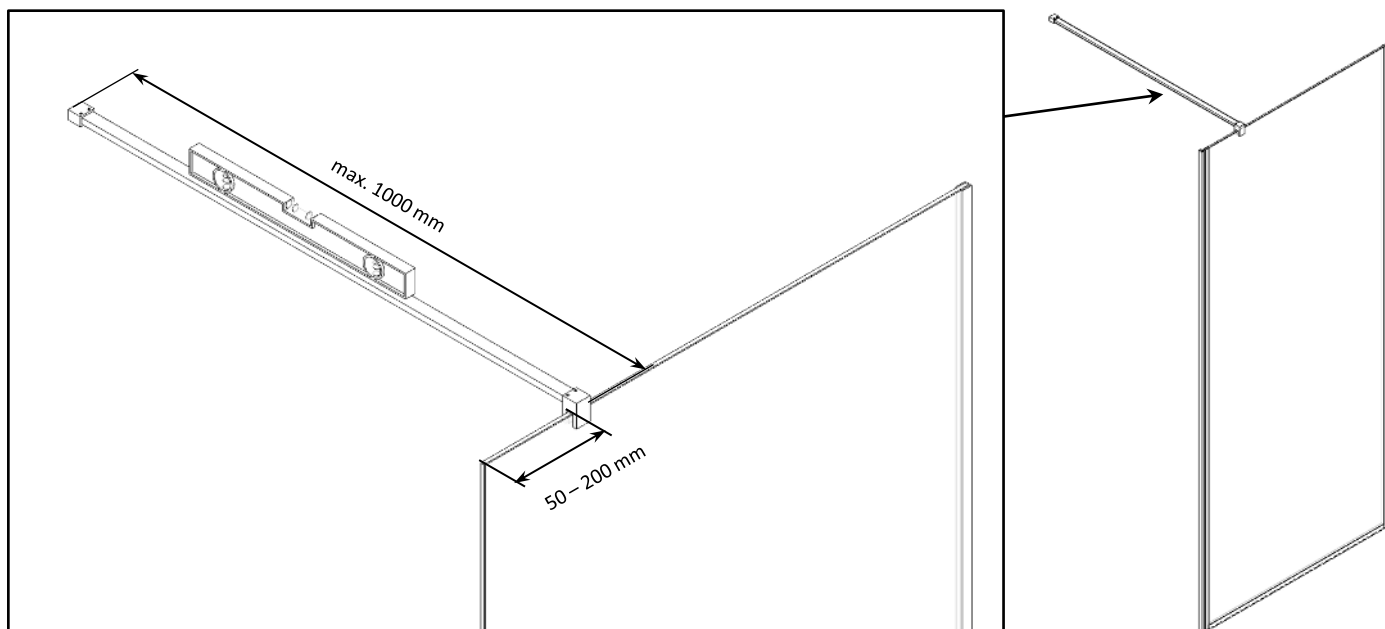

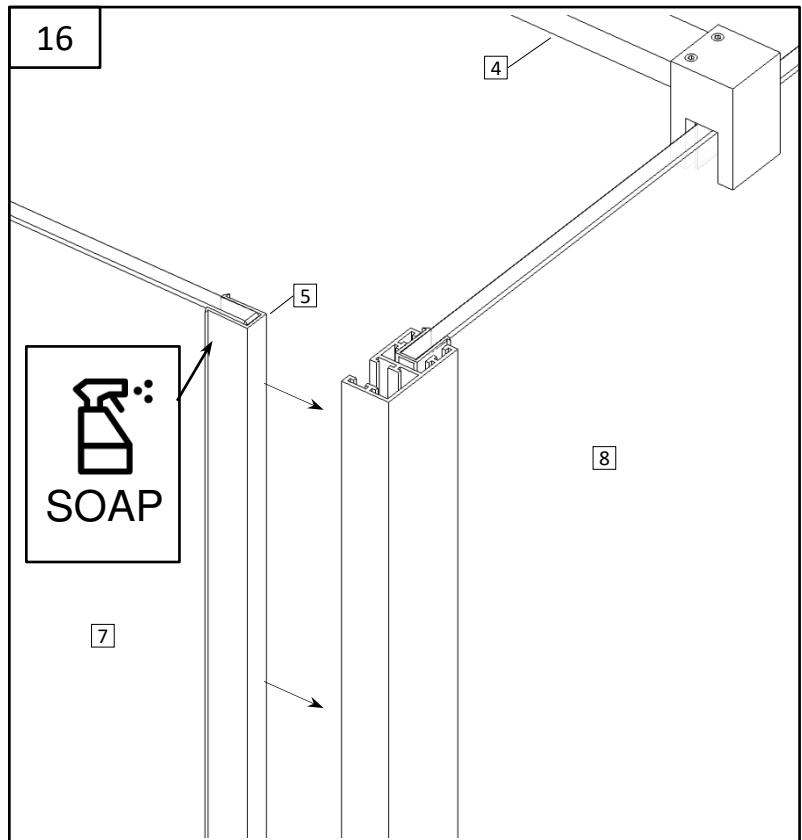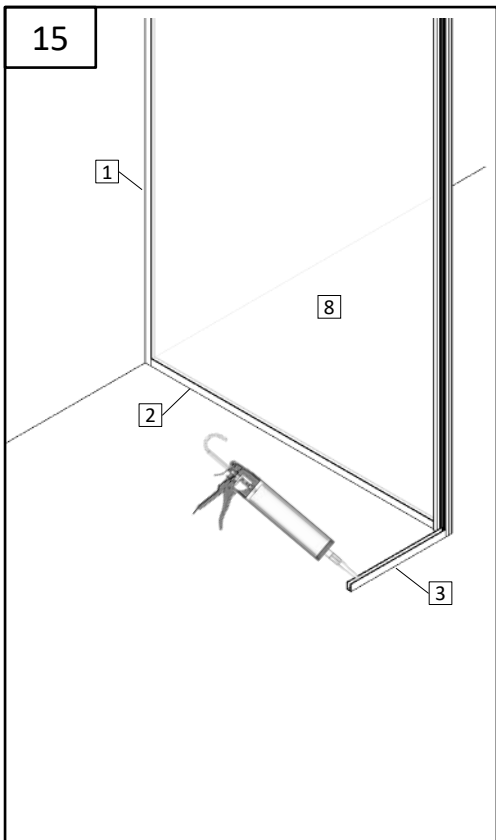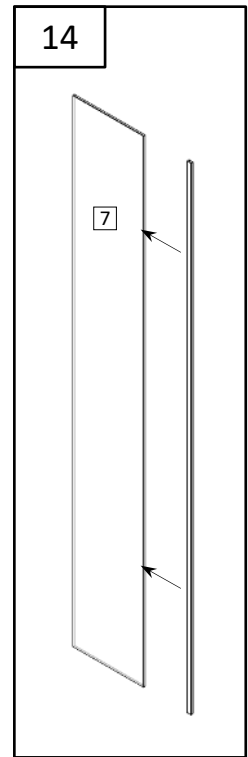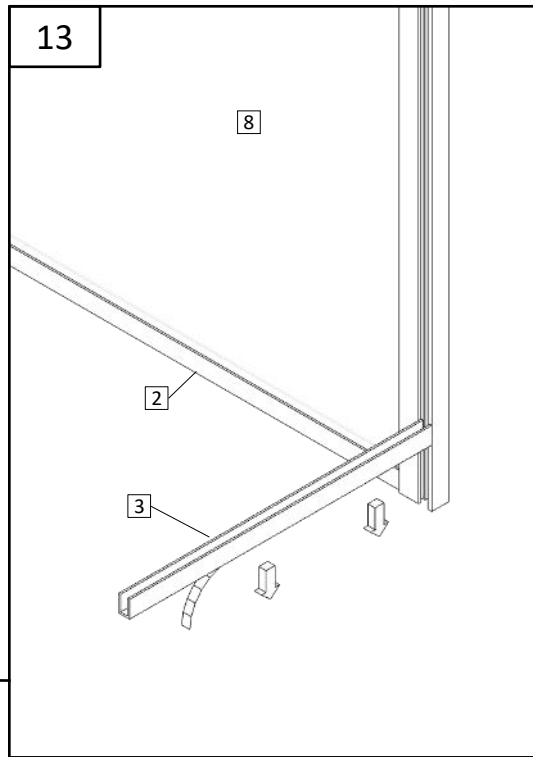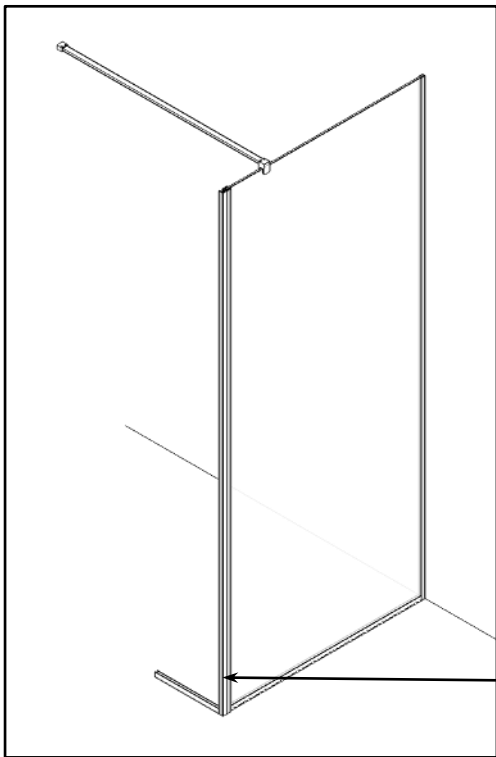

13



24 h

