






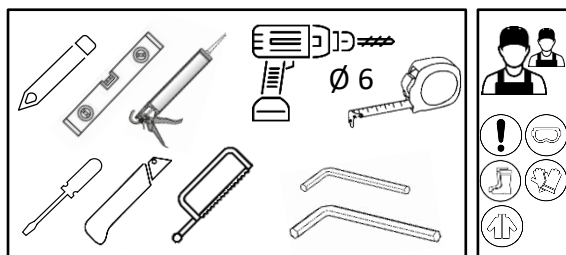





DUE


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions



1.		DZT100CHR10X20 + SK2SET 1	1
2.		PAL-01	1
3.		PAL-01B	1
4.		PAL-01B-2	1
5.A		PGB-902	2
5.B		5213150	2
6.		BB 52 135 19	1
7.		3,5X35 SK1SET	1
8.		8 mm Safety Glass	1
9.		8 mm Safety Glass	1

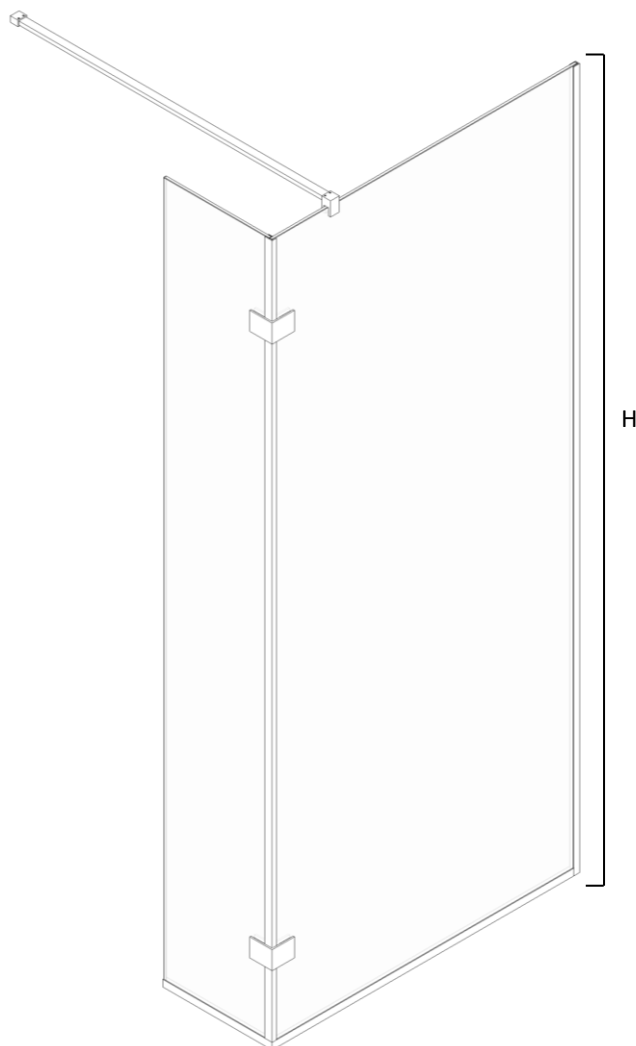




DUE	A (mm)	H (mm)
80DUE	768-773	1988
90DUE	868-874	1988
100DUE	968-975	1988
110DUE	1068-1073	1988
120DUE	1168-1173	1988
140DUE	1368-1373	1988
160DUE	1568-1573	1988



LEFT

RIGHT

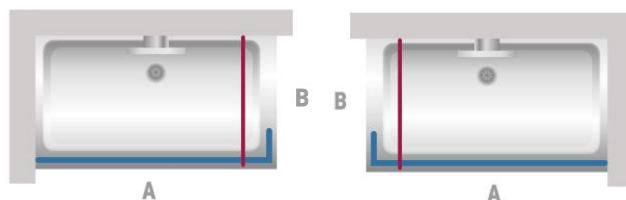

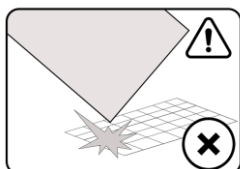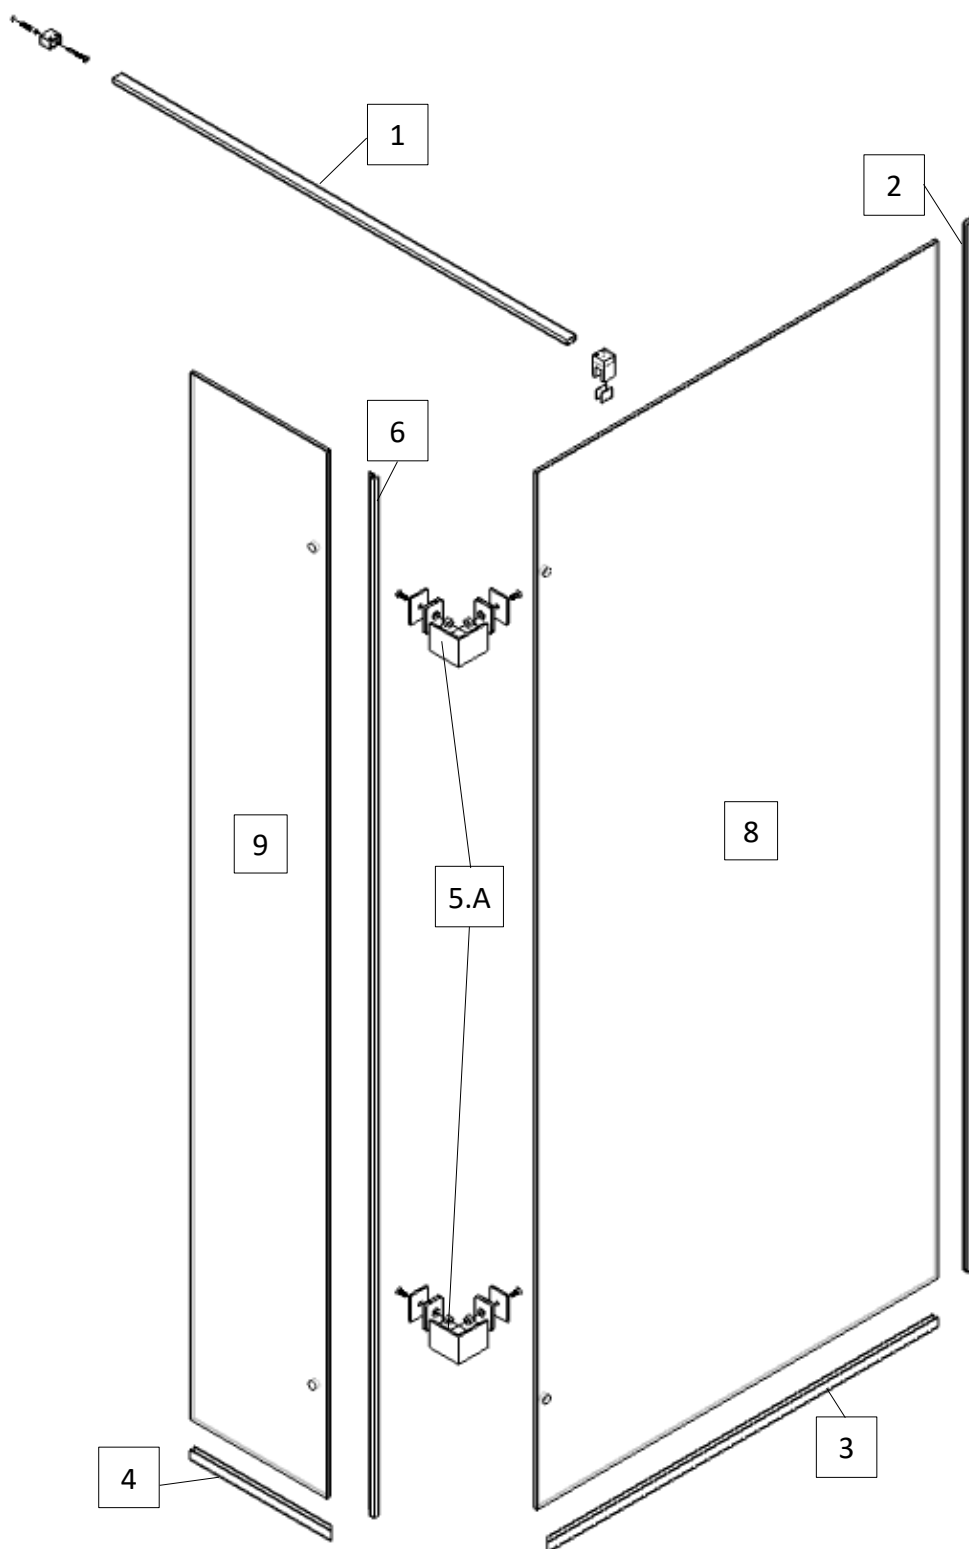





Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

1.A

DUE	A
80DUE	768
90DUE	883
100DUE	983
110DUE	1083
120DUE	1183
140DUE	1383
160DUE	1583

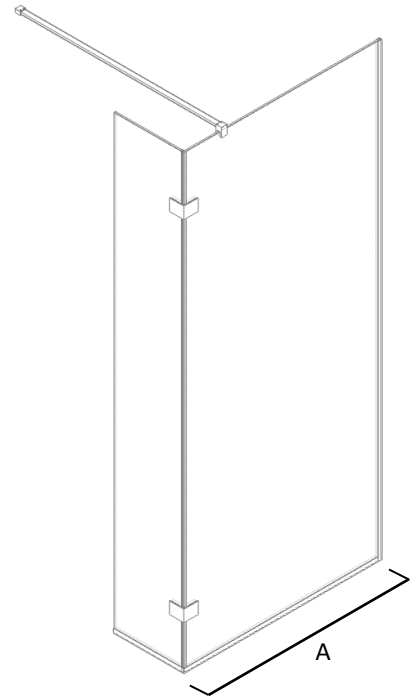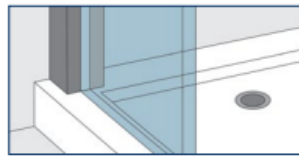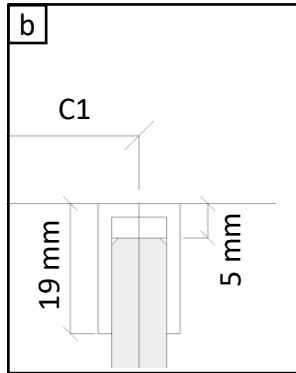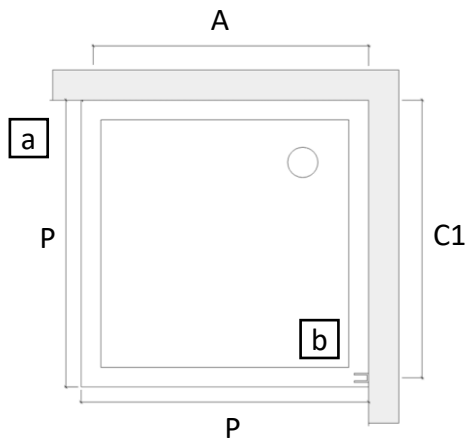

1.B

DUE	D
80DUE	800
90DUE	900
100DUE	1000
110DUE	1100
120DUE	1200
140DUE	1400
160DUE	1600

