


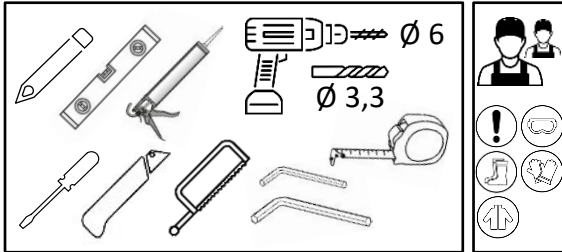











# ELEGANTE 8 BLACK


## Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions




1.		VIRA20CH	1
2.		GC-2032	1
3.		MF-43MAGN	1
4.		MF-32/6-ER	1
5.		R1656715	1
6.		SC-ALU8X9NEW	1
7.R		SC-SL-UZL180R	1
7.L		SC-SL-UZL180L	1
8.		ELE8	1
9.		3,5x35 SK1SET; Ø 6	2
10.		3,5x13 SK2SET	2
11.		6 mm Safety Glass + VIRA20CH	1

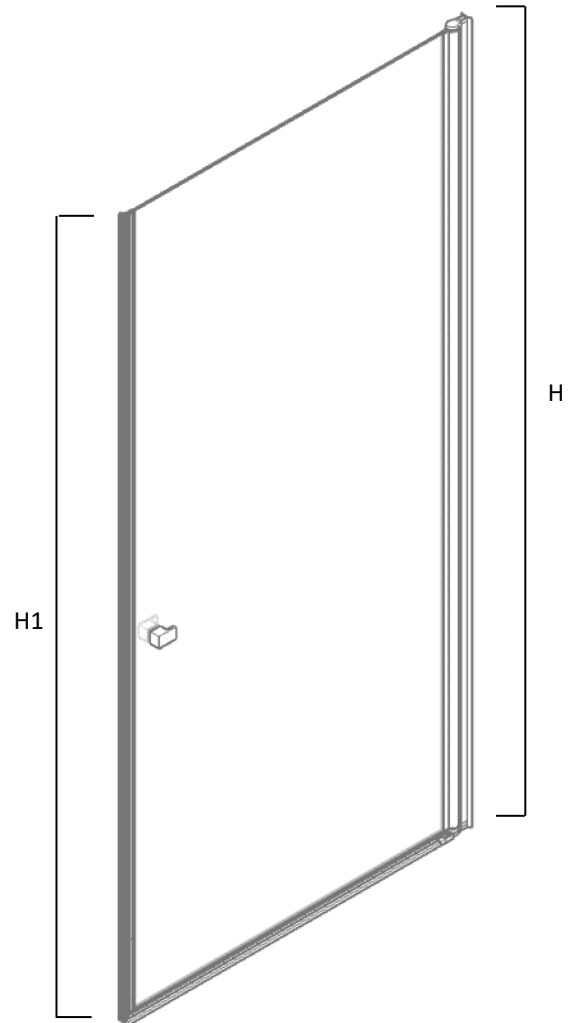




LEFT

RIGHT

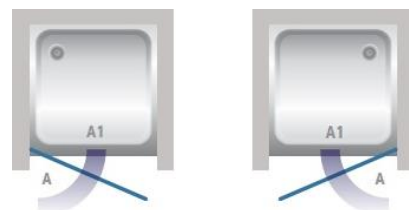

ELEGANTE 8 BLACK	A (mm)	H (mm)	H1 (mm)
70ELE8_B	695-700	2008	1993
80ELE8_B	795-800	2008	1993
90ELE8_B	895-900	2008	1993
100ELE8_B	995-1000	2008	1993

# ELEGANTE 8 BLACK

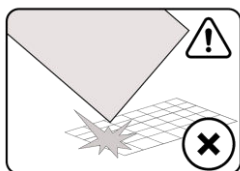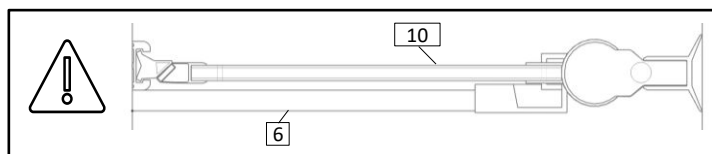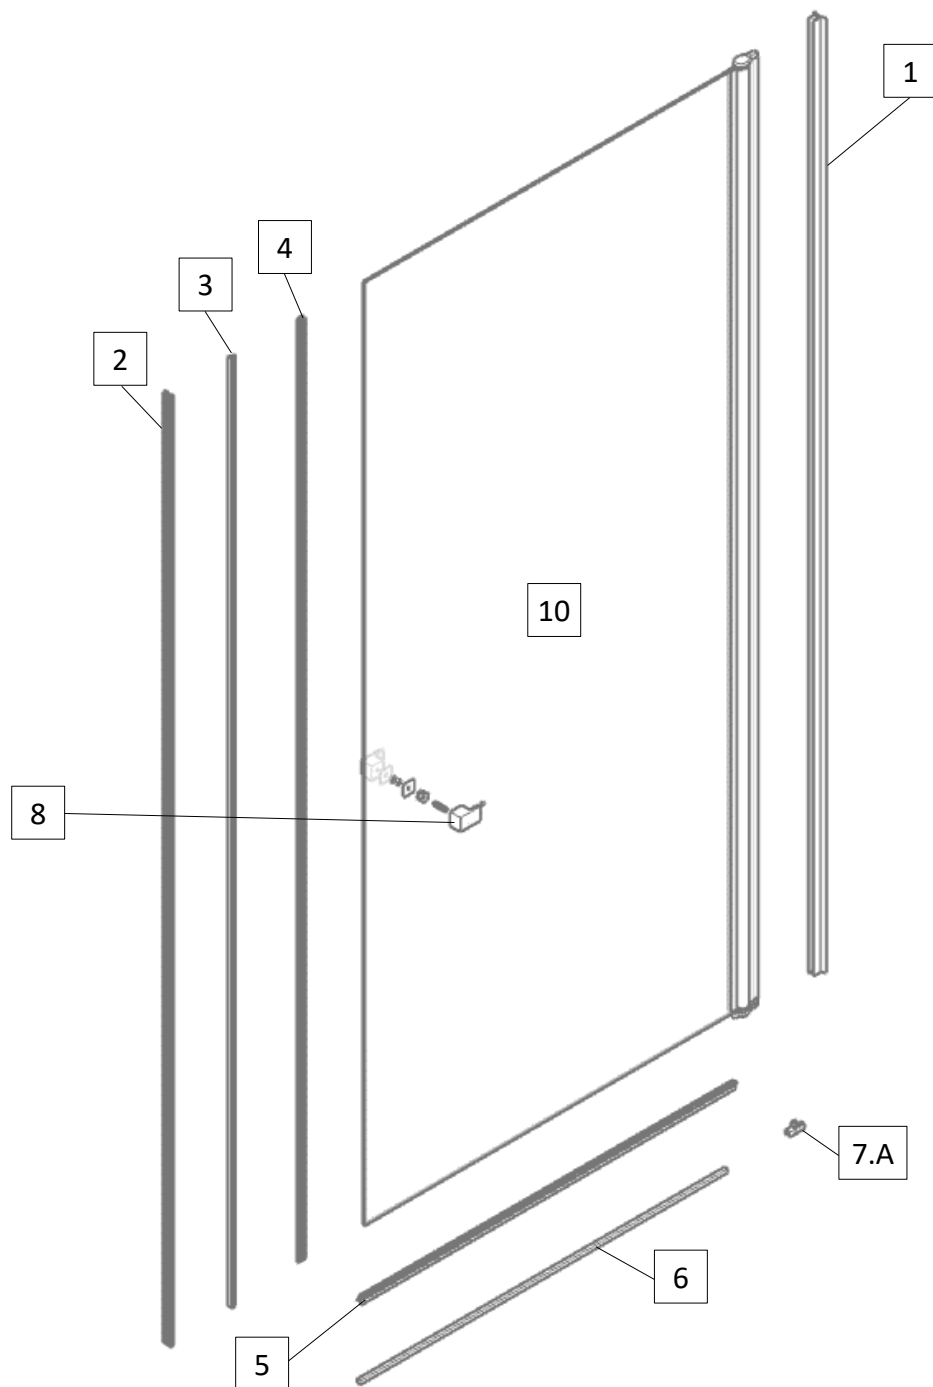

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

