




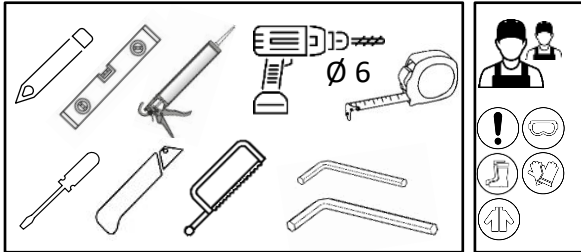








ELENA LUX



Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины

Shower enclosure installation assembly

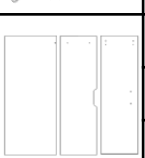


1.		PAL-01	1
2.		PAL-01B	1
3.		PAL-02B	1
4.		2919-8-2SERE	1
5.		GC-2032/ MF-29-5MAGN	1
6.		8850KUO-8-2010	1
7.		SF67-8-SERE	1
8.		8864-KUO-8	1
9.		S003-PROF	1
10.		S003_ROS_SET	1
11.		SC-ALU8X9NEW	1
12.		NLO-ZD-2856	1
13.		3,5X35 SK1SET	2
14.		8 mm Safety Glass	1
15.		8 mm Safety Glass	1
16.		8 mm Safety Glass	1

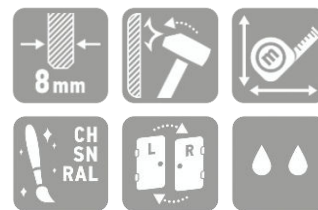
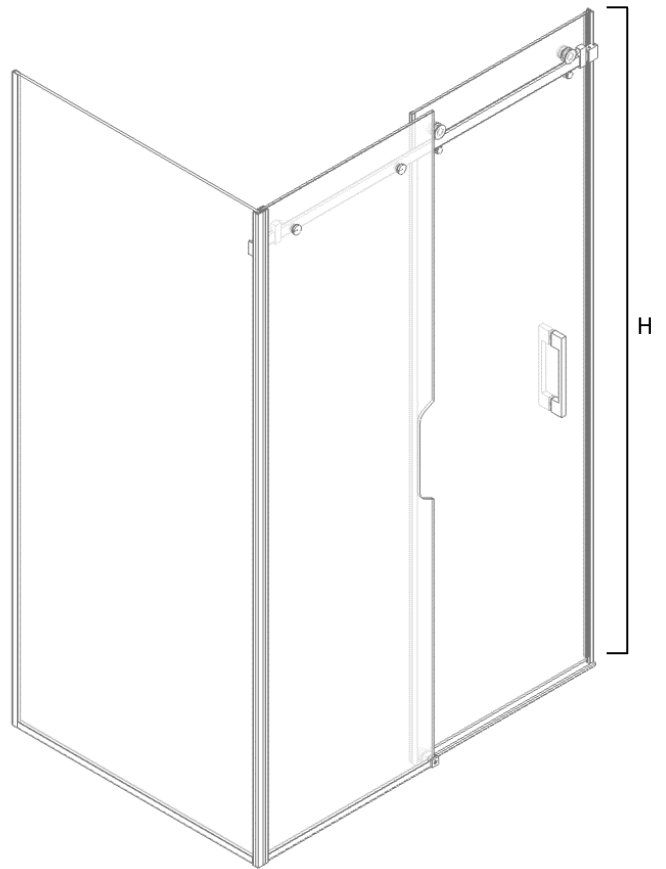


LEFT

RIGHT

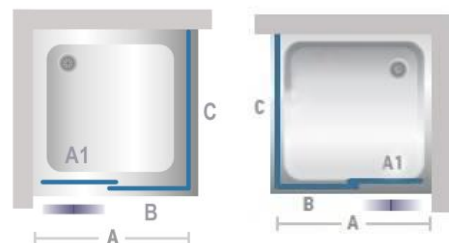

ELENA LUX	A+B (mm)	A1 (mm)	C (mm)	B (mm)	H (mm)
100X100ELEN	980-1000	460	990-995	520	2000
110X110ELEN	1080-1100	510	1090-1095	570	2000
120X120ELEN	1180-1200	560	1190-1195	620	2000
130X130ELEN	1280-1300	610	1290-1295	670	2000
120X80ELEN	1180-1200	560	790-795	620	2000
120X90ELEN	1180-1200	560	890-895	620	2000

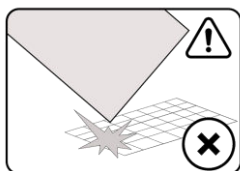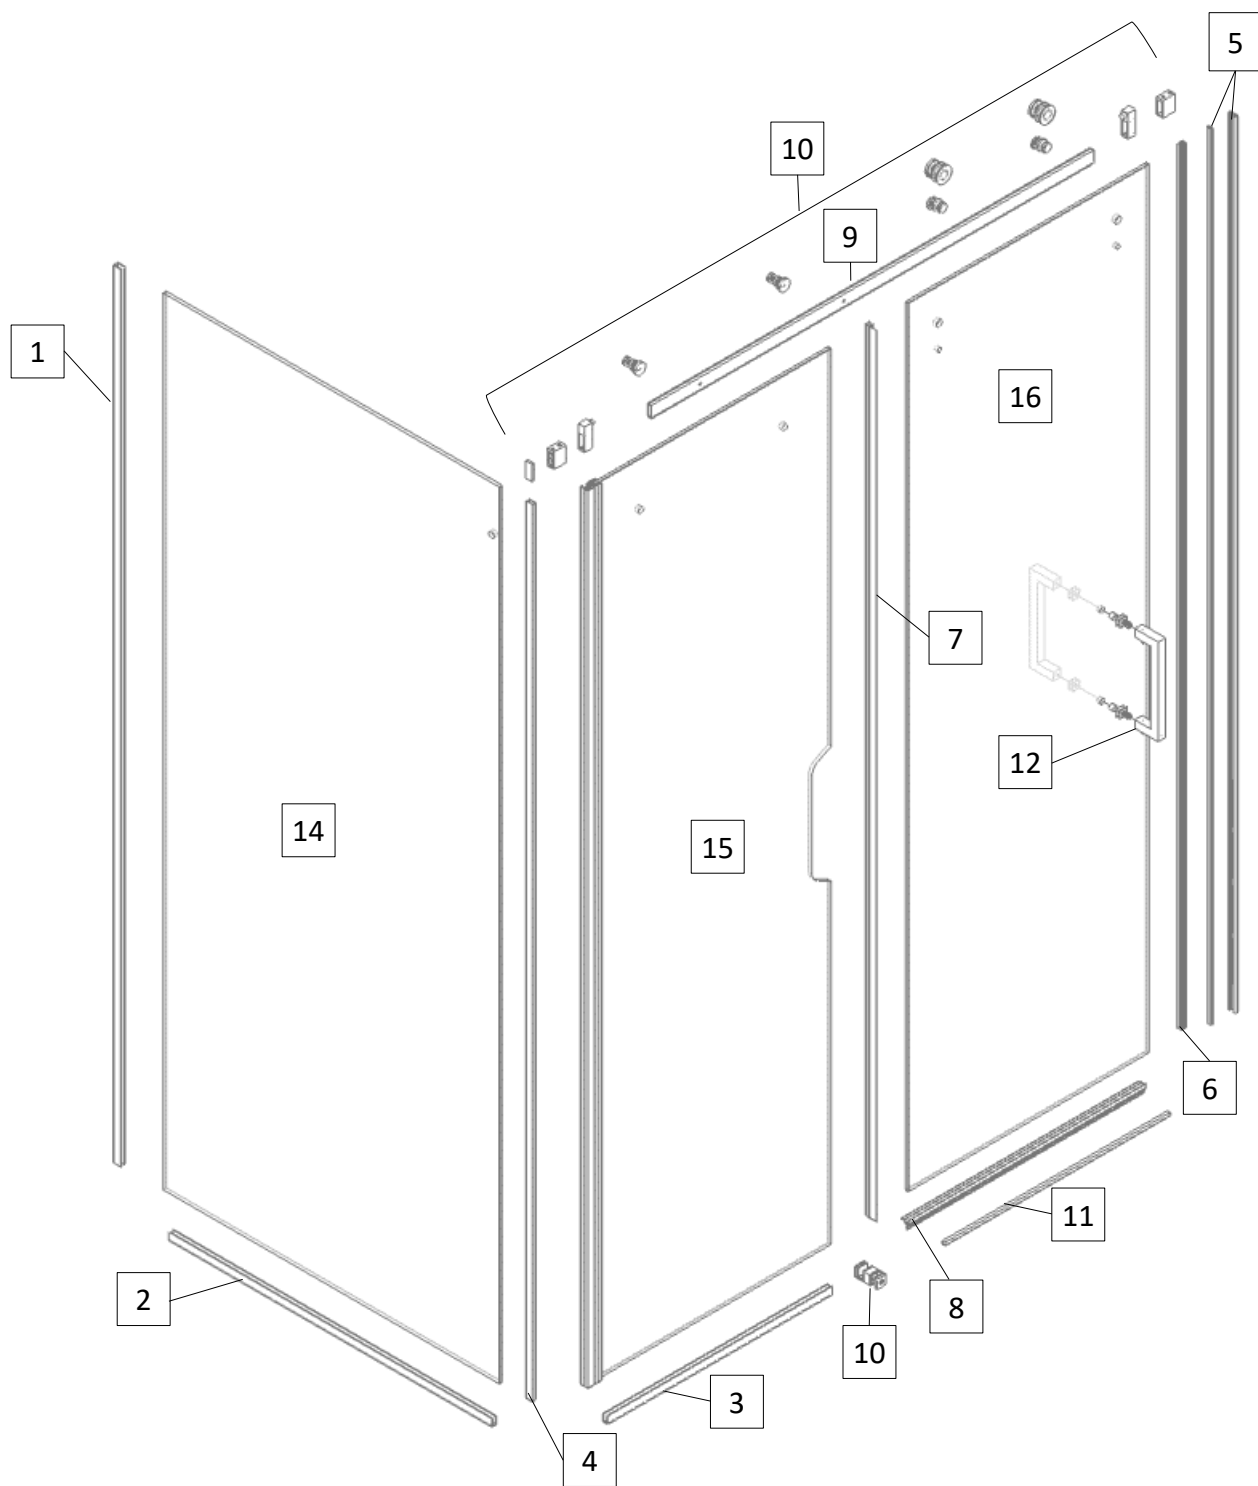




Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

1.A

ELENA LUX	P, mm	A+B1, mm	C, mm	C1, mm
100X100ELEN	1000 x 1000	984	984-994	C-33
110X110ELEN	1100 x 1100	1084	1084-1094	C-33
120X120ELEN	1200 x 1200	1184	1184-1194	C-33
130X130ELEN	1300 x 1300	1284	1284-1294	C-33
120X80ELEN	1200 x 800	1184	784-794	C-33
120X90ELEN	1200 x 900	1184	884-894	C-33

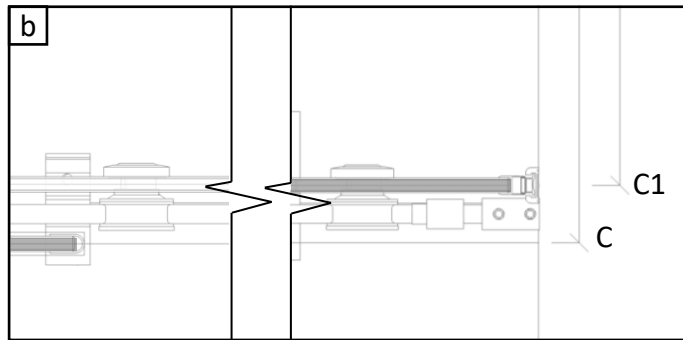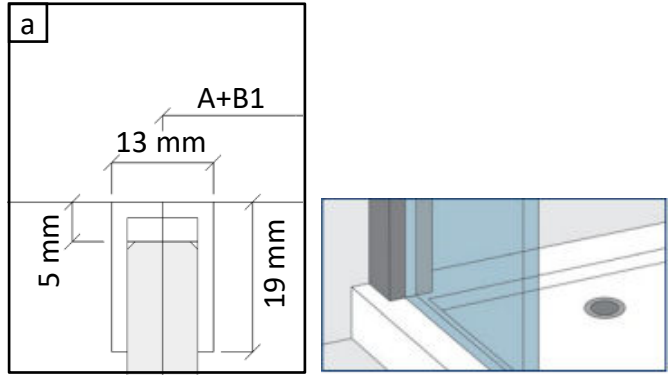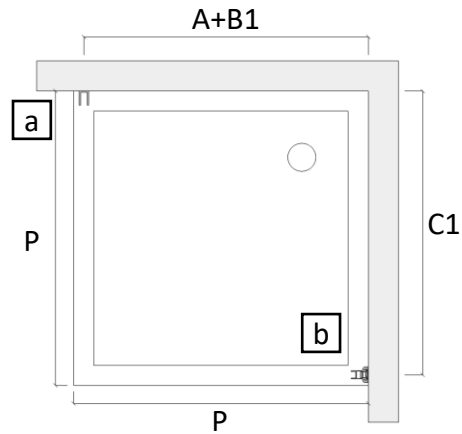

1.B

ELENA LUX	D, mm	S, mm	S1, mm
100X100ELEN	1000	1000	967
110X110ELEN	1100	1100	1067
120X120ELEN	1200	1200	1167
130X130ELEN	1300	1300	1267
120X80ELEN	1200	800	767
120X90ELEN	1200	900	867

