


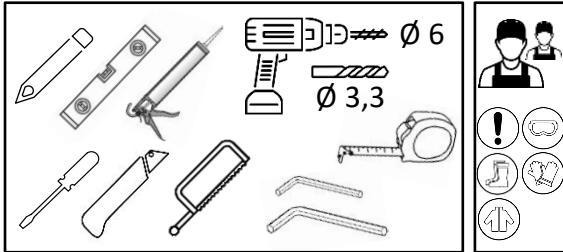






# ERIKA


## Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions



1.		DZT100CHR10X20 + SK2SET	1
2.		284.01.081+SK3SET	1
3.		400211PS-013	1
4.		3,5x35 SK1SET; Ø 6	1
5.		ALU-U-CON200	1
6.		3,5x13 SK2SET	2
7.		8 mm Safety Glass	1

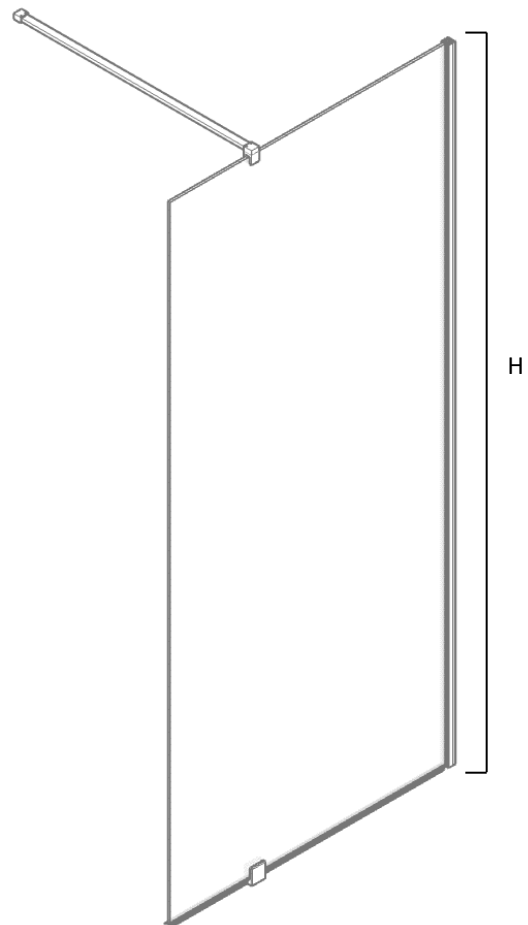



ERIKA	A (mm)	H (mm)
60ERI	570-585	1988
70ERI	670-685	1988
80ERI	770-785	1988
90ERI	870-885	1988
100ERI	970-985	1988
110ERI	1070-1085	1988
120ERI	1170-1185	1988



LEFT

RIGHT



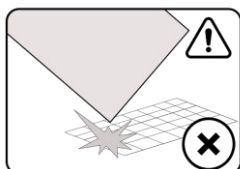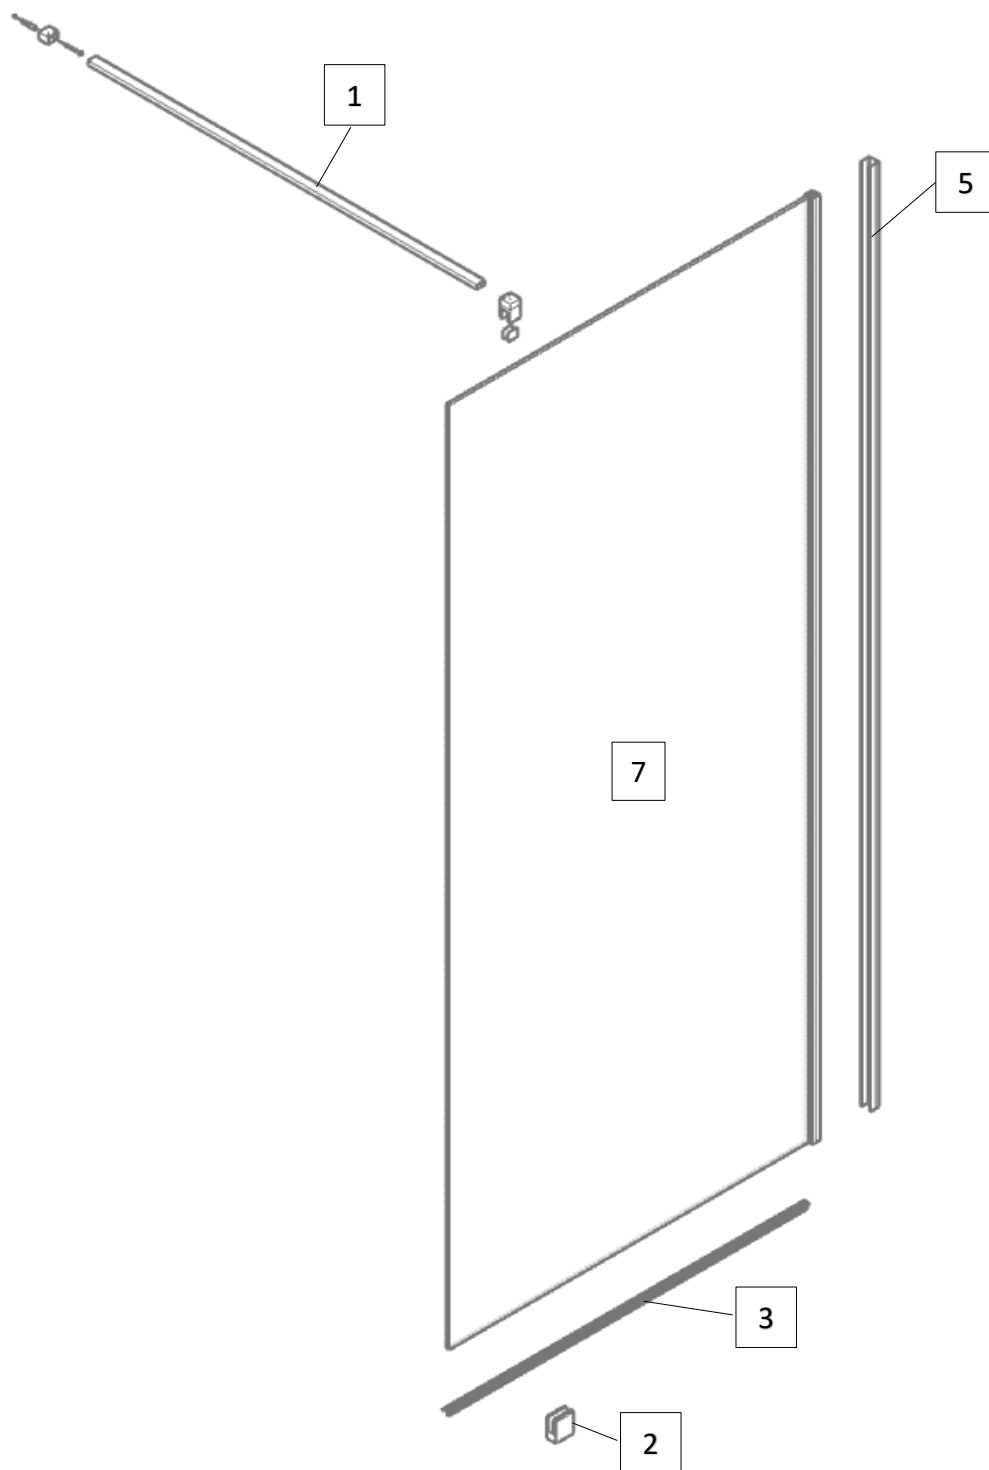

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

