



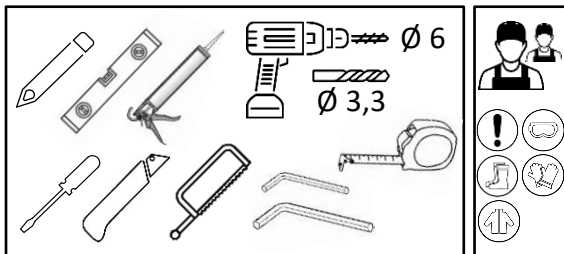



ESTER


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions





1.		PAL-01	1
2.		PAL-01B	1
3.		PAL-02B	1
4.		3,5x35 SK1SET Ø 6	2
5.		8mm Safety Glass	1

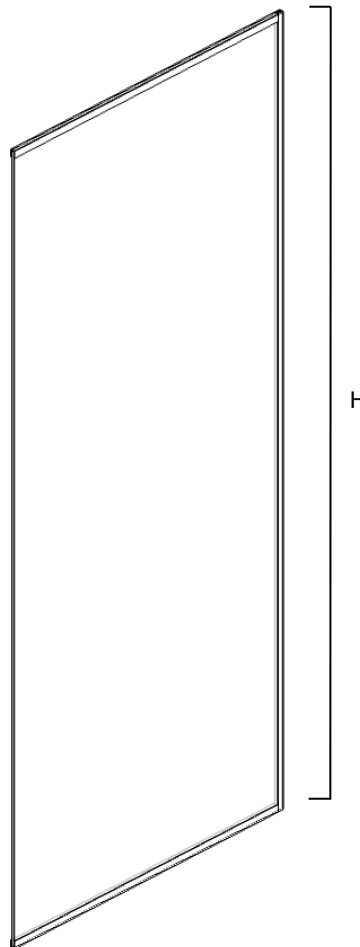

ESTER	A (mm)	H (mm)
60EST	568-573	1900-2250
70EST	668-673	1900-2250
80EST	768-773	1900-2250
90EST	868-873	1900-2250
100EST	968-973	1900-2250
110EST	1068-1073	1900-2250
120EST	1168-1173	1900-2250

ESTER	A (mm)	H (mm)
60EST	568-573	2250-2700
70EST	668-673	2250-2700
80EST	768-773	2250-2700
90EST	868-873	2250-2700
100EST	968-973	2250-2700
110EST	1068-1073	2250-2700
120EST	1168-1173	2250-2700

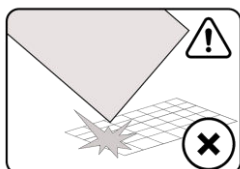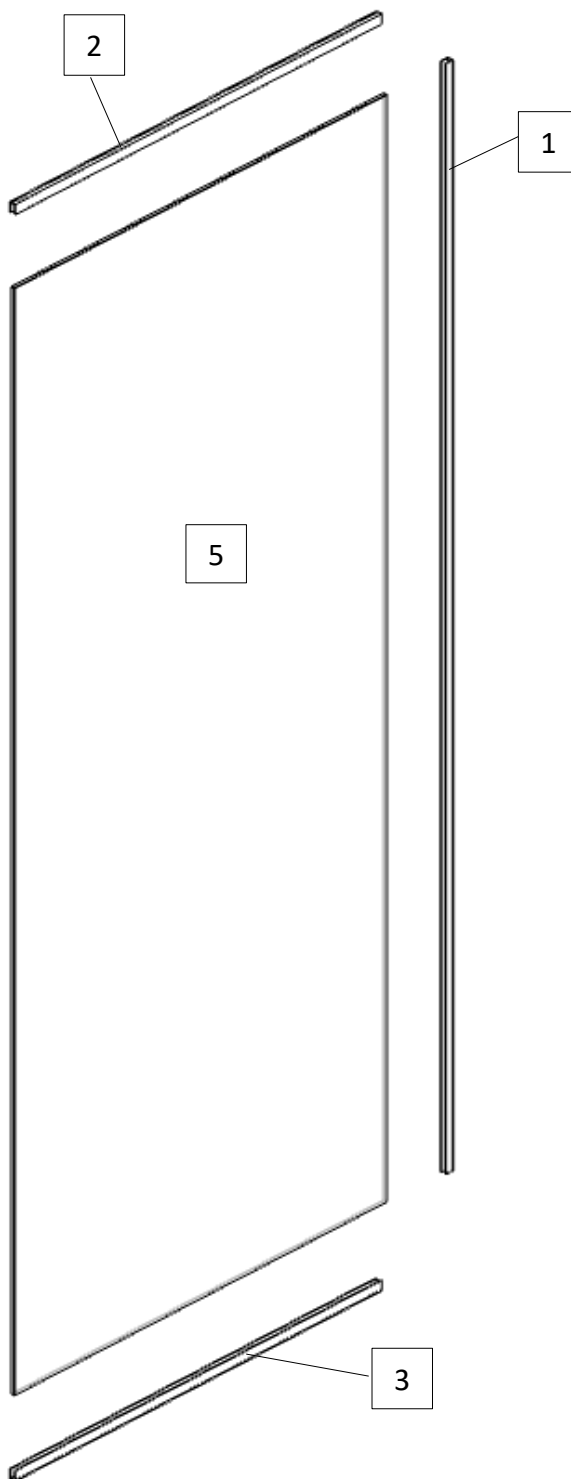

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

