


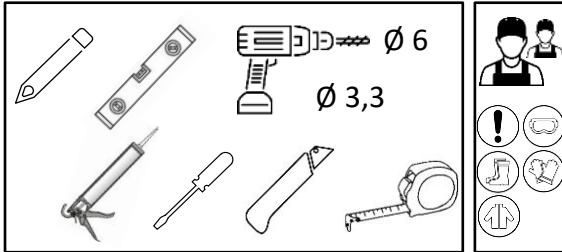







# ESTETICO PLUS


## Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions




1.		ALU-U-CON200	1
2.		PAL-01B	1
3.		SU45CH + SK2SET1	1
4.		R1656715	1
5.		3,5X35 SK1SET	1
6.		3,5x13 SK2SET	1
7.		6 mm Safety Glass + VIRA15CH	1
8.		6 mm Safety Glass + VIRA15CH	1


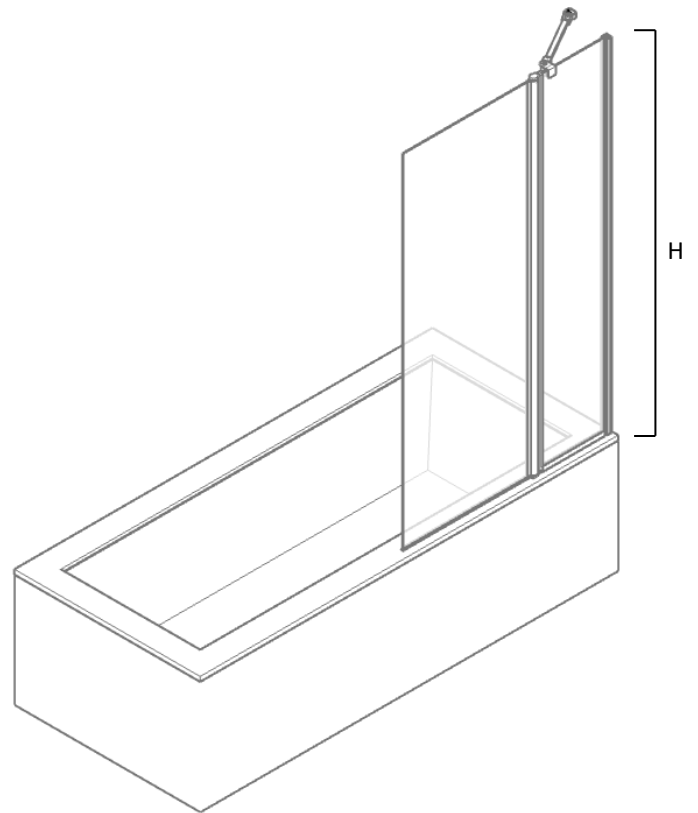


LEFT

RIGHT

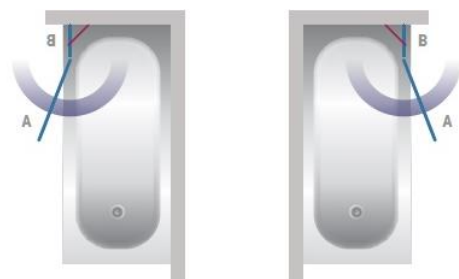

ESTETICO PLUS	A+B (mm)	B (mm)	H (mm)
70EST+	695-703	200	1500
80EST+	795-803	300	1500
90EST+	895-903	300	1500
100EST+	995-1003	400	1500
110EST+	1095-1103	400	1500
120EST+	1195-1203	500	1500

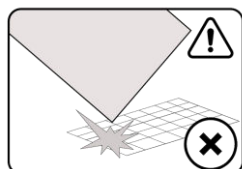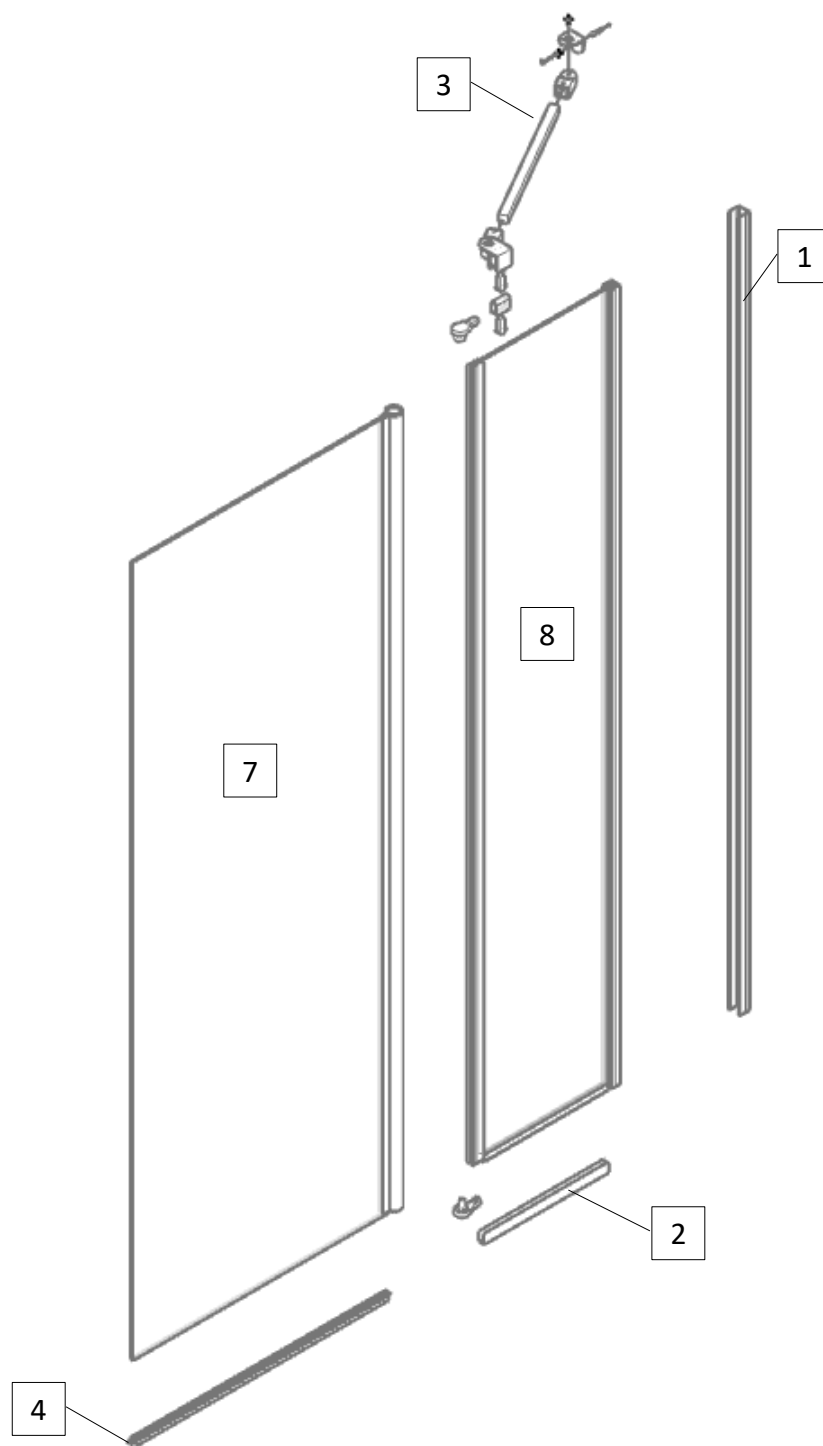

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

