


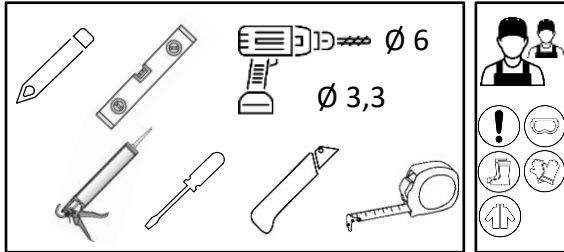




ESTETICO


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions




1.		VIRA15CH	1
2.		R1656715	1
3.		3,5X35 4K1SET	1
4.		3,5x13 2K2SET	1
5.		6 mm Safety Glass + VIRA15CH	1


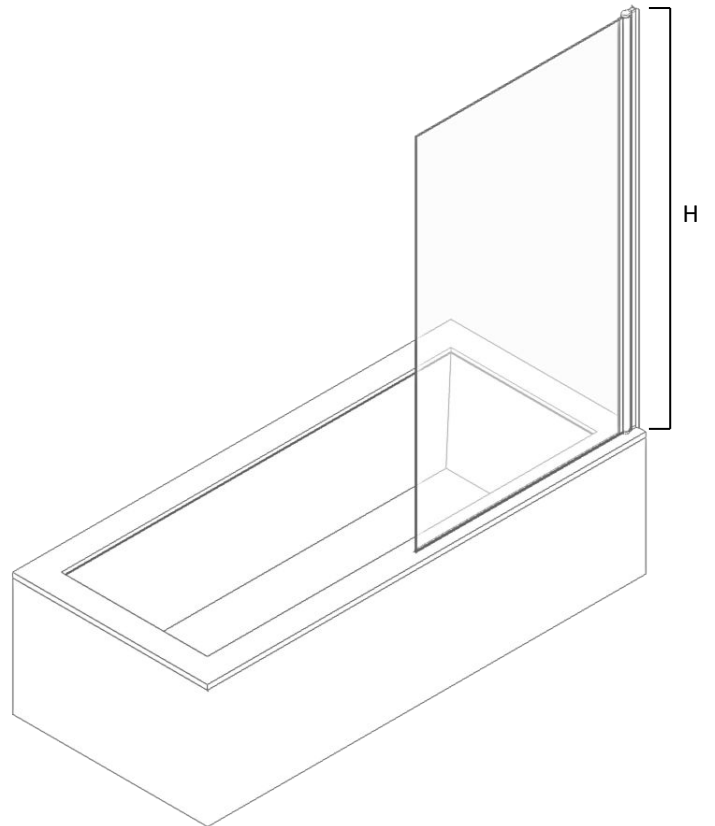


LEFT

RIGHT

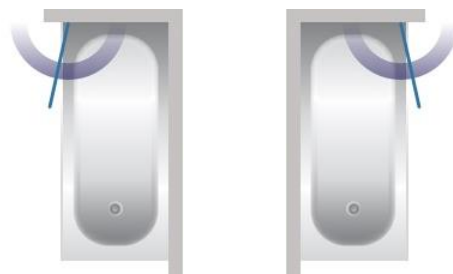

ESTETICO	A (mm)	H (mm)
70EST	698-703	1500
80EST	798-803	1500
90EST	898-903	1500

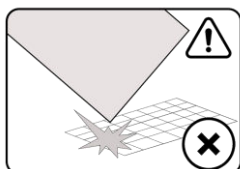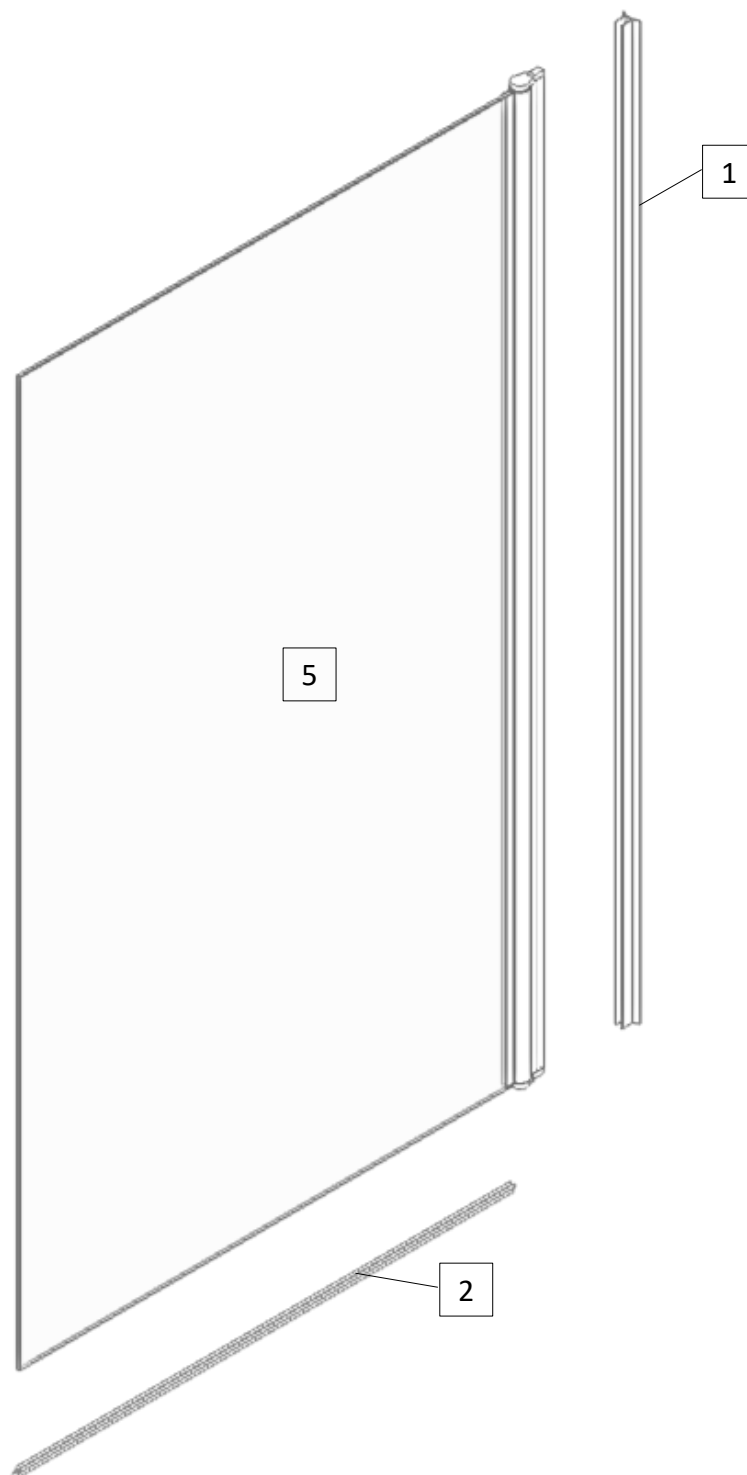

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

