












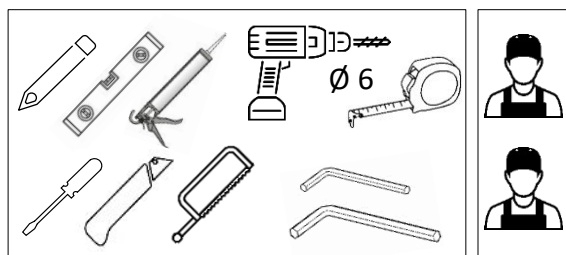


# FARFALLA PLUS


## Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери


Shower door installation instructions



1.		PAL-01	1
2.		PAL-01B	1
3.		SU45CHKANT + SK2SET1	1
4.		GC-2032	1
5.		MF-43MAGN	1
6.		MF-42/8-ER	1
7.		R1653308	1
8.		SC-ALU8X9NEW	1
9.		8192ZN5-BS	2
10.		LUX - CH - 2856G	1
11.		3,5x35 SK1SET; Ø 6	5+5
12.		8 mm Safety Glass	1
13.		8 mm Safety Glass	1

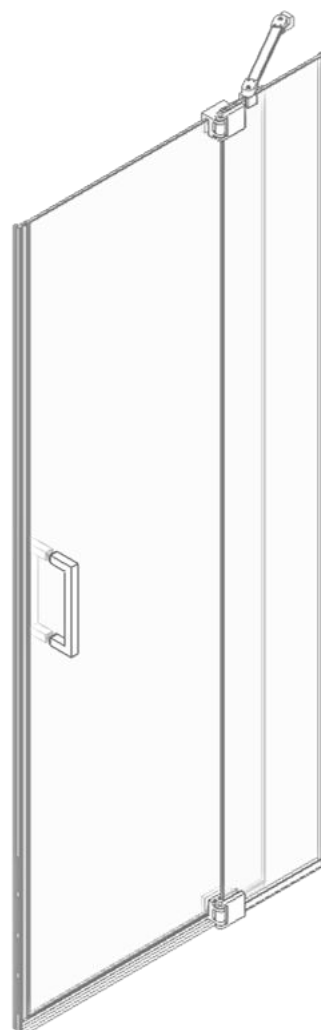

	A + B	B
700 x 2000	650-710	200
800 x 2000	750-810	200
900 x 2000	850-910	300
1000 x 2000	950-1010	300
1100 x 2000	1050-1110	400
1200 x 2000	1150-1210	500

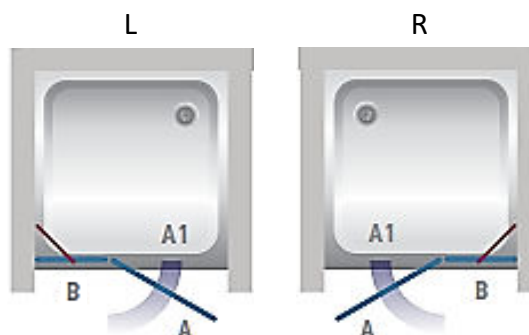

# FARFALLA PLUS

