








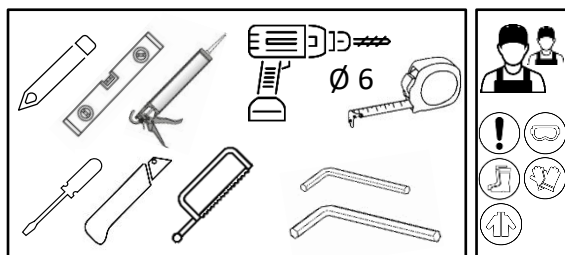


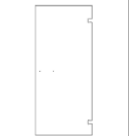
FLAMEA


Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions




1.		MF-42/8-ER	1
2.		GC-2032	1
3.		MF-43MAGN	1
4.		40021PS - 009	1
5.		400211PS-013	1
6.		SC-ALU8X9NEW	1
7.		PSDF-5CH-90CH	2
8.		NLO-ZD-2856	1
9.		3,5x35 SK1SET; Ø 6	2
10.		8 mm Safety Glass	1

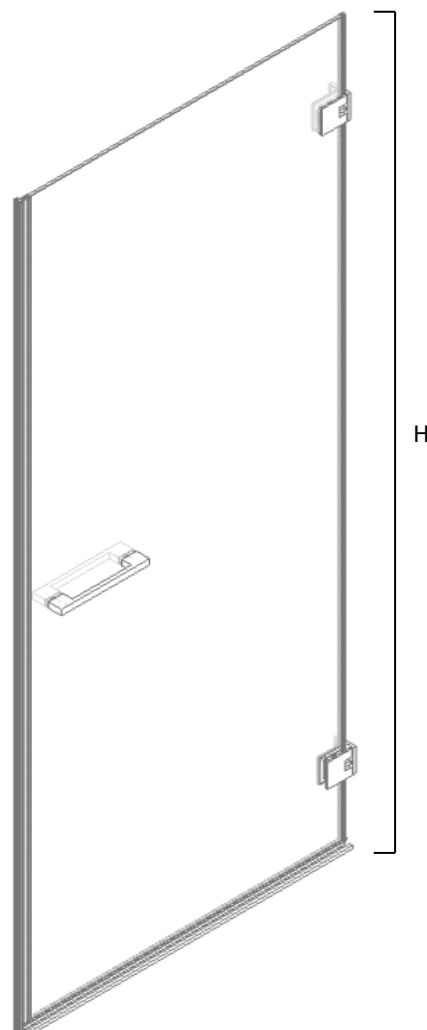


LEFT

RIGHT

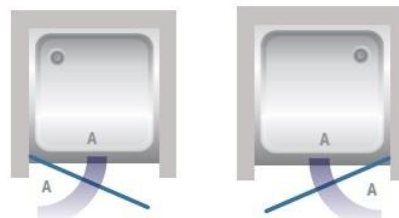

FLAMEA	A (mm)	H (mm)
60FLA	595-600	1988
70FLA	695-700	1988
80FLA	795-800	1988
90FLA	895-900	1988

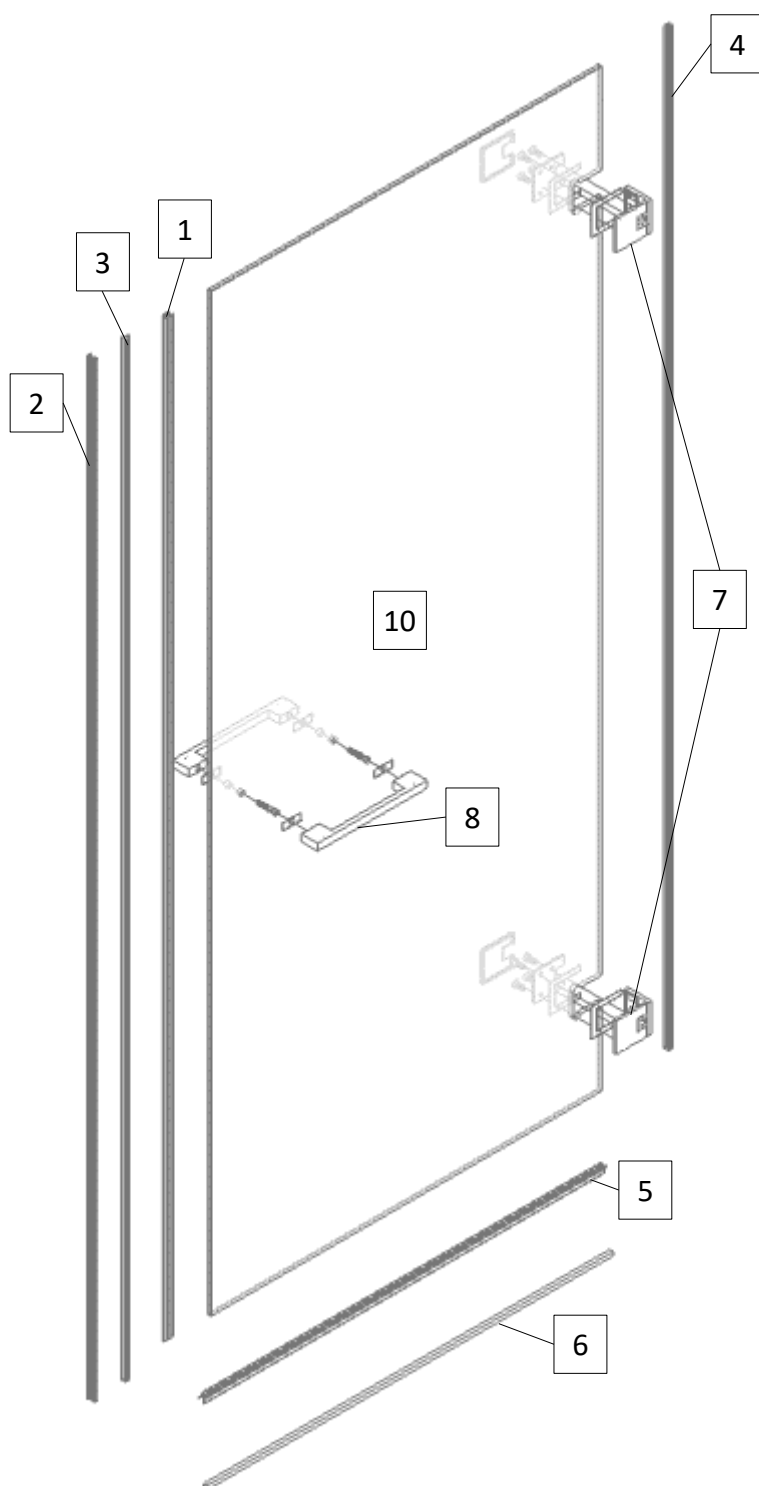

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

