






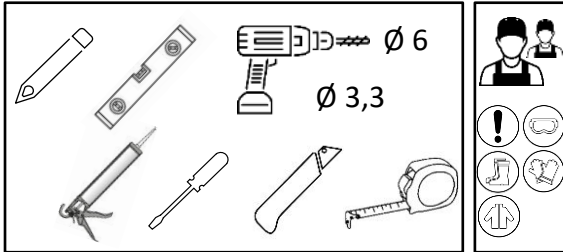



FRANCESKA PLUS


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены


Bath screen installation instructions



| | | | |
|----|---|------------------------------|---|
| 1. |  | ALU-U-CON200 | 1 |
| 2. |  | PAL-01B | 1 |
| 3. |  | SU45CH + SK2SET1 | 1 |
| 4. |  | R1656715 | 1 |
| 5. |  | 3,5X35 4K1SET | 1 |
| 6. |  | 3,5x13 SK2SET | 2 |
| 7. |  | 6 mm Safety Glass + VIRA15CH | 1 |
| 8. |  | 6 mm Safety Glass + VIRA15CH | 1 |

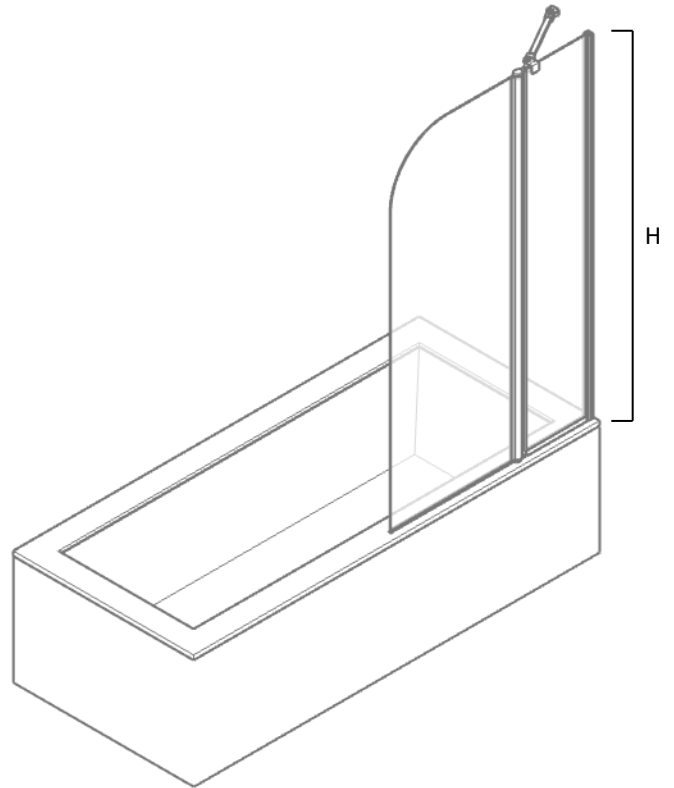



LEFT

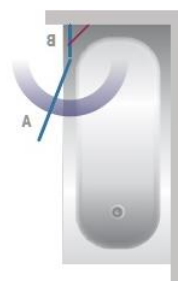

RIGHT



| FRANCESKA PLUS | A+B (mm) | H (mm) |
|----------------|-----------|--------|
| 70FRA+ | 695-703 | 1500 |
| 80FRA+ | 795-803 | 1500 |
| 90FRA+ | 895-903 | 1500 |
| 100FRA+ | 995-1003 | 1500 |
| 110FRA+ | 1095-1103 | 1500 |
| 120FRA+ | 1195-1203 | 1500 |

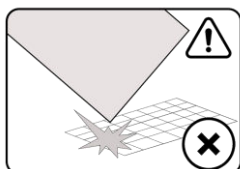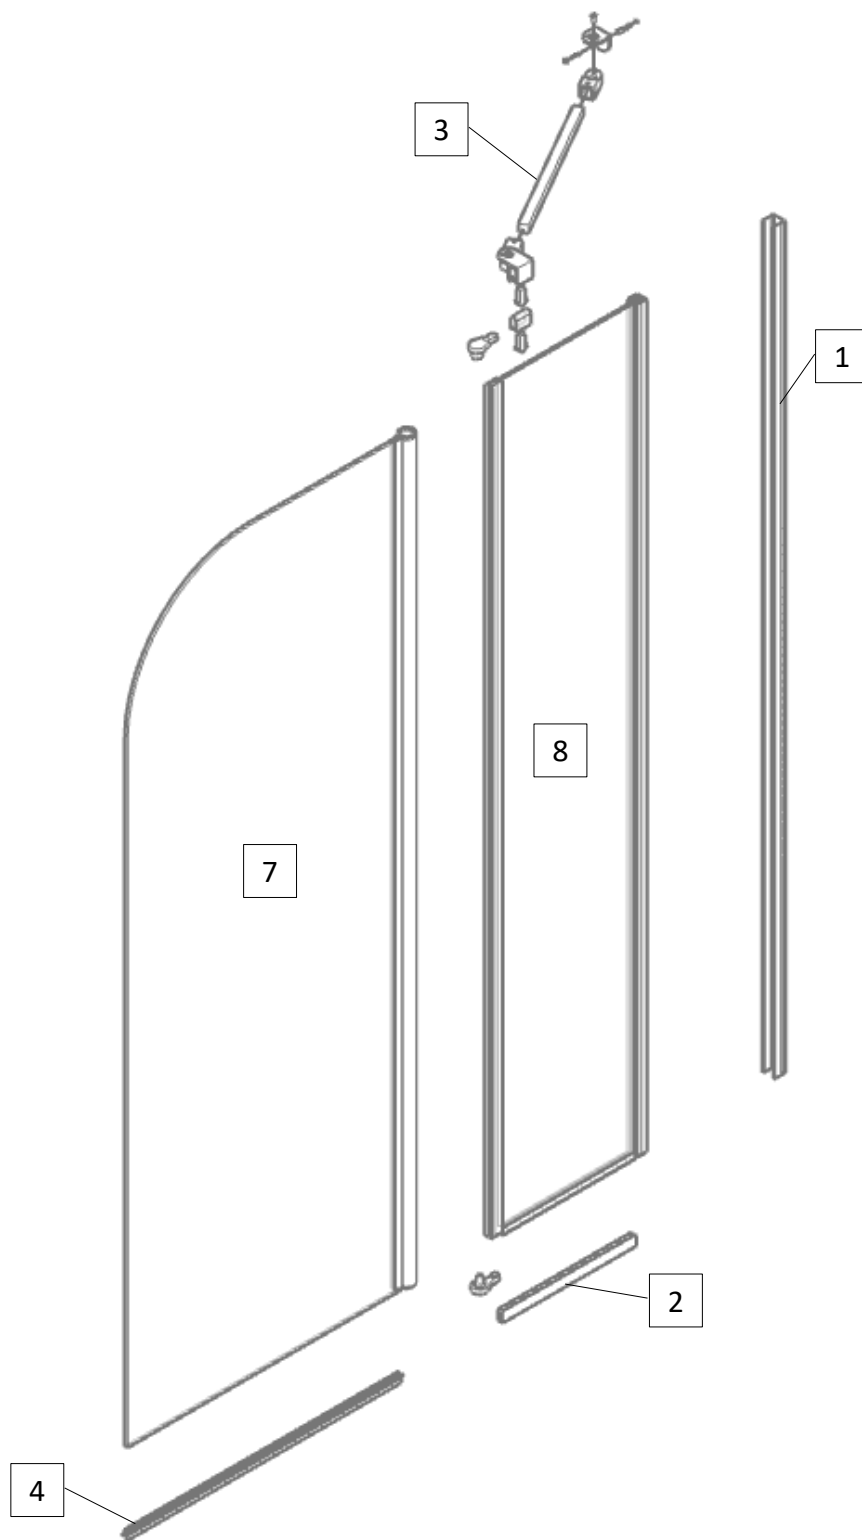

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

