


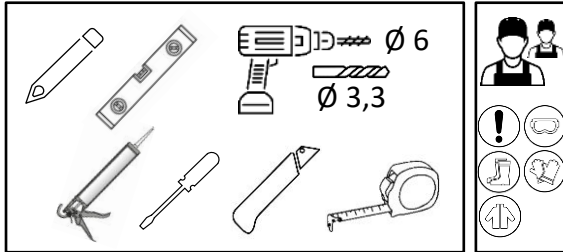




FRANCESKA


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions

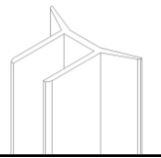


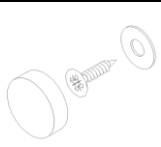1.		VIRA15CH	1
2.		R1656715	1
3.		3,5X35 4K1SET	1
4.		3,5x13 SK2SET	1
5.		6 mm Safety Glass + VIRA15CH	1


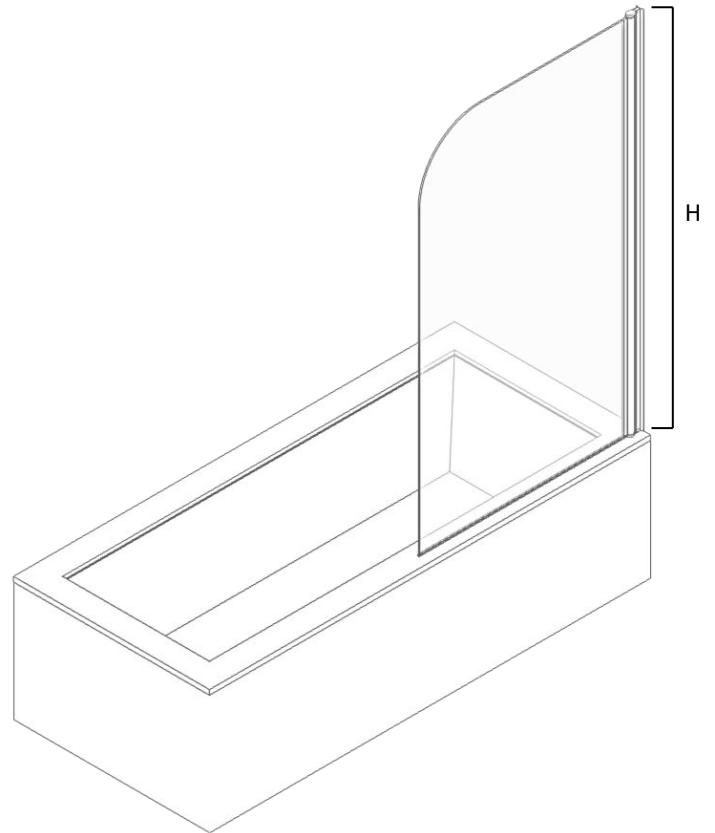


LEFT

RIGHT

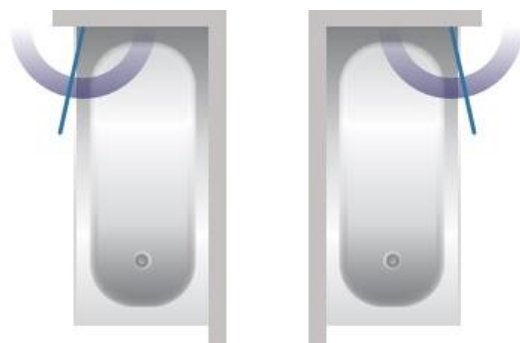

FRANCESKA	A (mm)	H (mm)
70FRA	695-703	1500
80FRA	795-803	1500
90FRA	895-903	1500

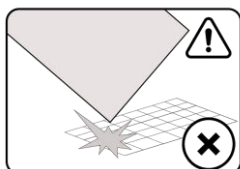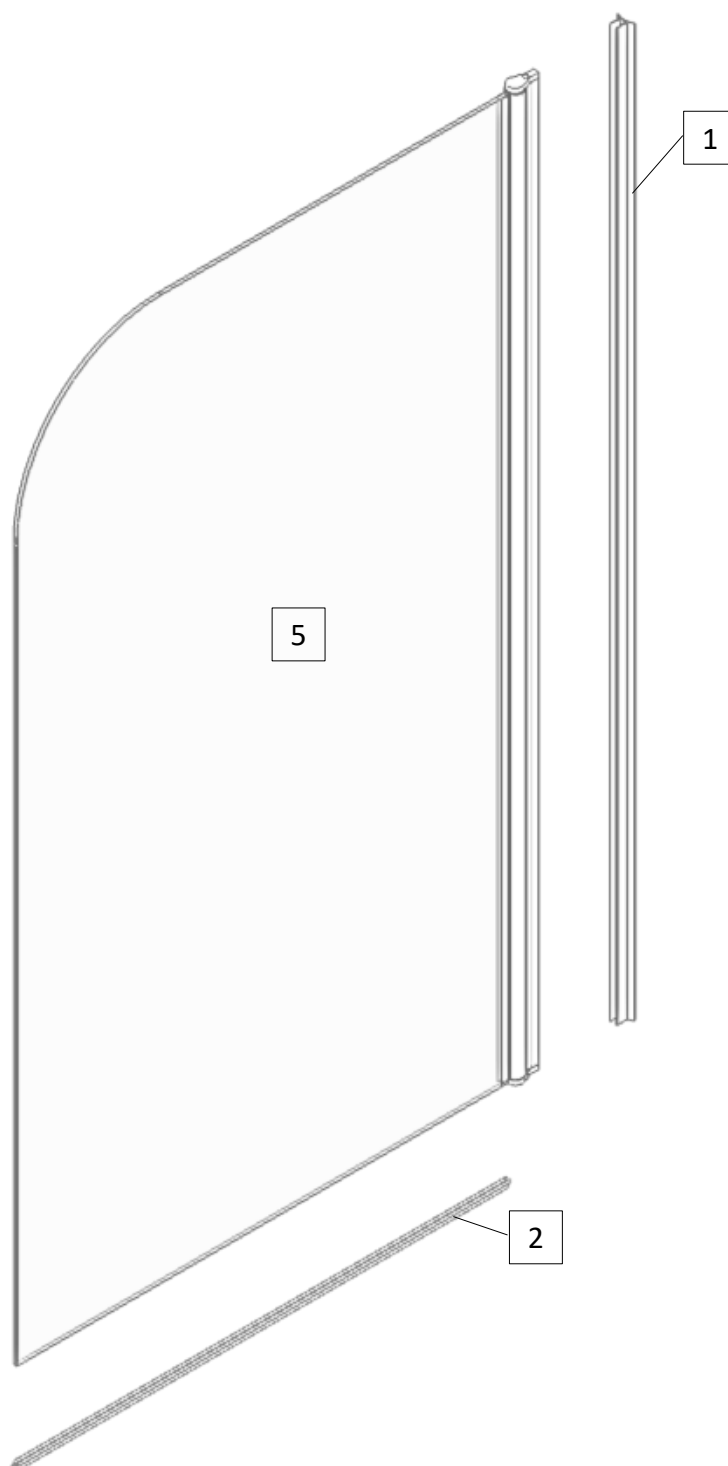

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

