


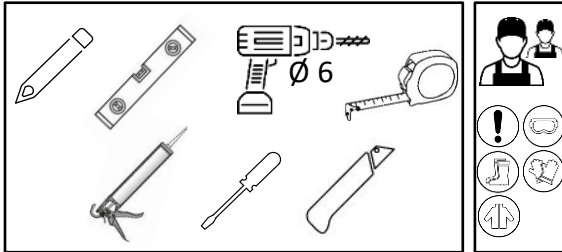



FRESCO BLACK


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions




1.		40021PS - 009	1
2.		400211PS-013	1
3.		WGLA6801CP + SK1SET	2
4.		8 mm Safety Glass	1

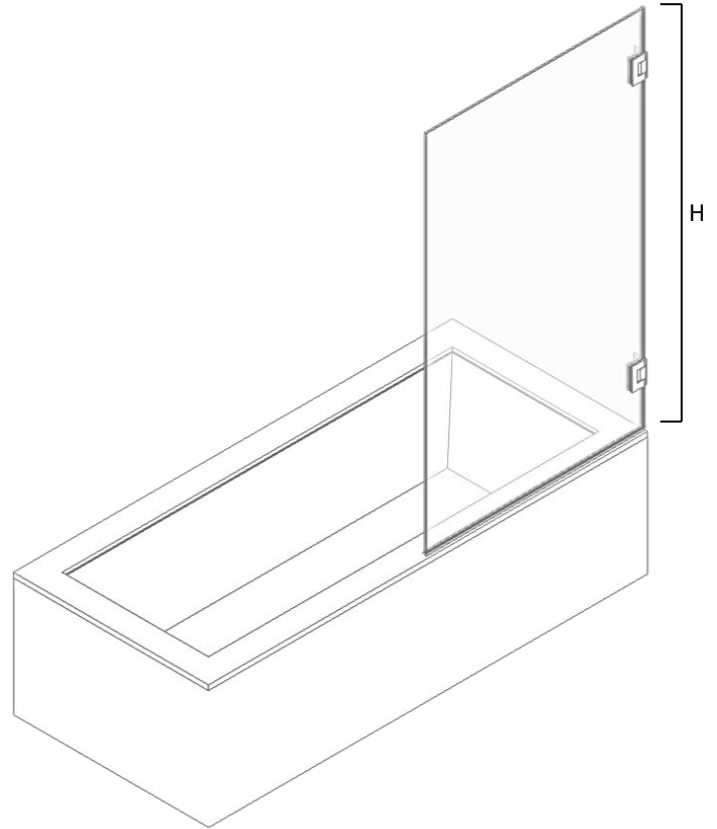



LEFT

RIGHT

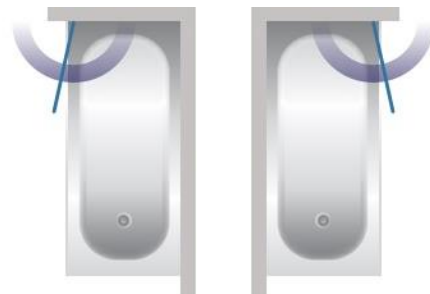

FRESCO BLACK	A (mm)	H (mm)
70FRE_B	698-703	1500
80FRE_B	798-803	1500
90FRE_B	898-903	1500

FRESCO BLACK

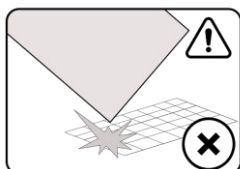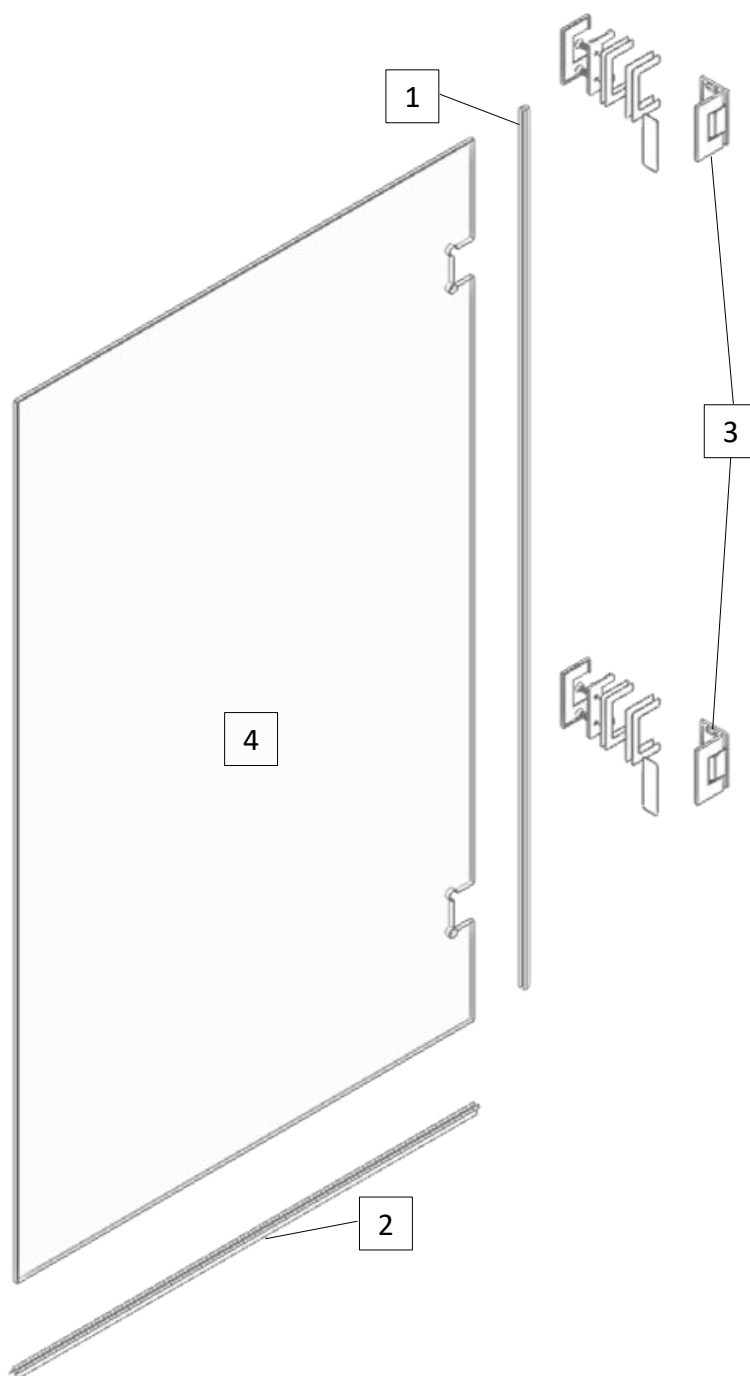

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

