






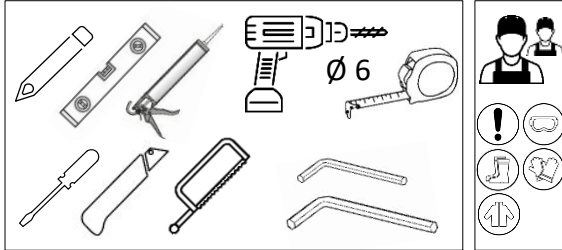








GIORGIO BLACK

Dušas kabīnes montāžas instrukcija



Инструкция по монтажу душевой кабины

Shower enclosure installation assembly



1.		PAL-01	1
2.		PAL-01B	1
3.		DZT100CHR19+SK2SET	1
4.		MF-42/8-ER	1
5.		40021PS - 009	1
6.		400211PS-013	1
7.		WGLA6801CP + SK2SET1	2
8.		DR-CH32	1
9.		SC-ALU8X9NEW	1
10.		SC-SL-UZL90L/R	1
11.		3,5x35 SK1SET; Ø 6	2
12.		8 mm Safety Glass	1
13.		8 mm Safety Glass	1

GIORGIO BLACK	A (mm)	B (mm)	H (mm)
70x70GIO_B	692-695	687-792	1988
80x80GIO_B	792-795	787-792	1988
90x90GIO_B	892-895	887-892	1988
100x100GIO_B	992-995	987-992	1988

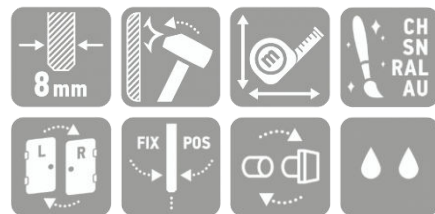
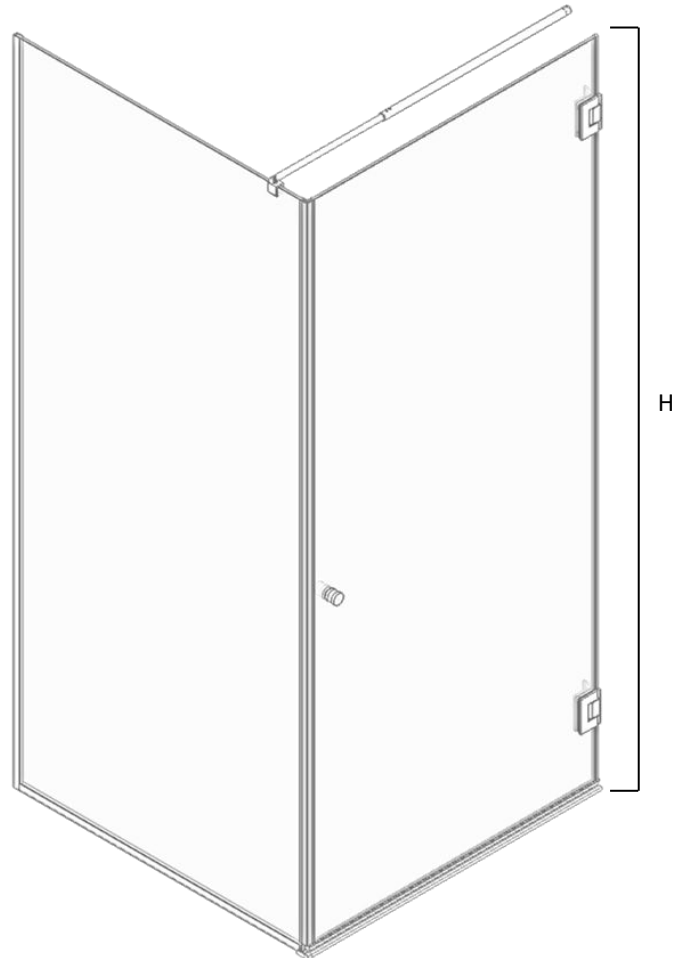


LEFT

RIGHT



GIORGIO BLACK

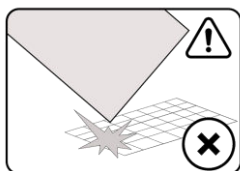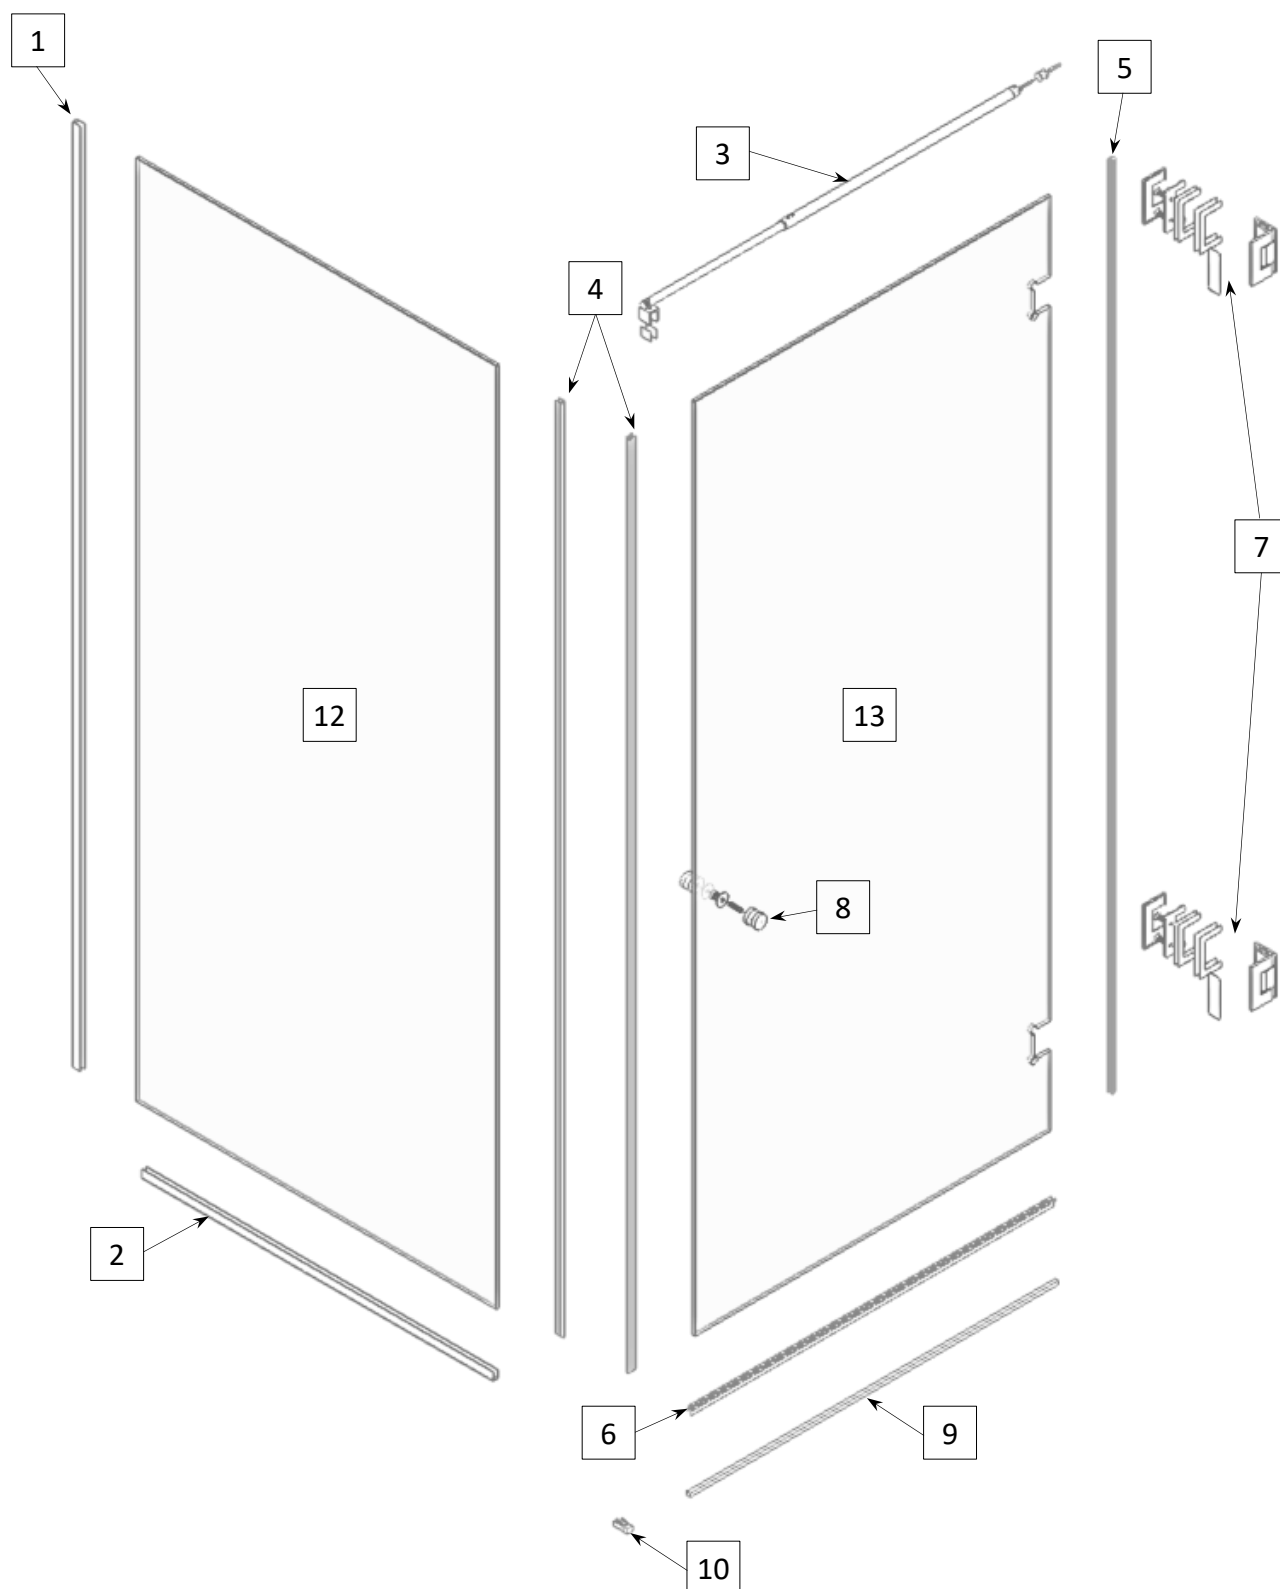





Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

1.A

GIORGIO	P, mm	A1	B1, mm
70X70GIO	700 x 700	688	683
80X80GIO	800 x 800	788	783
90X90GIO	900 x 900	888	883
100X100GIO	1000 x 1000	988	983

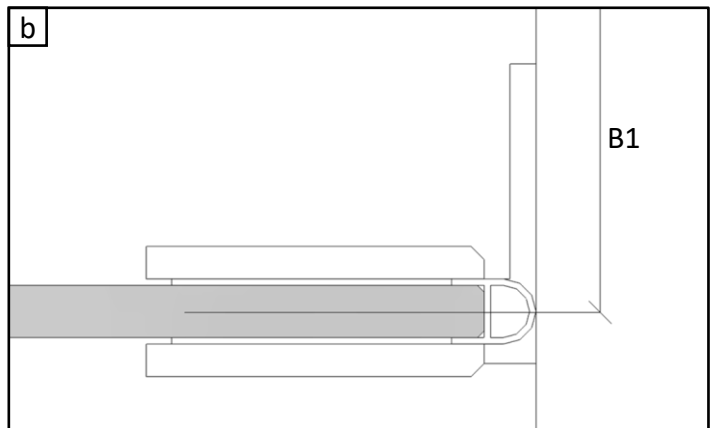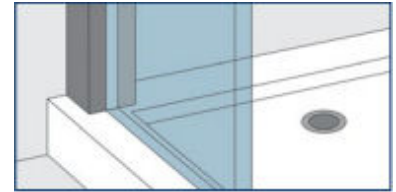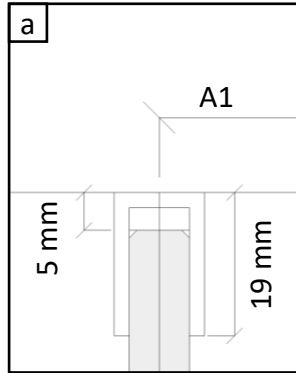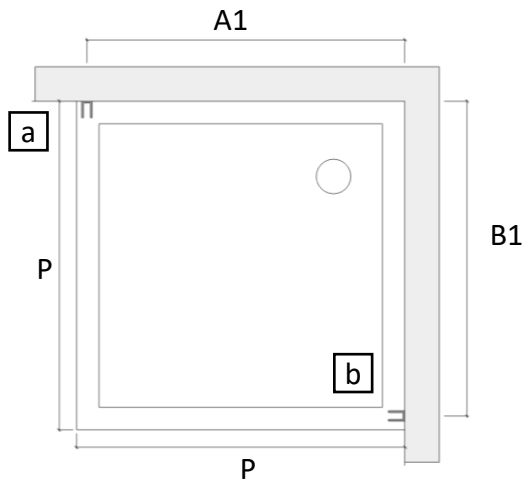

1.B

GIORGIO	D	S
70X70GIO	700	700
80X80GIO	800	800
90X90GIO	900	900
100X100GIO	1000	1000

