










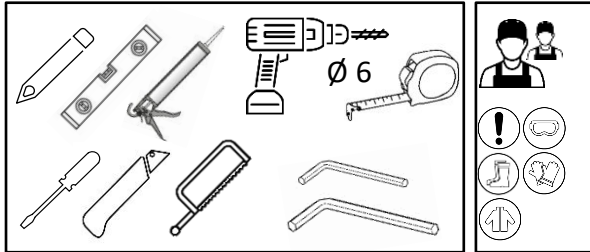




# GRETA

## Dušas kabīnes montāžas instrukcija



Инструкция по монтажу душевой кабины

Shower enclosure installation assembly




1.		PAL-01	2
2.		PAL-01B	1
3.		PAL-02B	1
4.		SU45CHKANT + SK2SET1	2
5.		MF-42/8-ER	1
6.		R1653308	1
7.		SC-ALU8X9NEW	1
8.		8192ZN5-BS	2
9.		NLO-ZD-2856	1
10.R		SC-SL-UZL90L	1
10.L		SC-SL-UZL90R	1
11.		3,5x35 SK1SET; Ø 6	2
12.		8 mm Safety Glass	1
13.		8 mm Safety Glass	1
14.		8 mm Safety Glass	1


GRETA	A + B (mm)	B (mm)	H (mm)	H1 (mm)
80X80GRE	750-810	200	2000	1978
90X90GRE	850-910	300	2000	1978
100X100GRE	950-1010	300	2000	1978
110X110GRE	1050-1110	400	2000	1978
120X120GRE	1150-1210	500	2000	1978
120X80GRE	1150-1210	500	2000	1978
120X90GRE	1150-1210	500	2000	1978

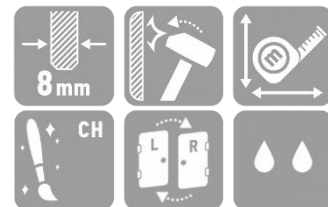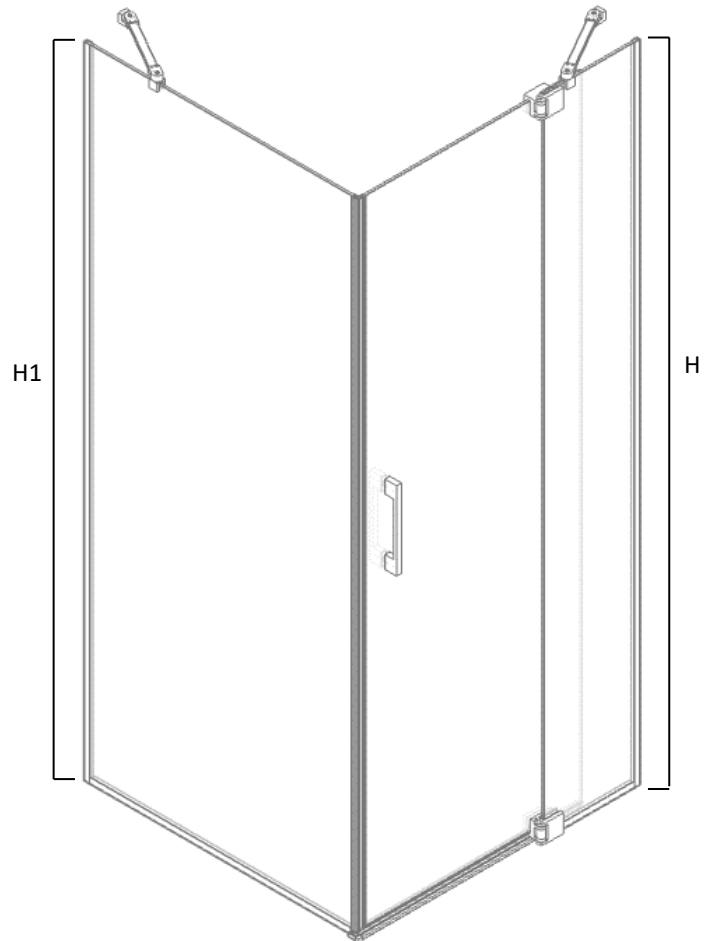

LEFT

RIGHT

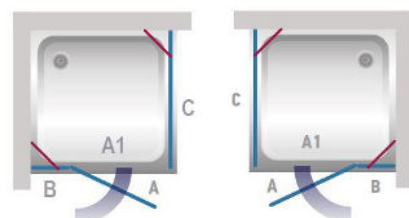

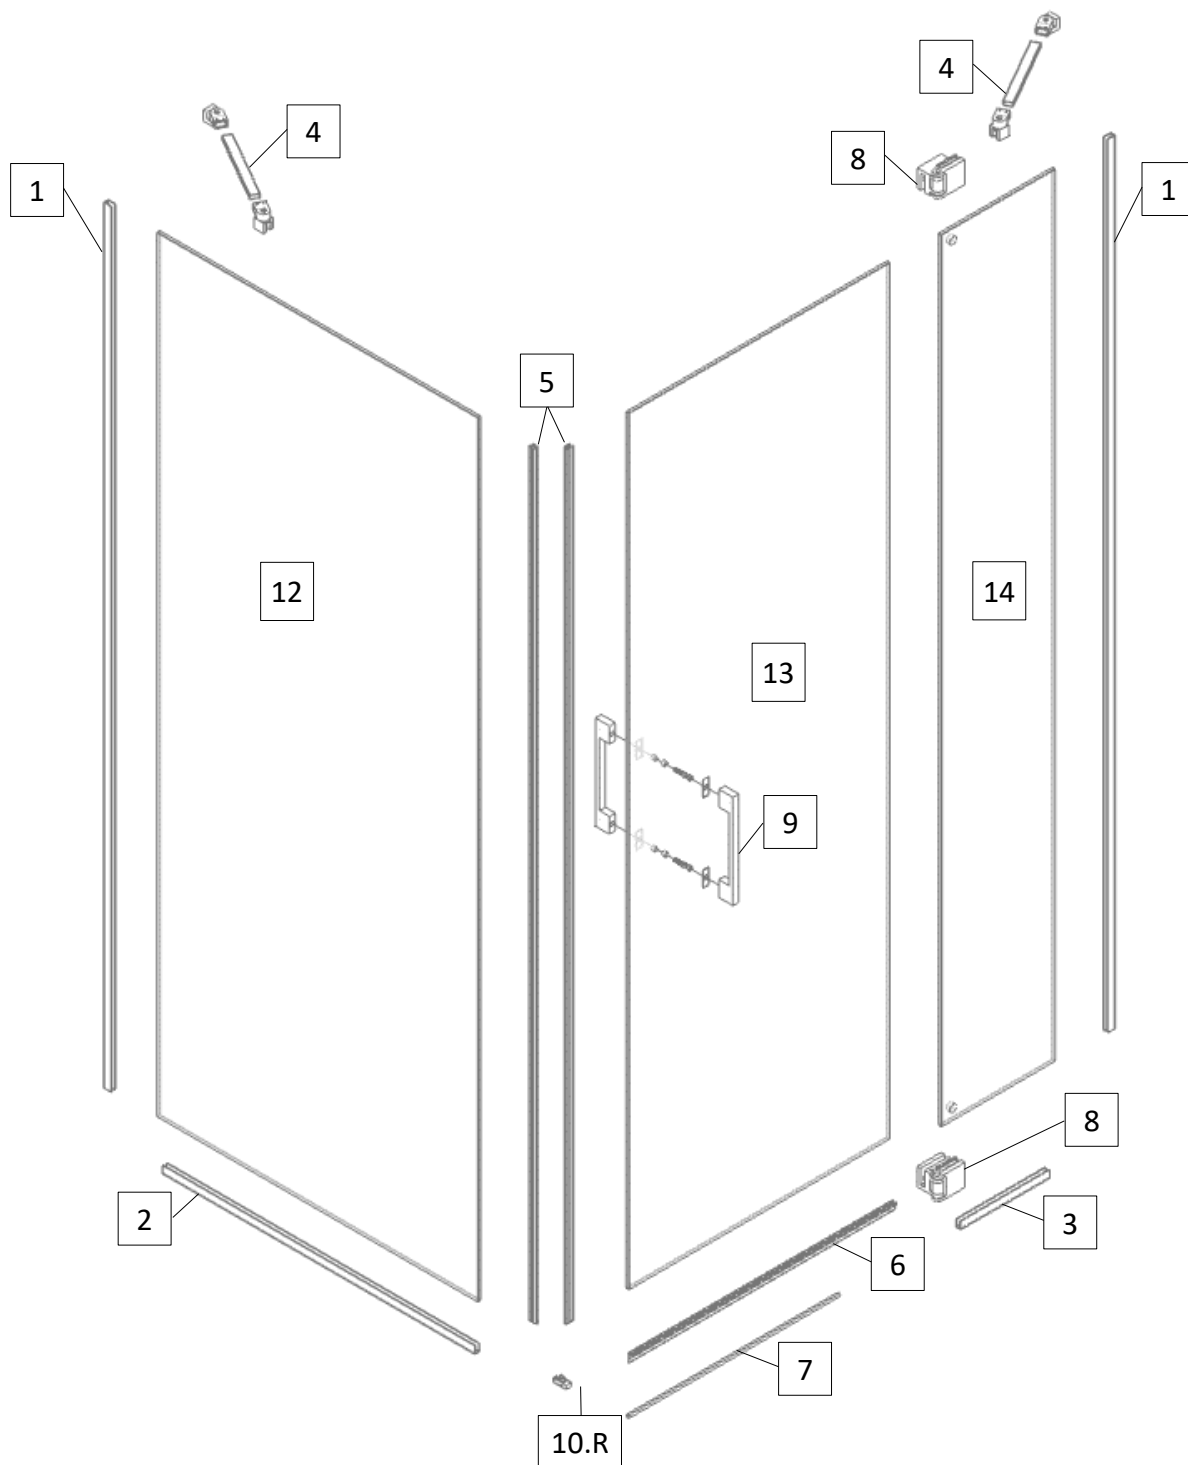





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

### 1.A

GRETA	P, mm	A+B1, mm	C1, mm
80X80GRE	800 x 800	788	782
90X90GRE	900 x 900	888	882
100X100GRE	1000 x 1000	988	982
110X110GRE	1100 x 1100	1088	1082
120X120GRE	1200 x 1200	1188	1182
120X80GRE	1200 x 800	1188	782
120X90GRE	1200 x 900	1188	882

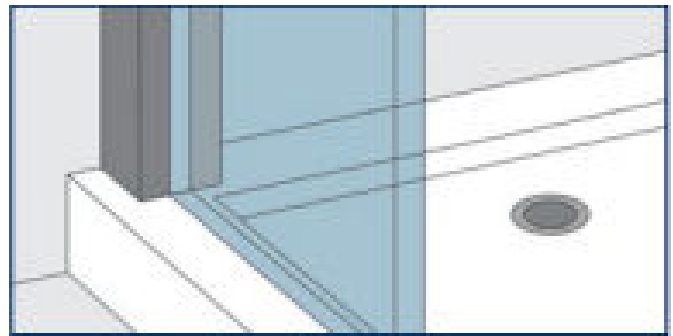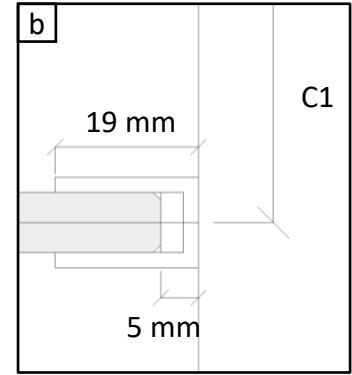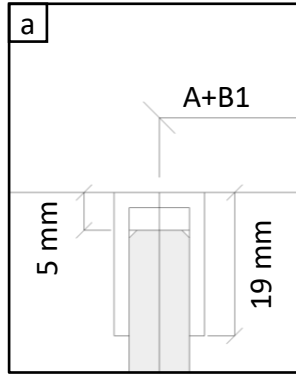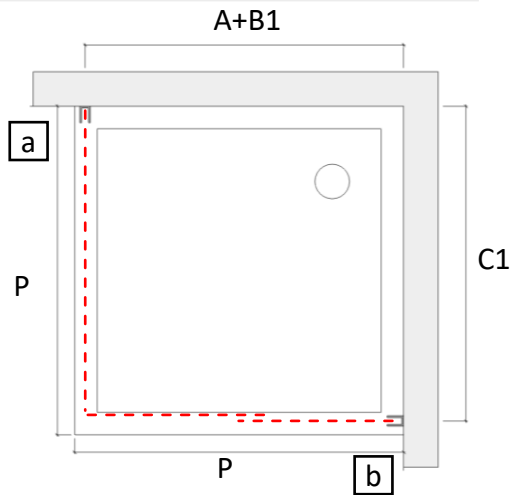

### 1.B

GRETA	D, mm	S, mm
80X80GRE	800	800
90X90GRE	900	900
100X100GRE	1000	1000
110X110GRE	1100	1100
120X120GRE	1200	1200
120X80GRE	1200	800
120X90GRE	1200	900

