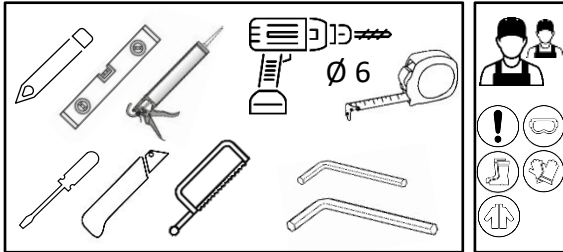









# KAIRA BLACK ALU


## Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions



1.		DZT100CHR10X 20 + SK2SET 1	1
2.		PAL-01	1
3.		PAL-01B	1
4.		PAL-01S	1
5.		PAL-01T	1
6.		3,5x35 SK1SET Ø 6	1
7.		8 mm Safety Glass	1

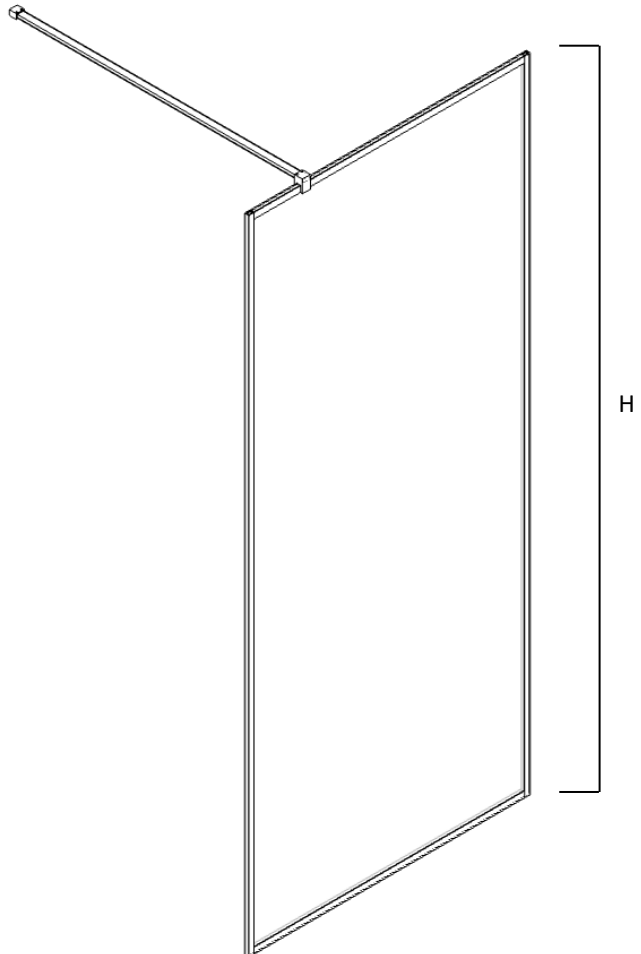

KAIRA BLACK ALU	A (mm)	H (mm)
60KAI_B-alu	568-573	1988
70KAI_B-alu	668-673	1988
80KAI_B-alu	768-773	1988
90KAI_B-alu	868-873	1988
100KAI_B-alu	968-973	1988
110KAI_B-alu	1068-1073	1988
120KAI_B-alu	1168-1173	1988




LEFT

RIGHT



# KAIRA BLACK ALU

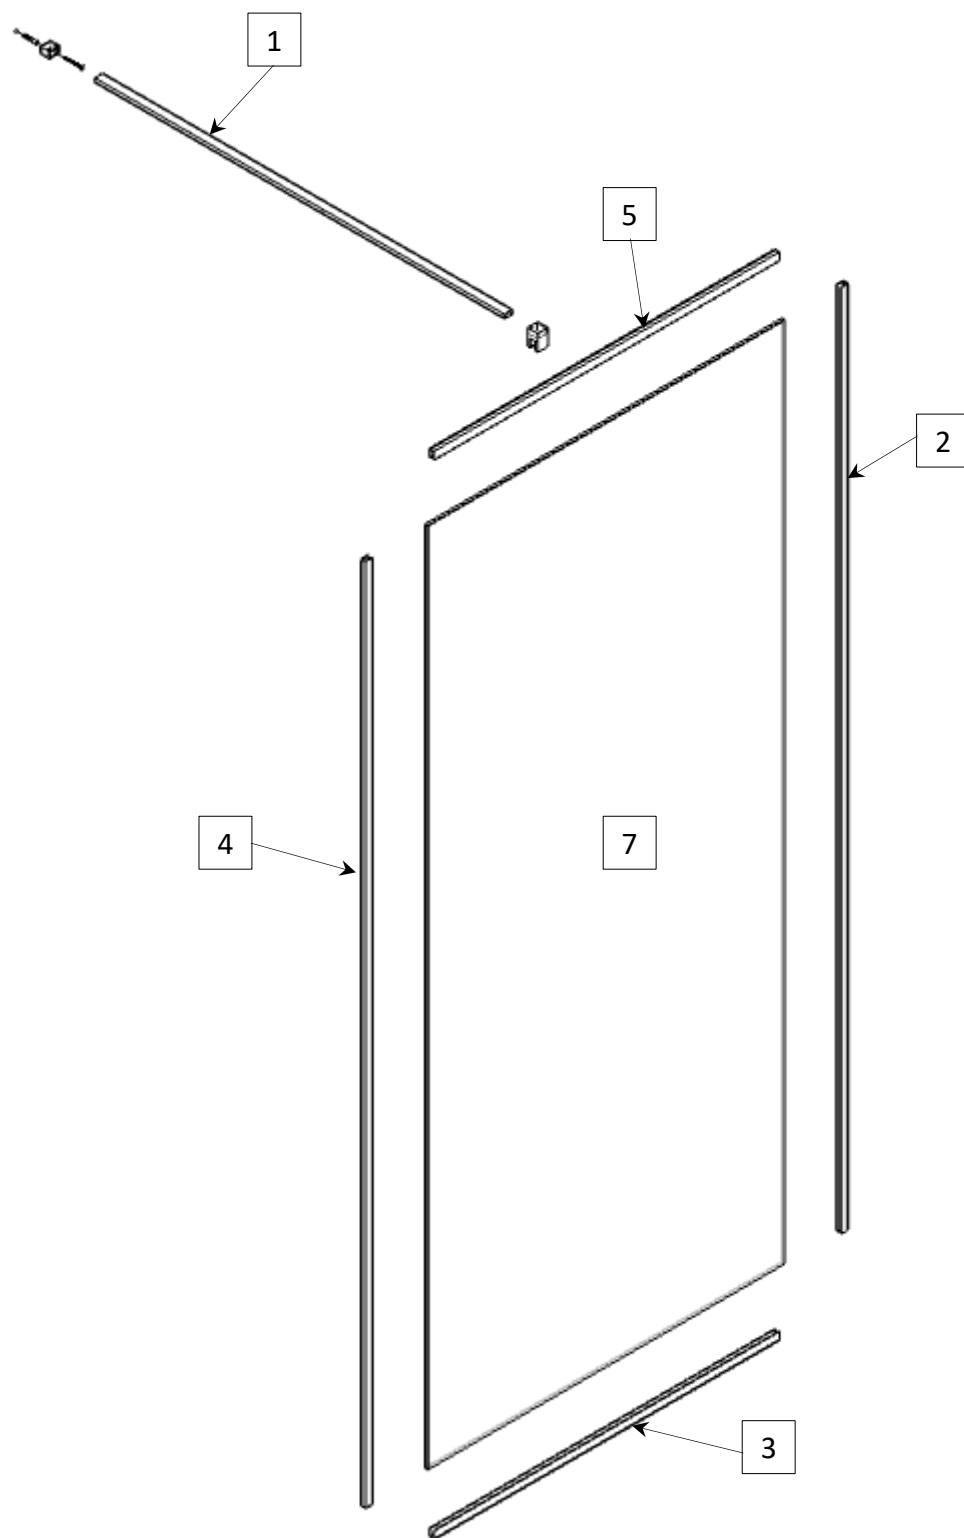

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

