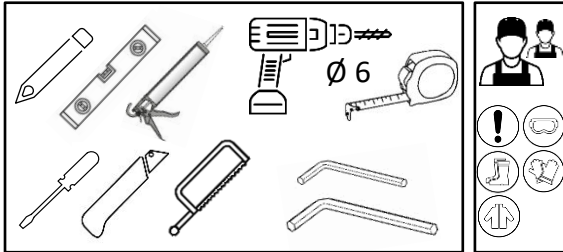







KAIRA BLACK DEEP


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions



1.		DZT100CHR10X 20 + SK2SET 1	1
2.		PAL-01	1
3.		PAL-01B	1
4.		3,5x35 SK1SET Ø 6	1
5.		8mm LVS_EN 12150 2:2004	1

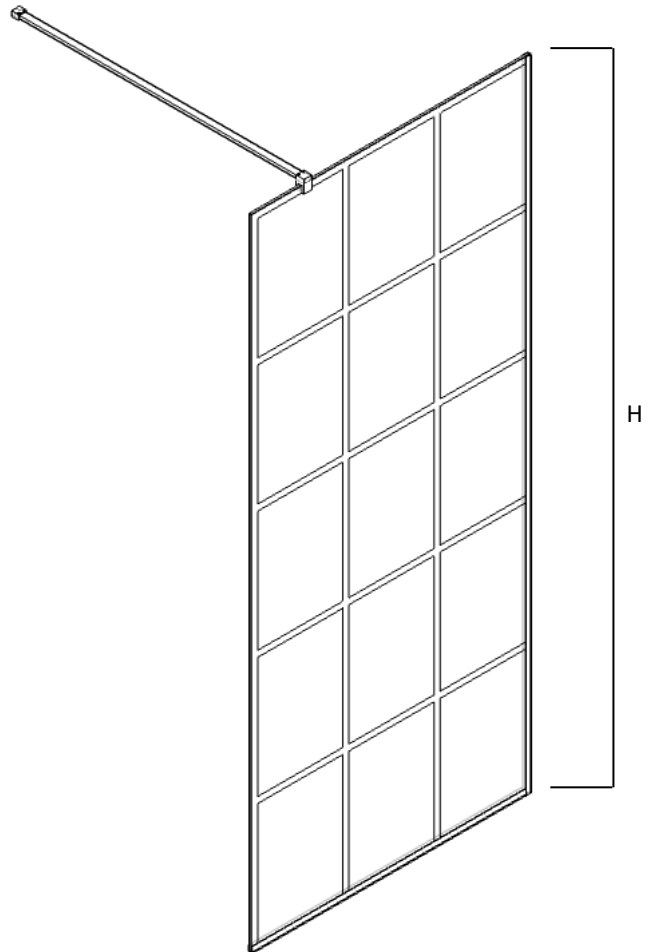

KAIRA BLACK DEEP	A (mm)	H (mm)
60KAI_B_D	568-573	1988
70KAI_B_D	668-673	1988
80KAI_B_D	768-773	1988
90KAI_B_D	868-873	1988
100KAI_B_D	968-973	1988
110KAI_B_D	1068-1073	1988
120KAI_B_D	1168-1173	1988




LEFT


RIGHT



KAIRA BLACK DEEP

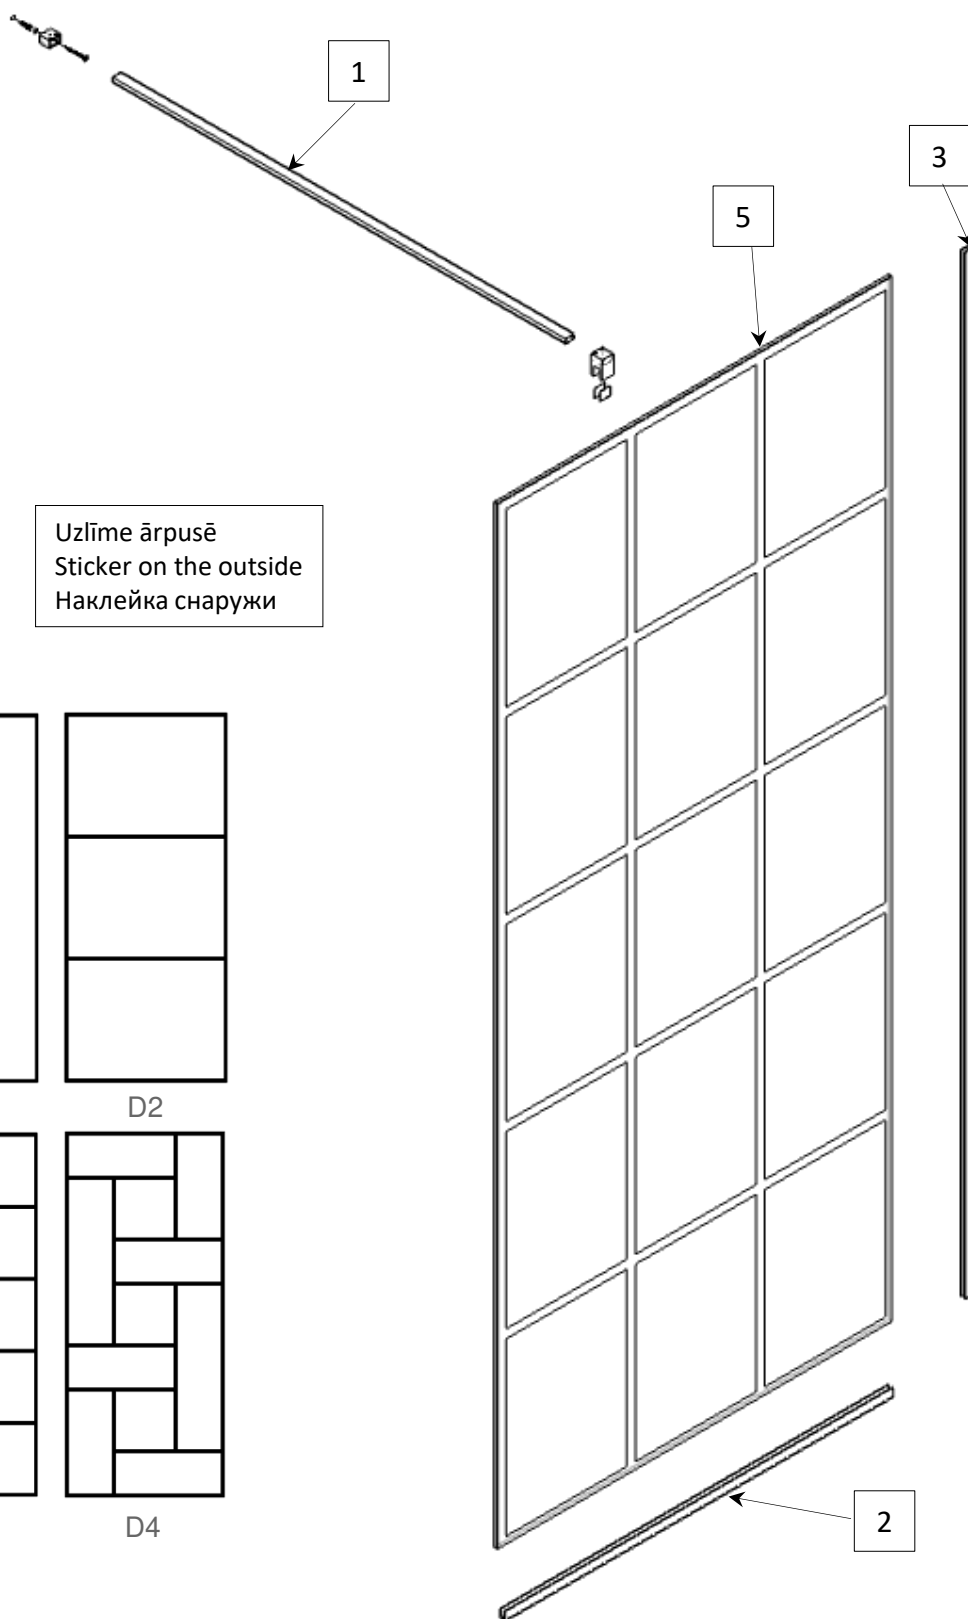


Uzlīme ārpusē
Sticker on the outside
Наклейка снаружи

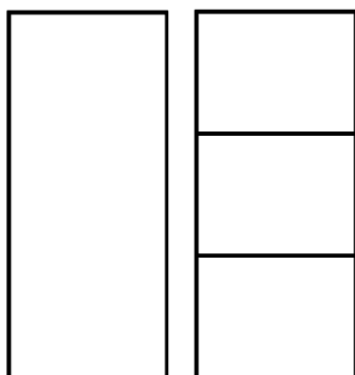


D1

D2

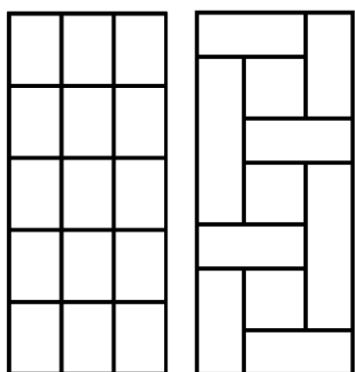

D3

D4

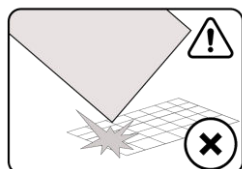

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

