


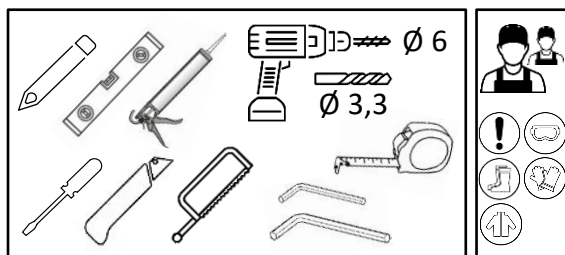














KLAUDIJA


Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions





1.		VIRA20CH	1
2.		GC-2032	1
3.		MF-43MAGN	1
4.		MF-32/6-ER	1
5.		R1656725	1
6.		R1656715	2
7.		SC-ALU8X9NEW	1
8.R		SC-SL-UZL180R	1
8.L		SC-SL-UZL180L	1
9.		NLO-ZD-2856	1
10.		M981R - 180CH / M981L - 180CH	2
11.		3,5x35 SK1SET; Ø 6	2
12.		3,5x13 SK2SET	2
13.		6 mm Safety Glass	1
14.		6 mm Safety Glass + VIRA20CH	1


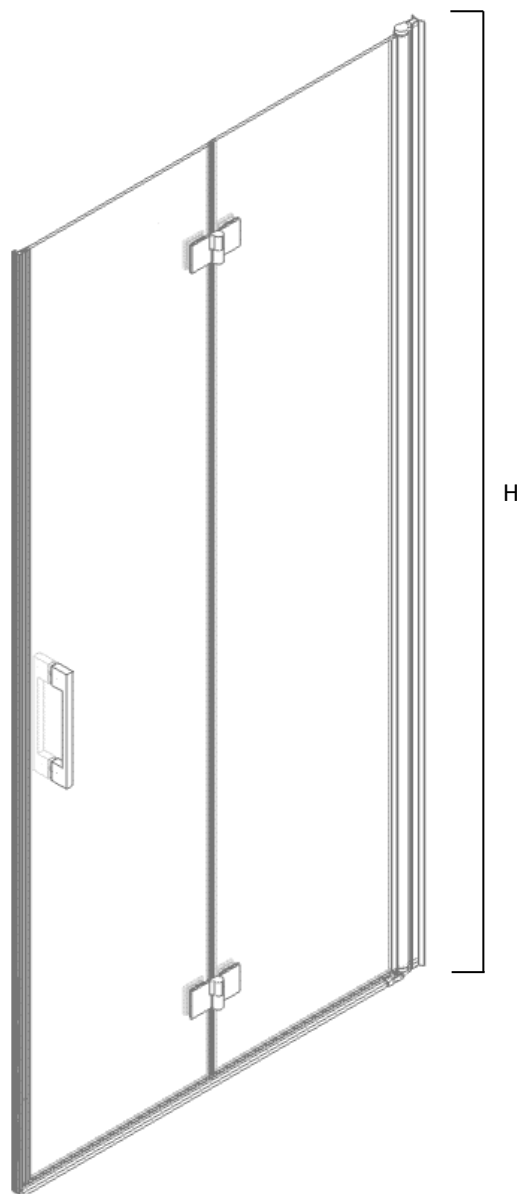


LEFT

RIGHT

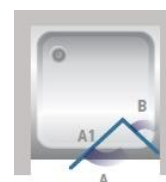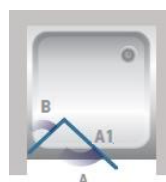












KLAUDIJA	A+B (mm)	B (mm)	H (mm)
60KLA	595-602	300/300	1993
70KLA	695-703	350/350	1993
80KLA	795-803	400/400	1993
90KLA	895-903	450/450	1993
100KLA	995-1003	500/500	1993






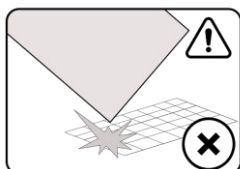
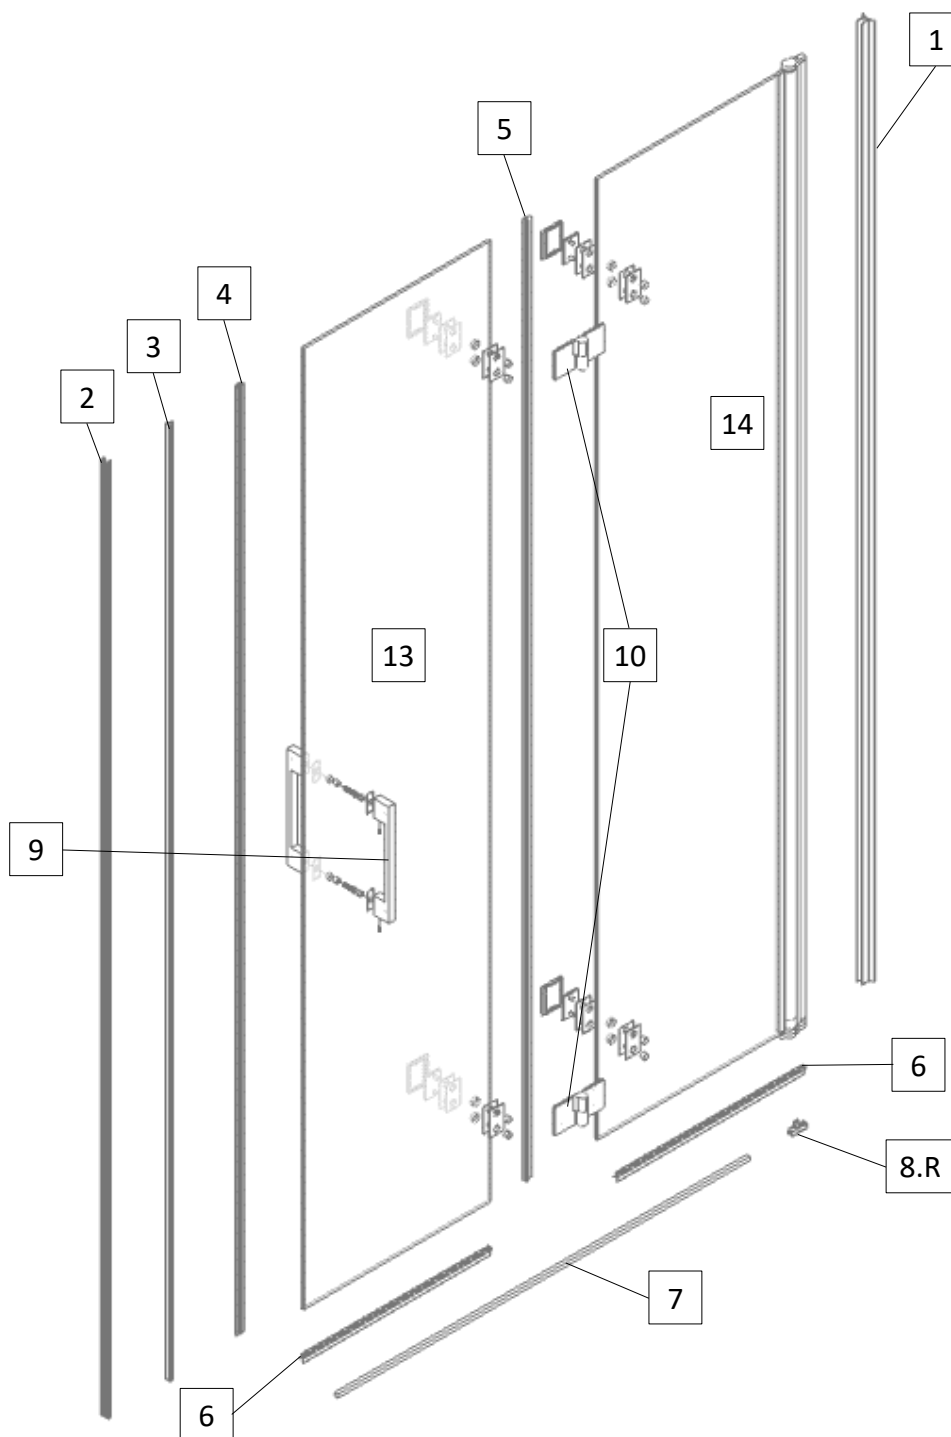


Uzmanību! Rūdīts stikls - rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.


Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

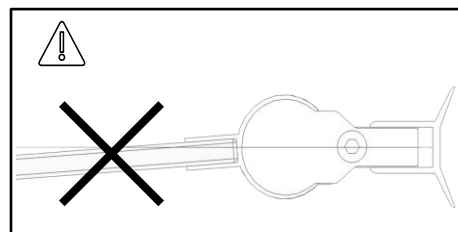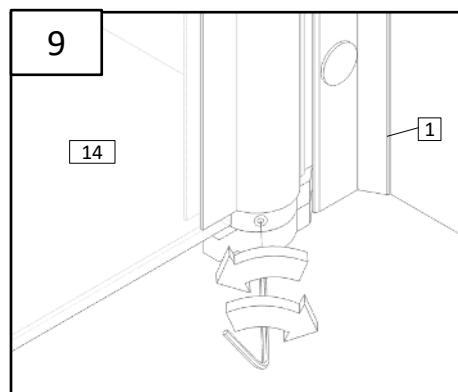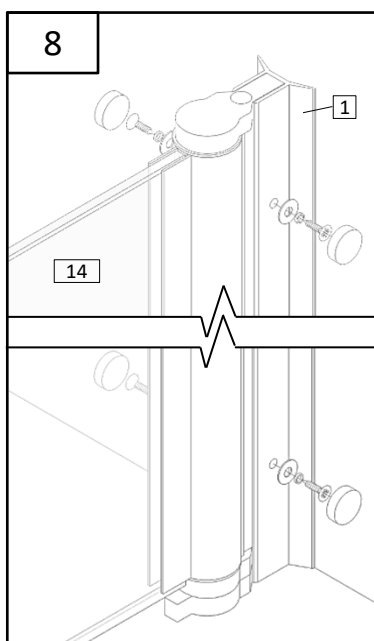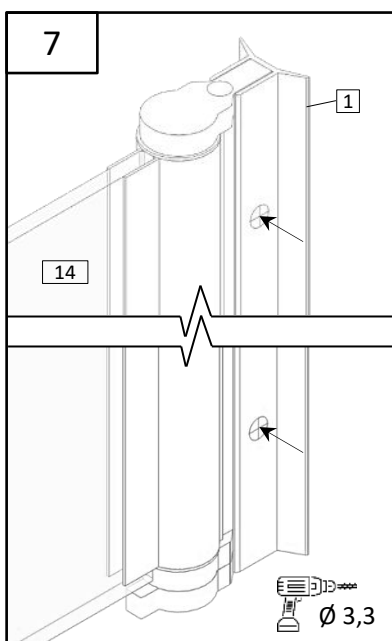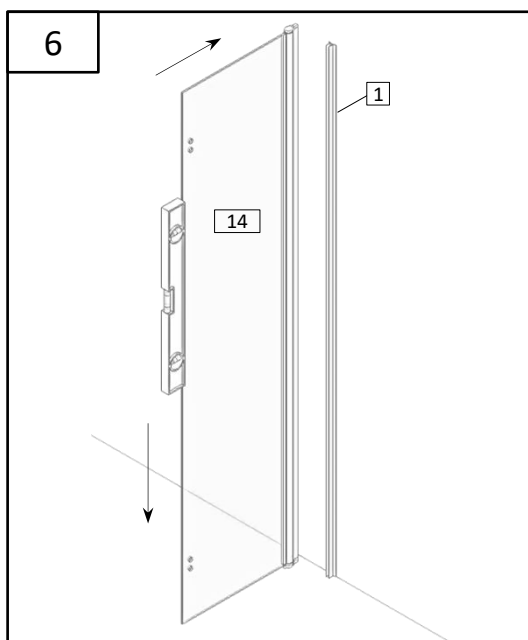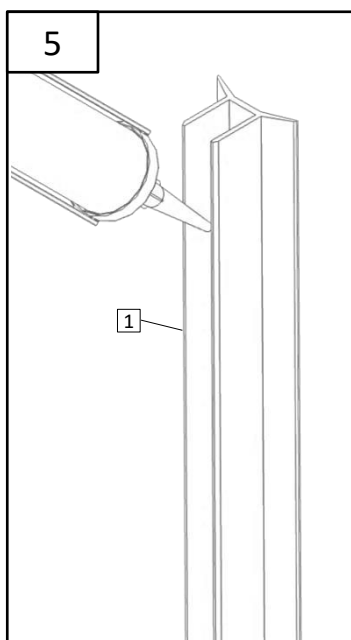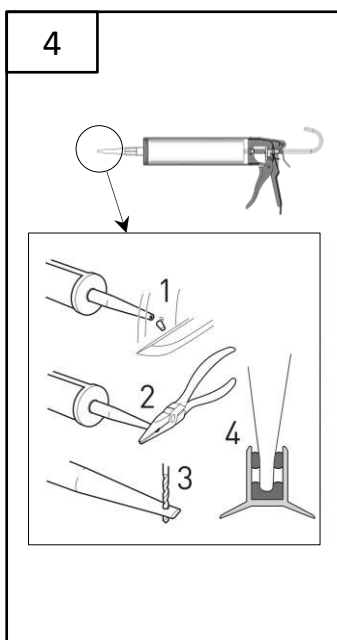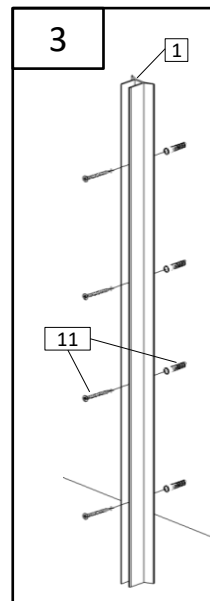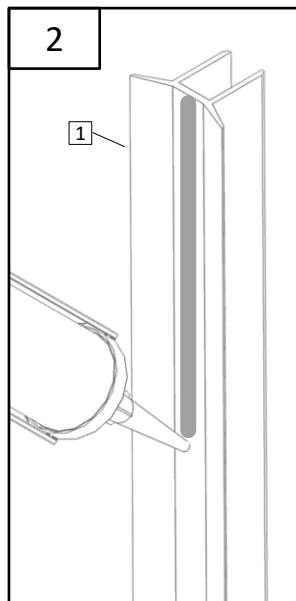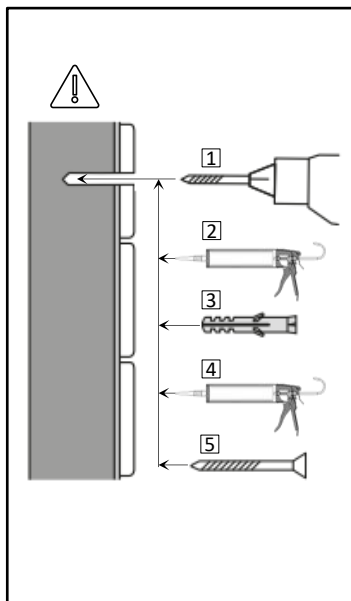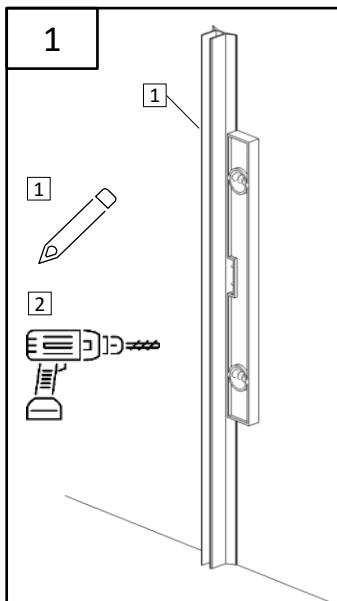

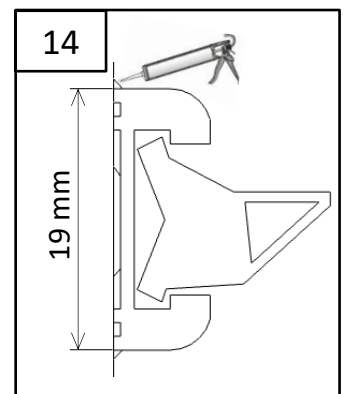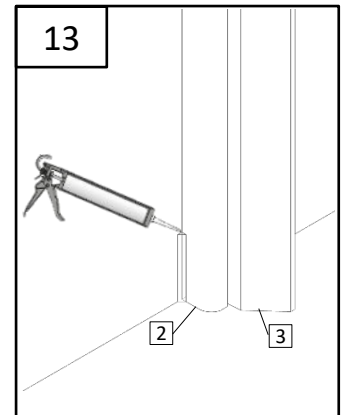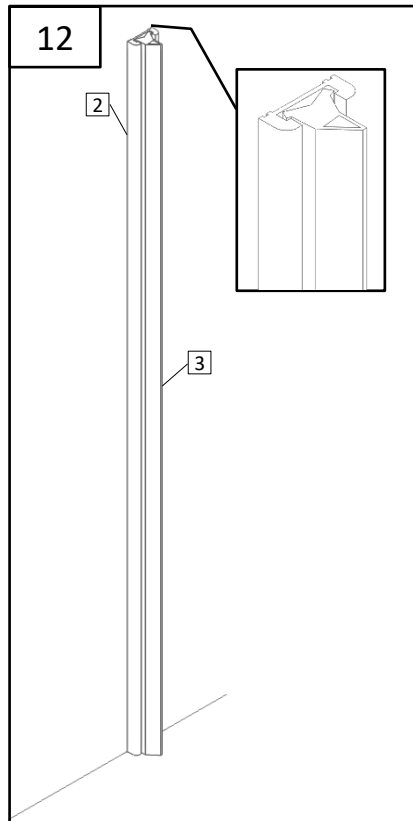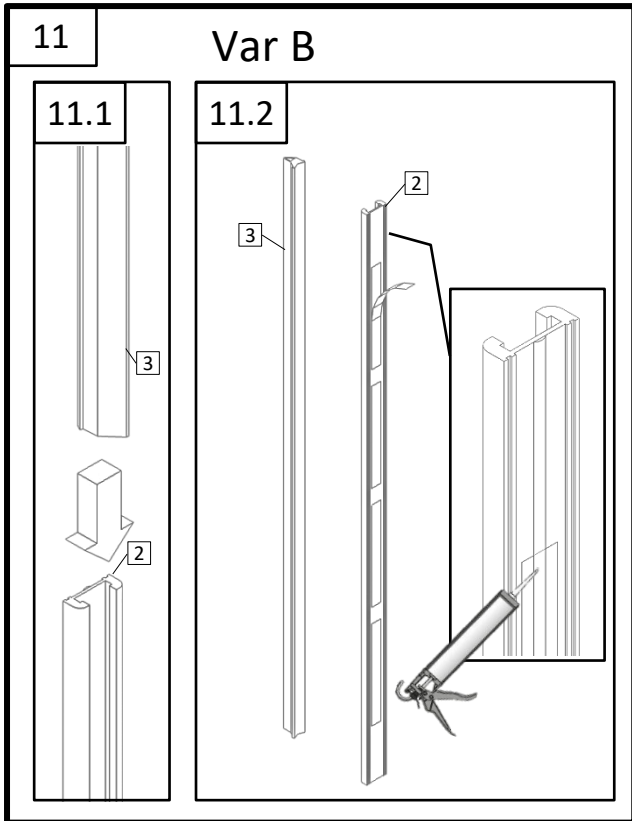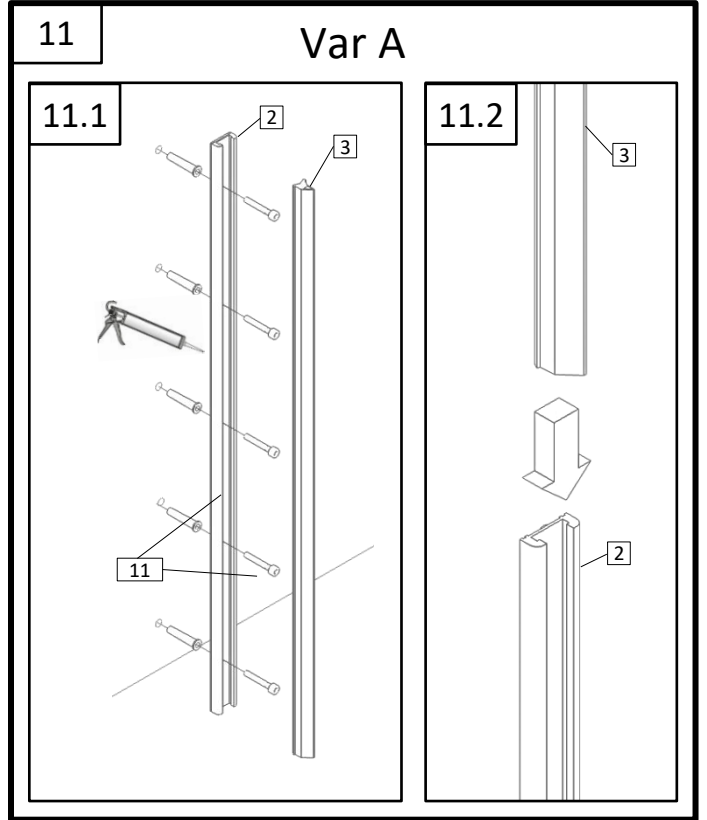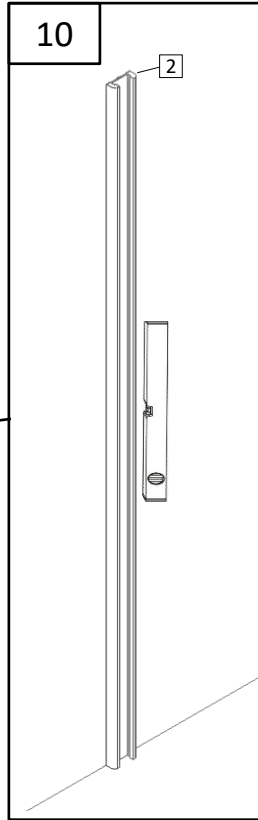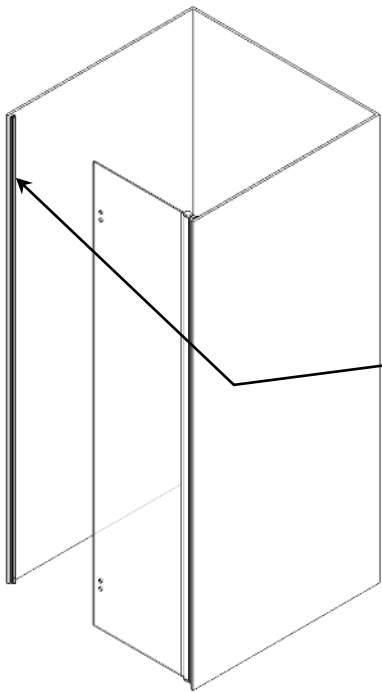



RIGHT

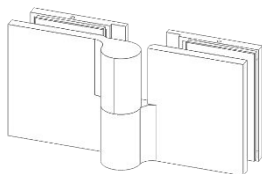

LEFT

