


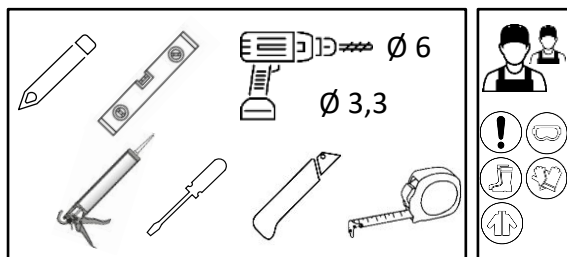















LARA

Dušas durvju montāžas instrukcija


Инструкция по монтажу душевой двери

Shower door installation instructions



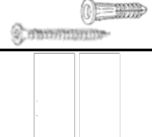1.		R22-01	1
2.		R22-02	1
3.		R22-04	1
4.		R22-05	1
5.		R22-06	1
6.		R22-07	1
7.		R22-08	1
8.		R22-09	1
9.		R22-10	2
10.		R22-11	3
11.		R22-12	1
12.		LUX – CH - 2856G	1
13.		MF-29-5MAGN	1
14.		8850KUO-8-2010	1
15.		3,5X35 3K1SET	1
16.		6 mm Safety Glass	2
17.			



LARA	A+B (mm)	H (mm)
80LAR	470-800	2000
90LAR	520-900	2000
100LAR	570-1000	2000
110LAR	620-1100	2000
120LAR	670-1200	2000
130LAR	720-1300	2000
140LAR	770-1400	2000
150LAR	820-1500	2000

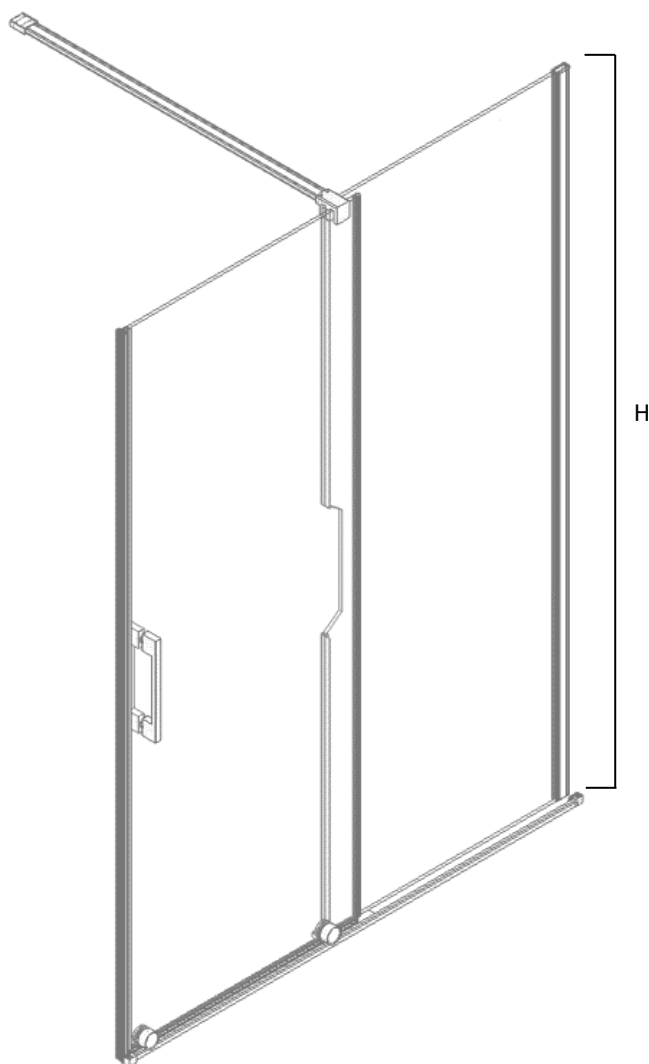

LEFT

RIGHT



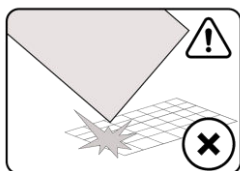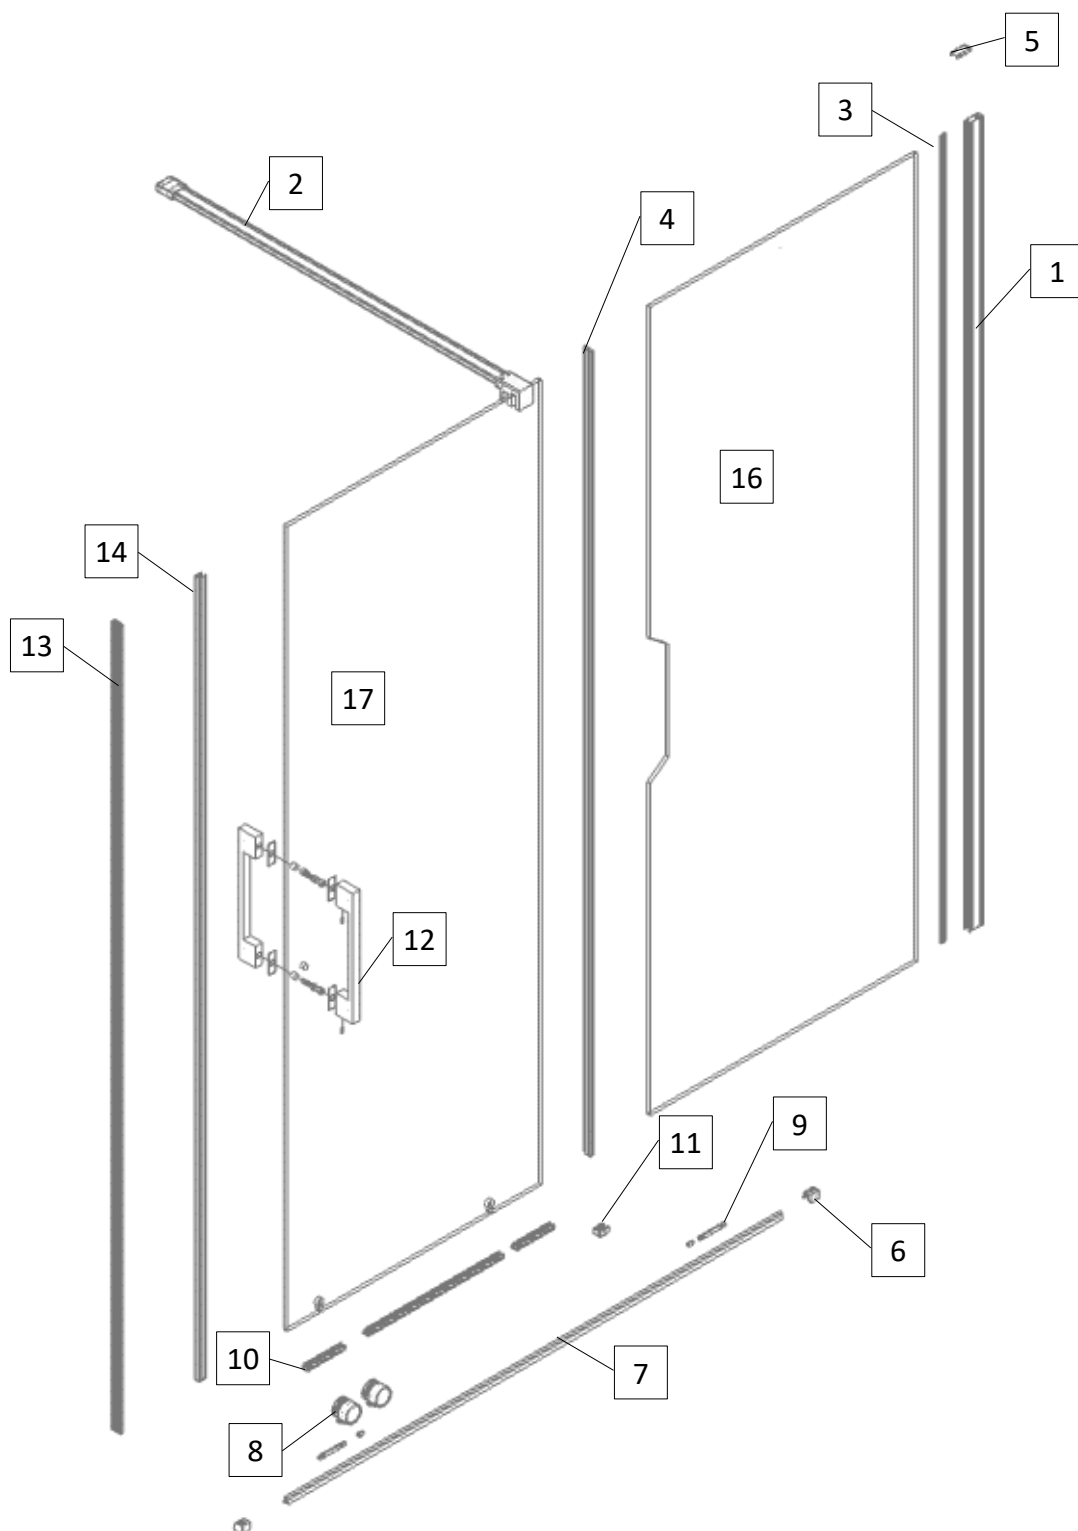

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

