


# LAURA

## Dušas kabīnes montāžas instrukcija



Инструкция по монтажу душевой кабины

Shower enclosure installation assembly

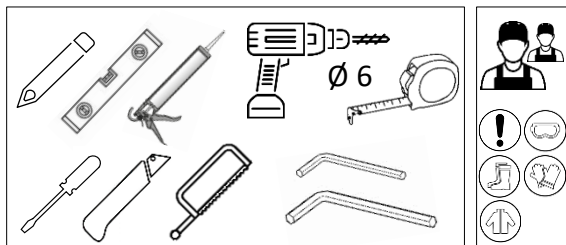


1.		PAL-01	1
2.		PAL-01B	1
3.		PAL-02B	1
4.		VIRA20CH	1
5.		DZT1000CHRD19	1
6.		MF-36/6-ER	1
7.		MF-42/8-ER	1
8.		400211PS-013	1
9.		DR-CH32	1
10.R		SC-SL-UZL180R	1
11.R		SC-SL-UZL90R	1
10.L		SC-SL-UZL180L	1
11.L		SC-SL-UZL90L	1
12.		SC-ALU8X9NEW	1
13.		3,5x13 SK2SET	1
14.		3,5x35 SK1SET; Ø 6	2
15.		8 mm Safety Glass	1
16.		6 mm Safety Glass +VIRA20CH	1
17.		6 mm Safety Glass +VIRA20CH	1



LAURA	A + B (mm)	C (mm)	H (mm)
80X80LAU	794-800	787-792	1993
90X90LAU	894-900	887-892	1993
100X100LAU	994-1000	987-992	1993
110X110LAU	1094-1100	1087-1092	1993
120X120LAU	1194-1200	1187-1192	1993
120X80LAU	1194-1200	787-792	1993
120X90LAU	1194-1200	887-892	1993

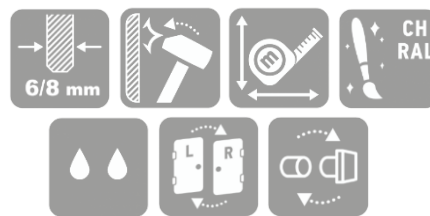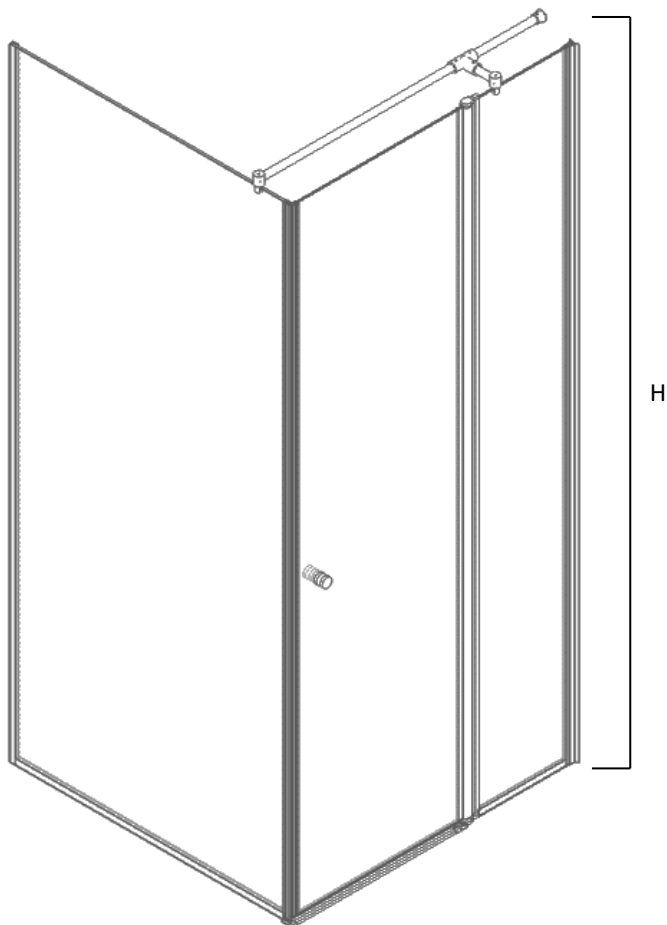

LEFT

RIGHT

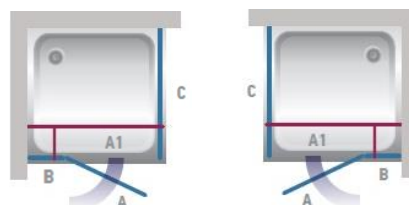

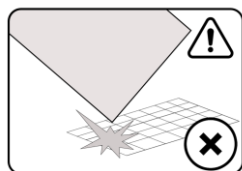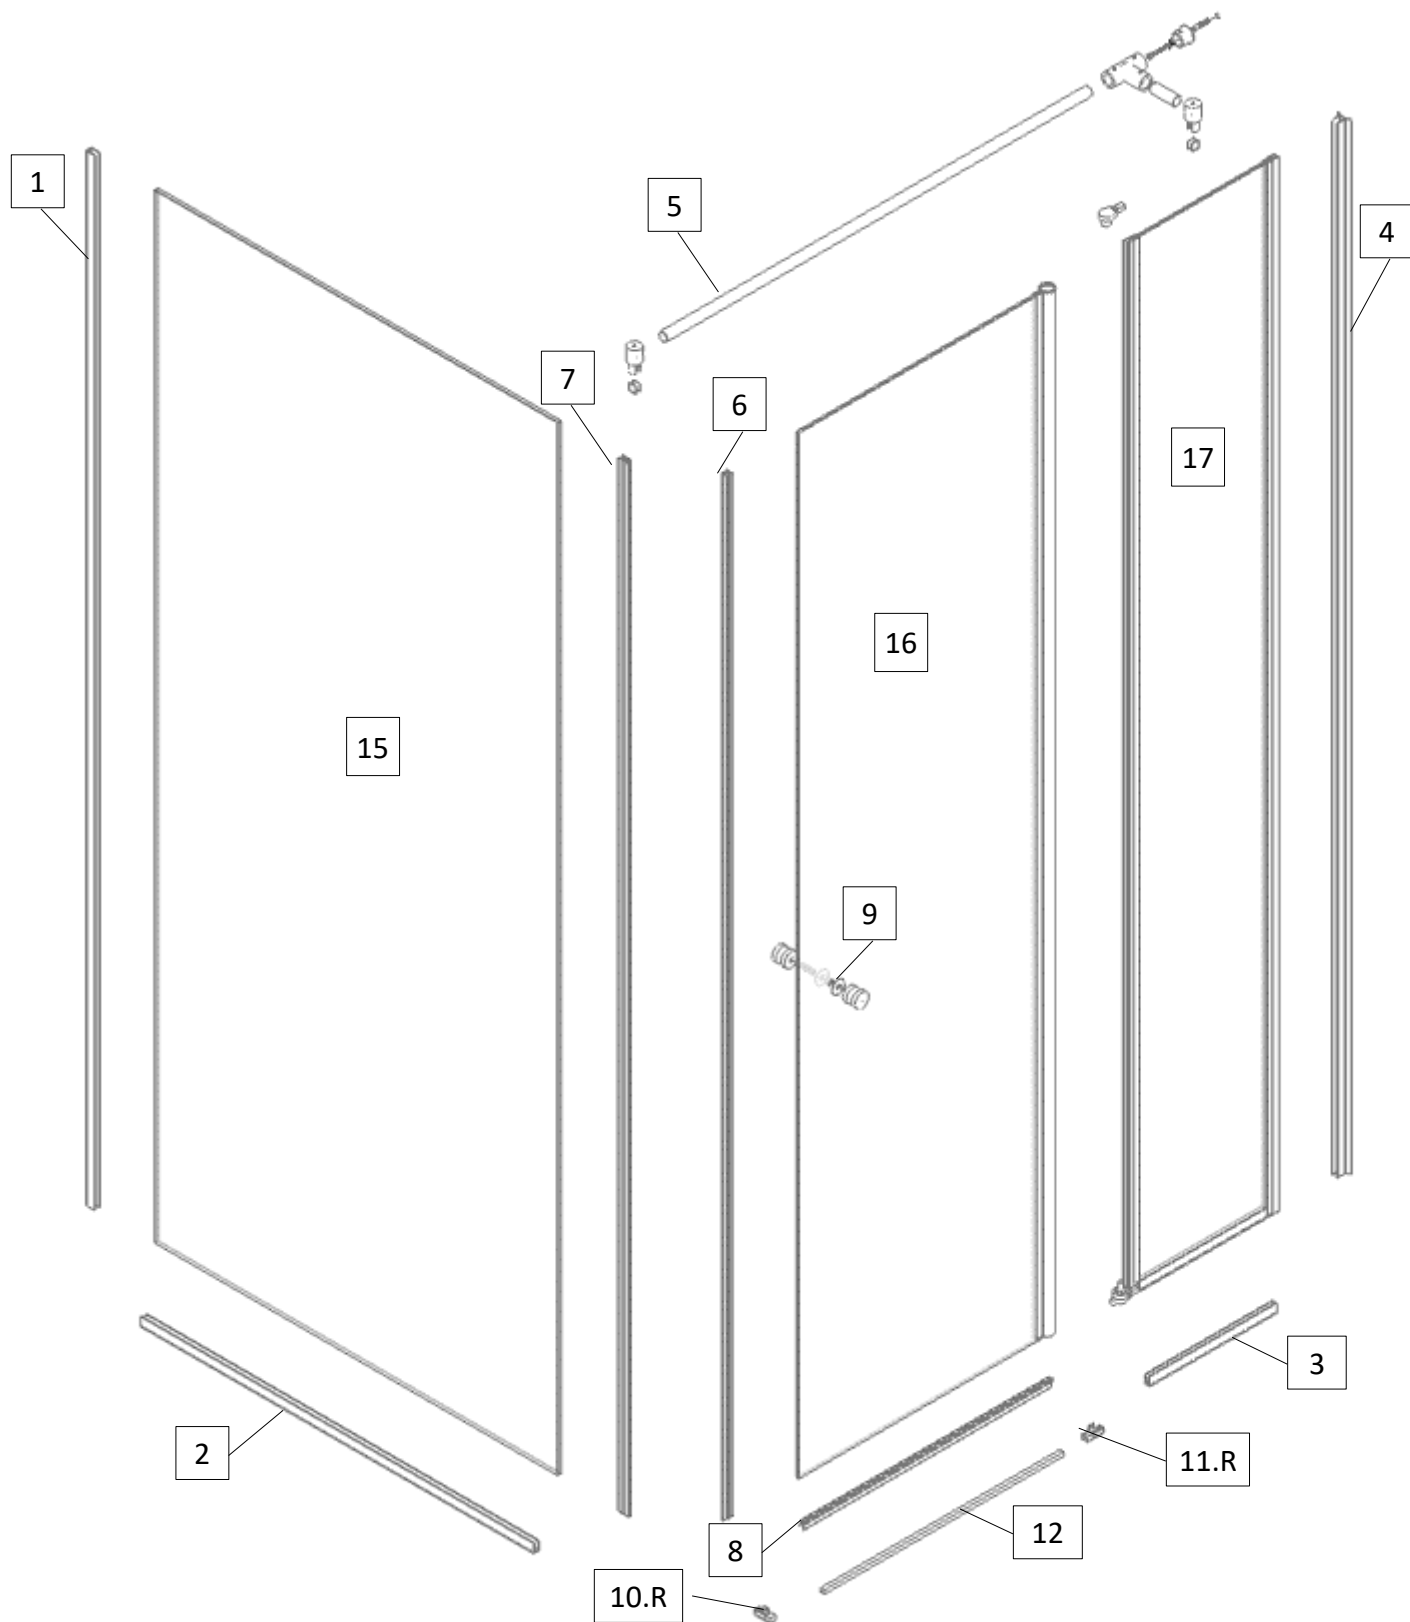





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.





# 1.A









LAURA	P (mm)	A+B1 (mm)	C1 (mm)
80X80LAU	800 x 800	788	783
90X90LAU	900 x 900	888	883
100X100LAU	1000 x 1000	988	983
110X110LAU	1100 x 1100	1088	1083
120X120LAU	1200 x 1200	1188	1183
120X80LAU	1200 x 800	1188	1183
120X90LAU	1200 x 900	1188	1183







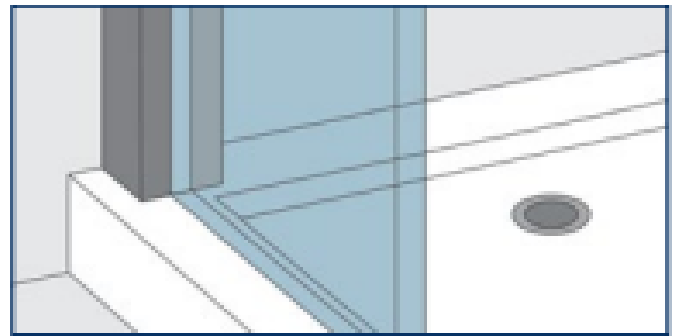
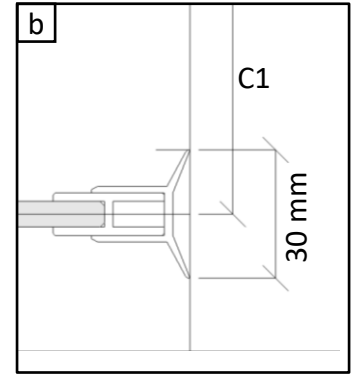
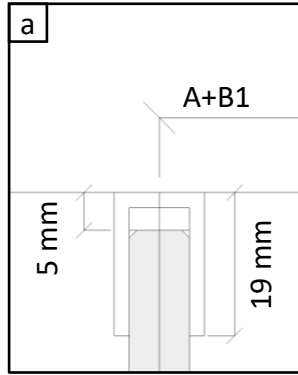
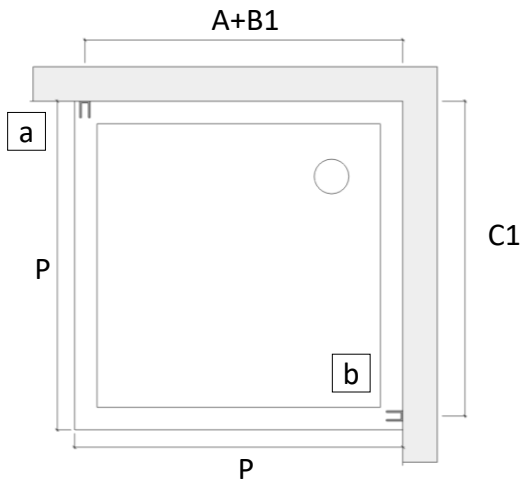









# 1.B






LAURA	D (mm)	S (mm)
80X80LAU	800	800
90X90LAU	900	900
100X100LAU	1000	1000
110X110LAU	1100	1100
120X120LAU	1200	1200
120X80LAU	1200	800
120X90LAU	1200	900


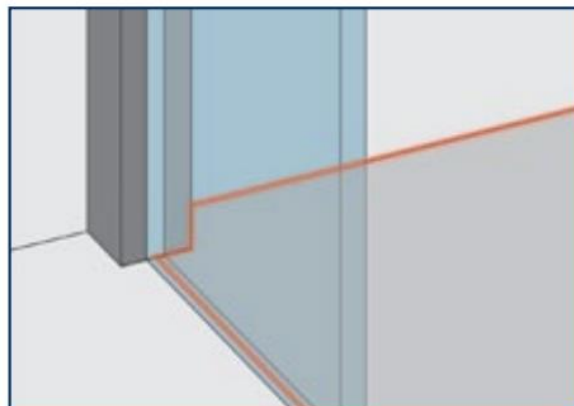
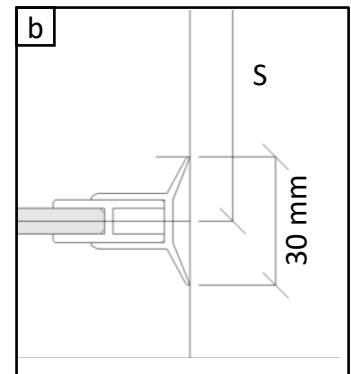
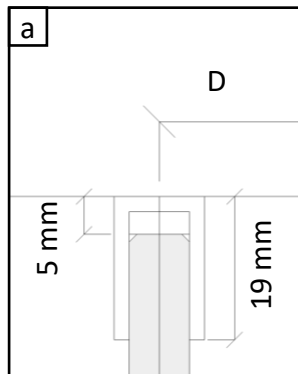
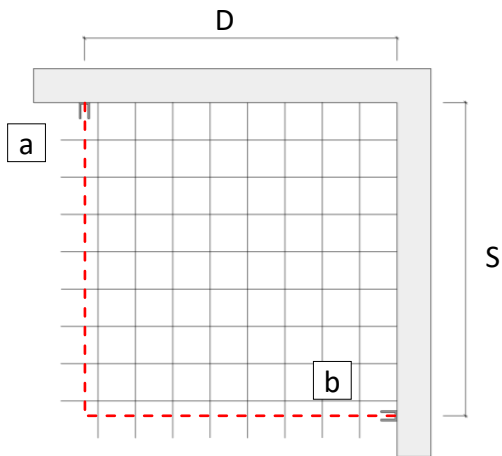


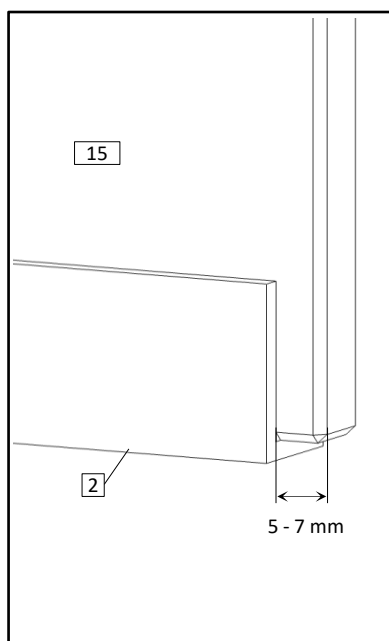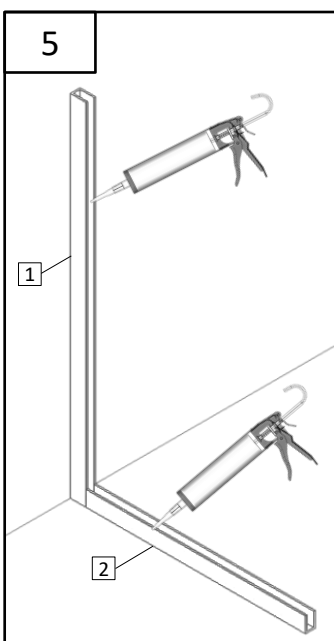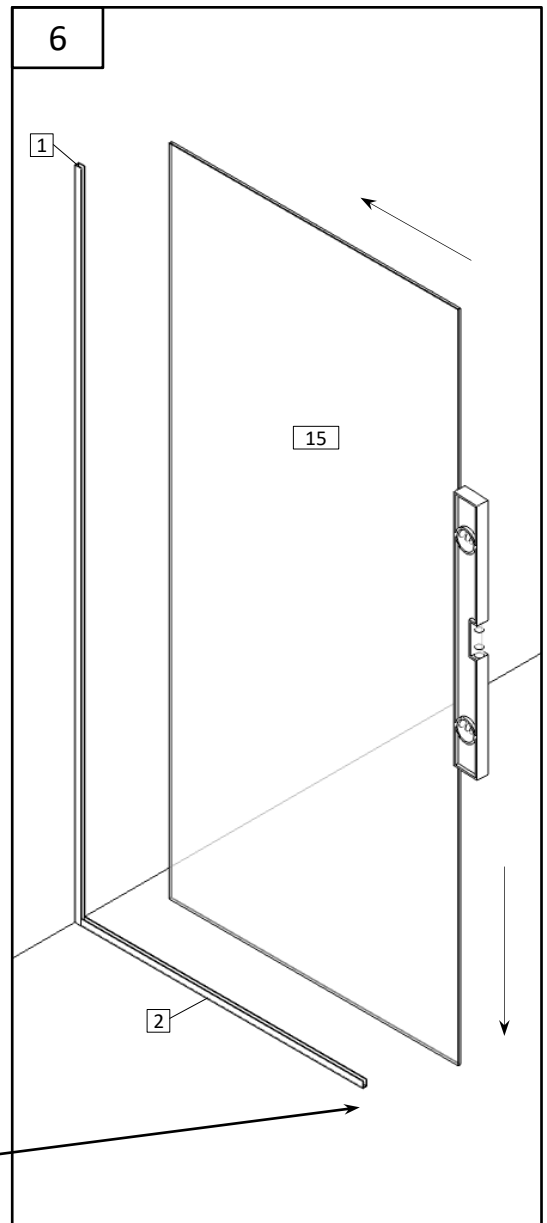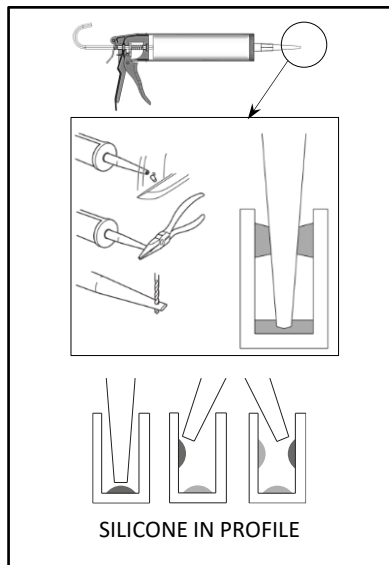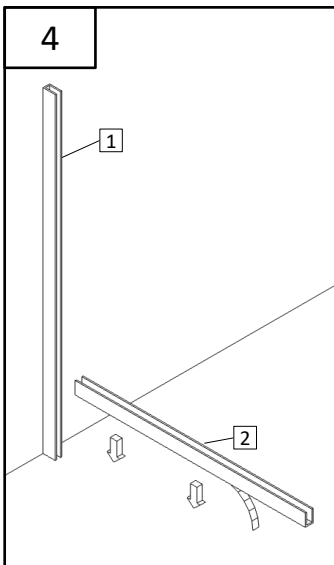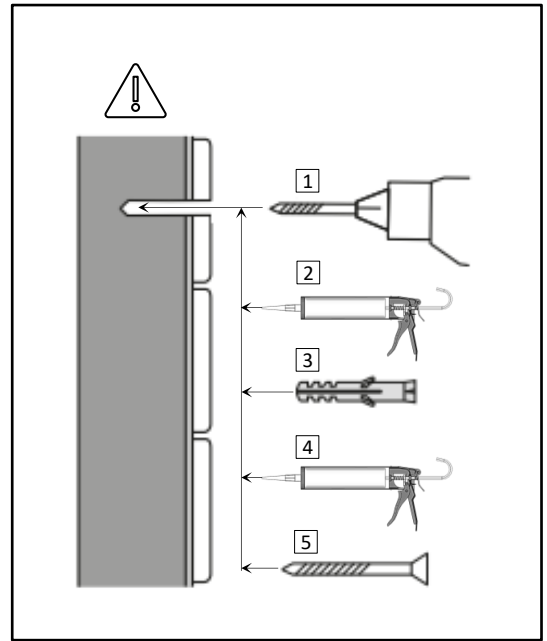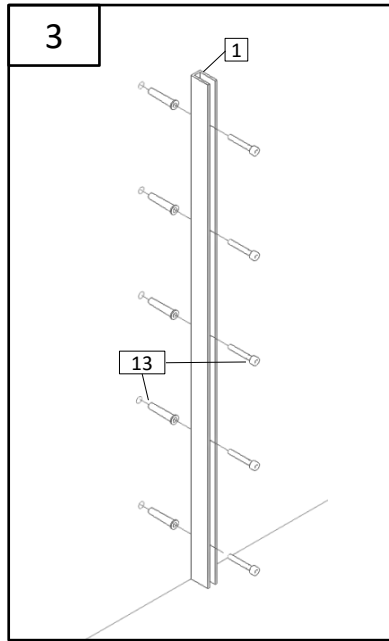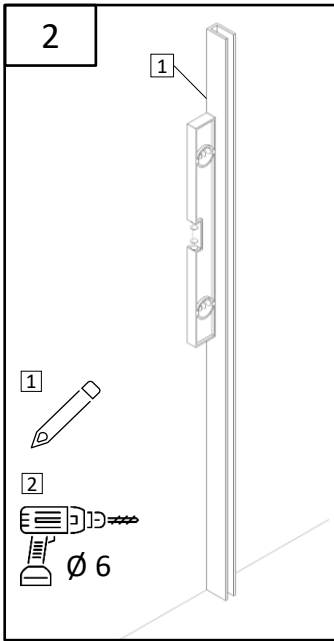

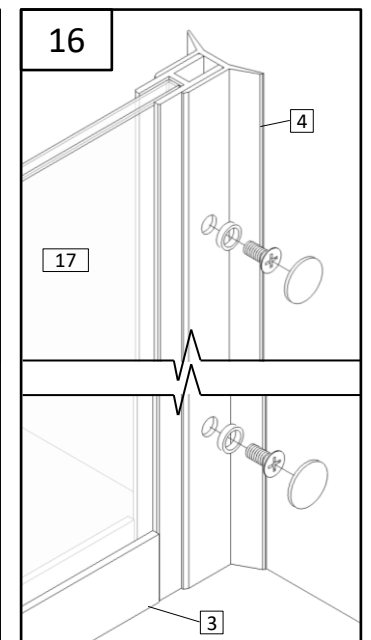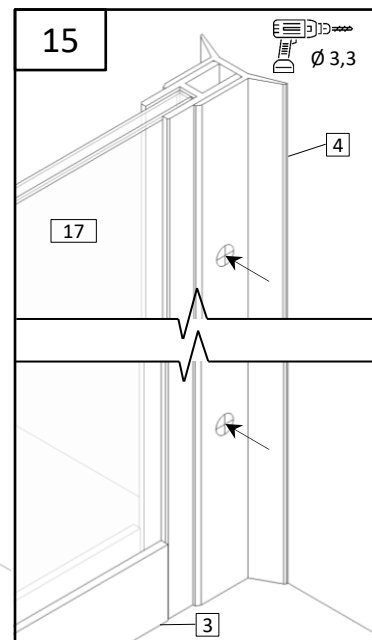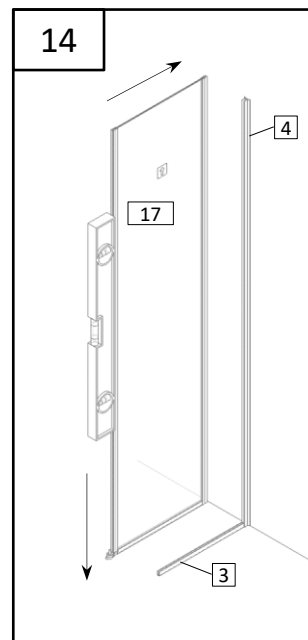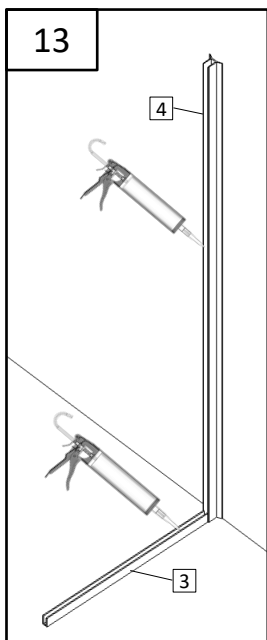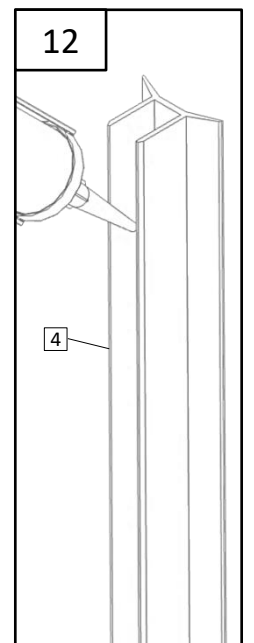
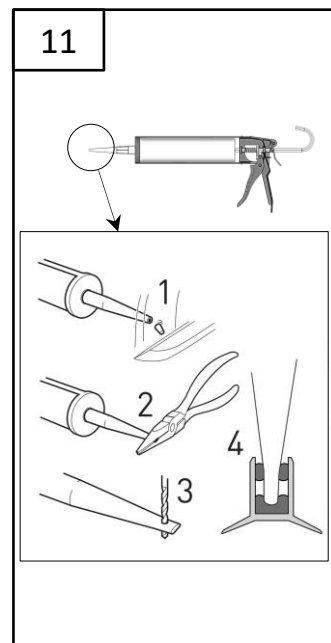
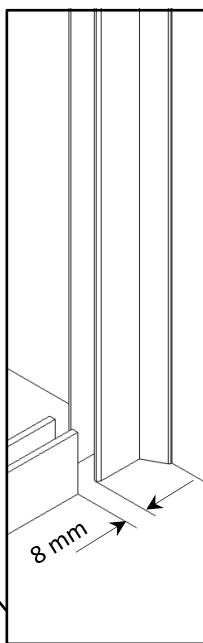
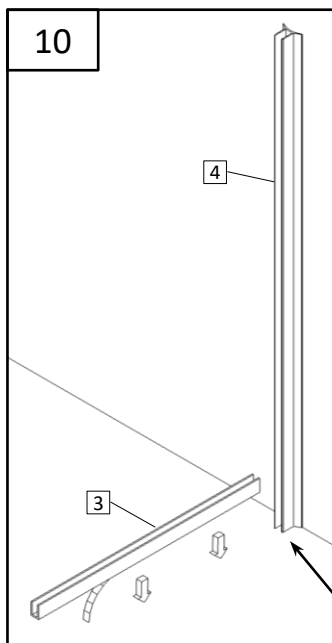
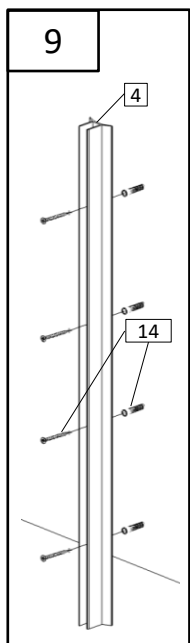
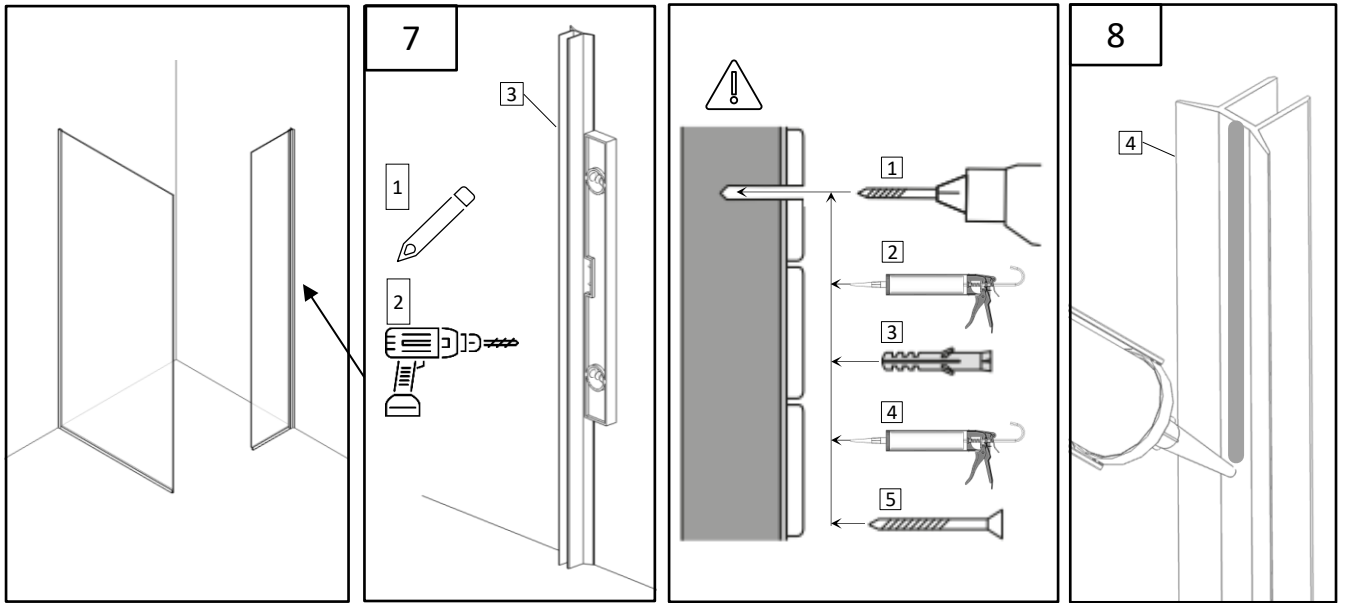


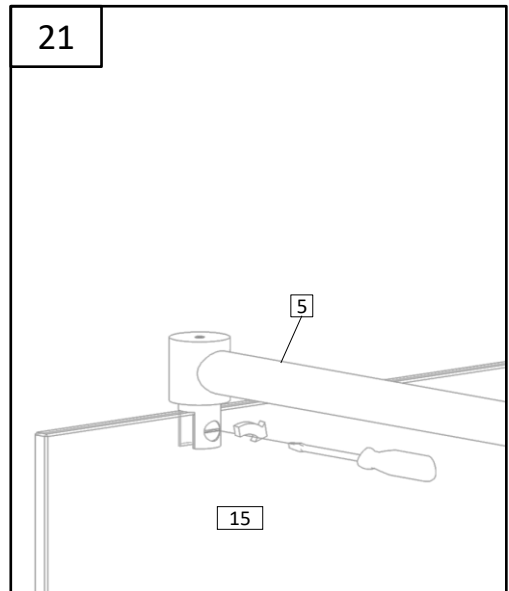
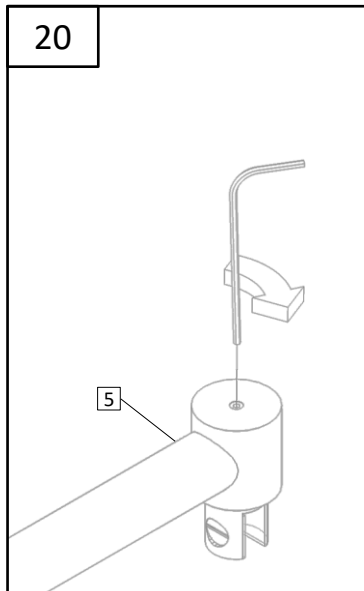
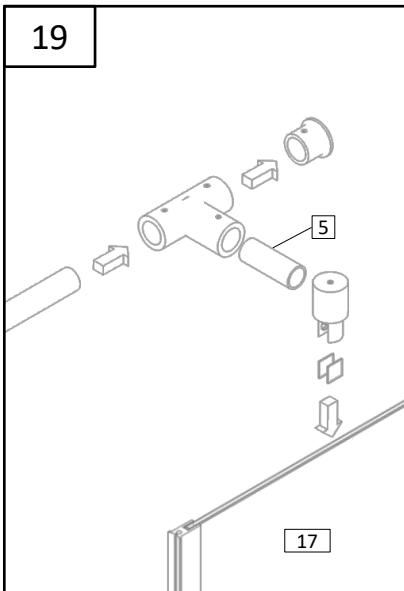
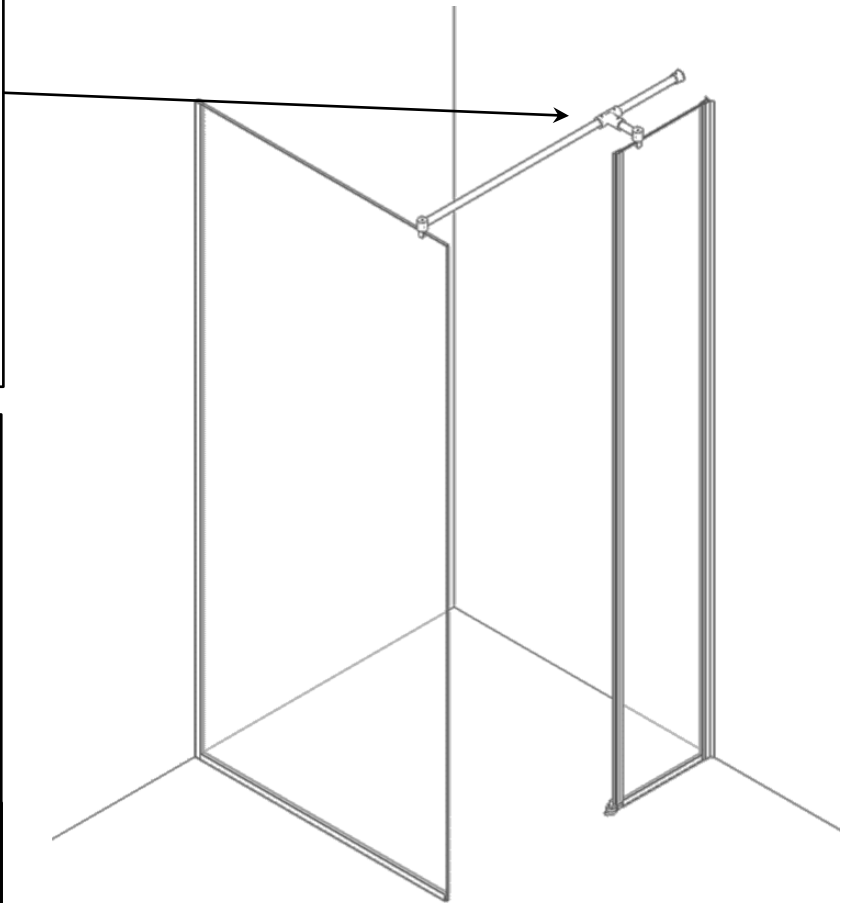
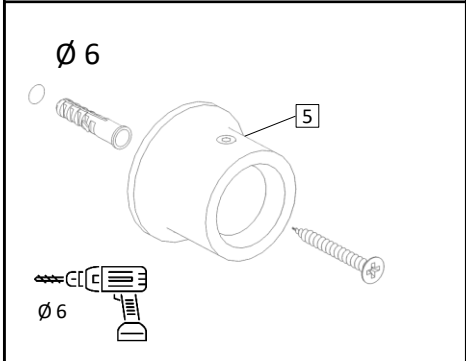
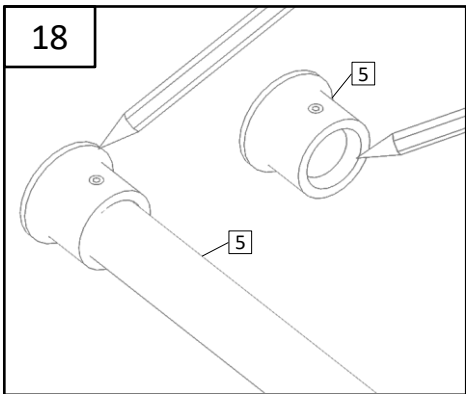
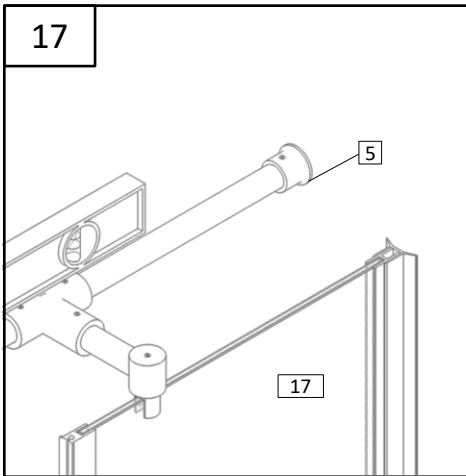


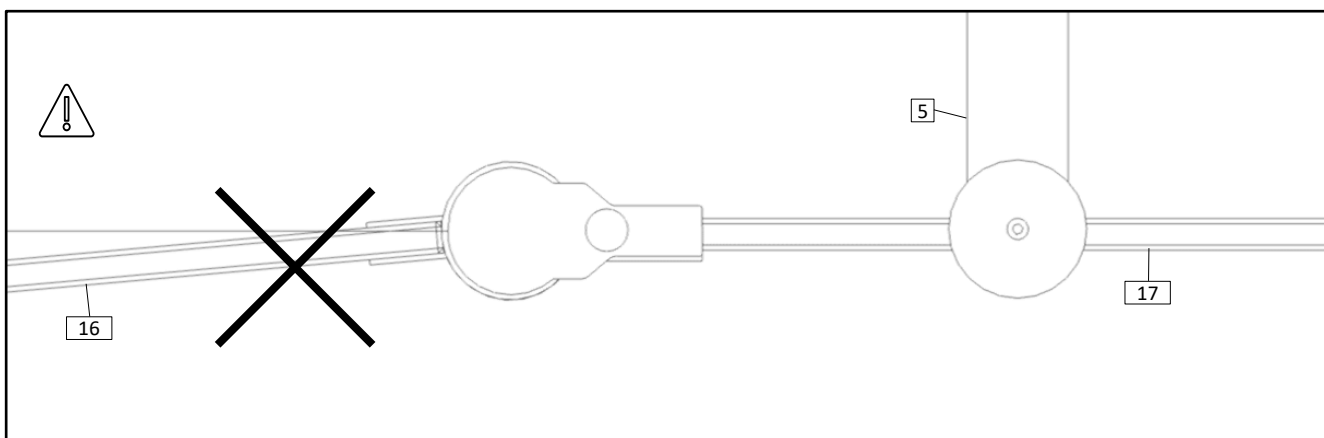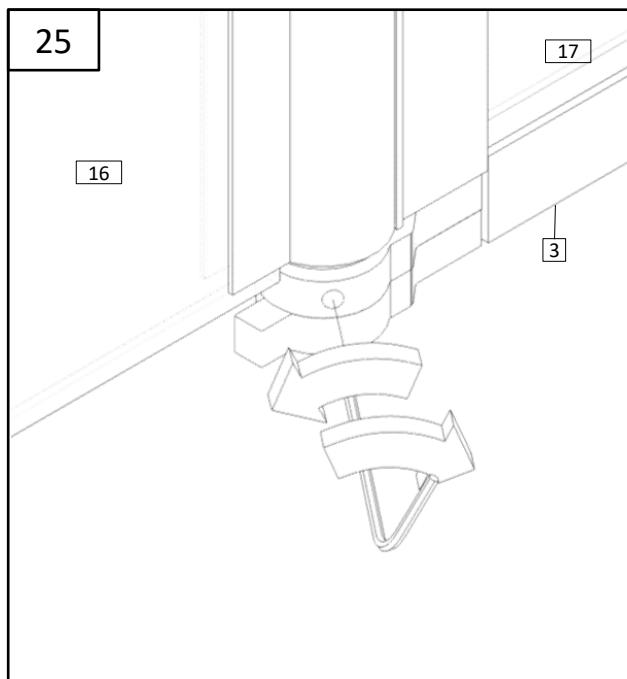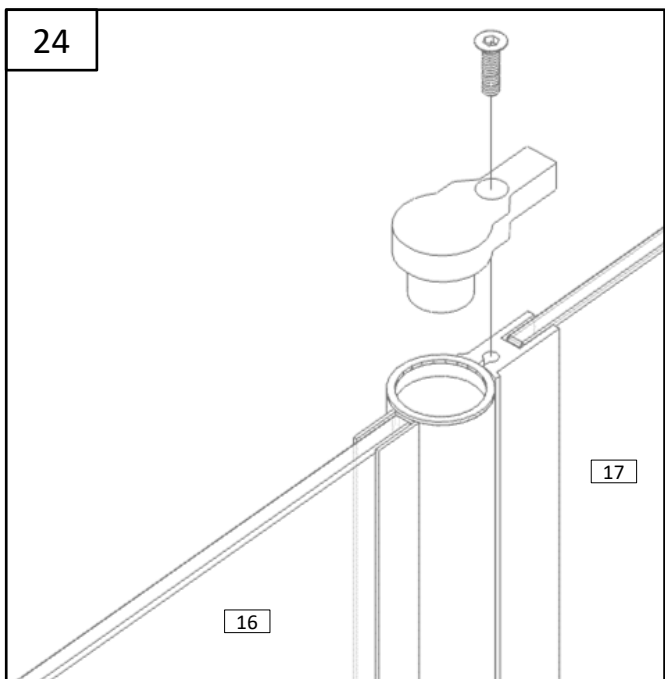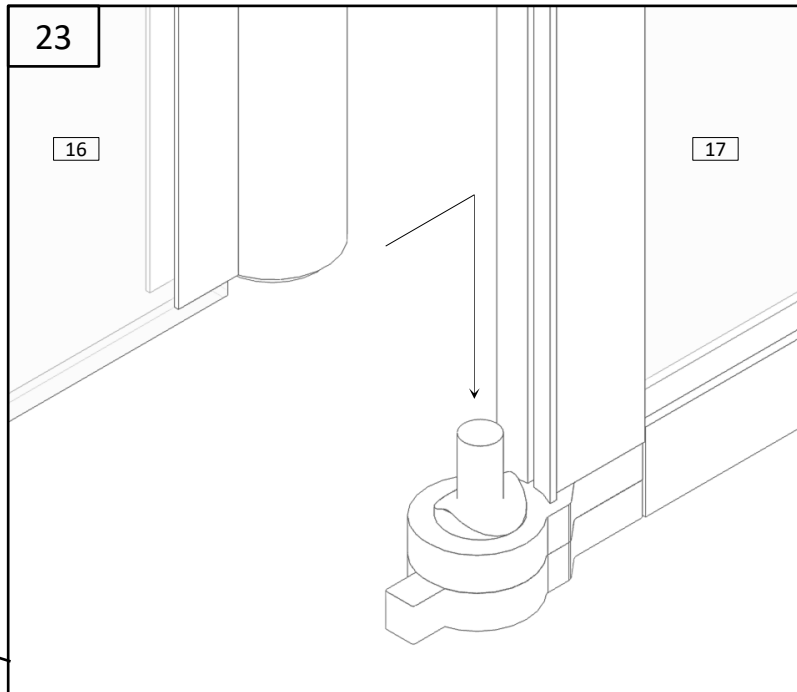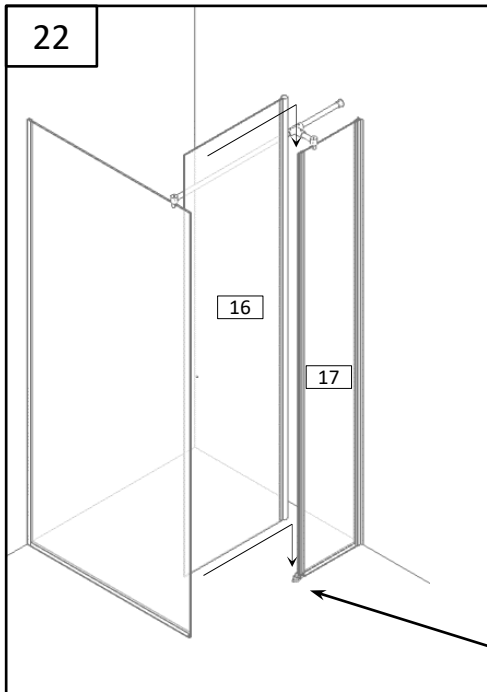

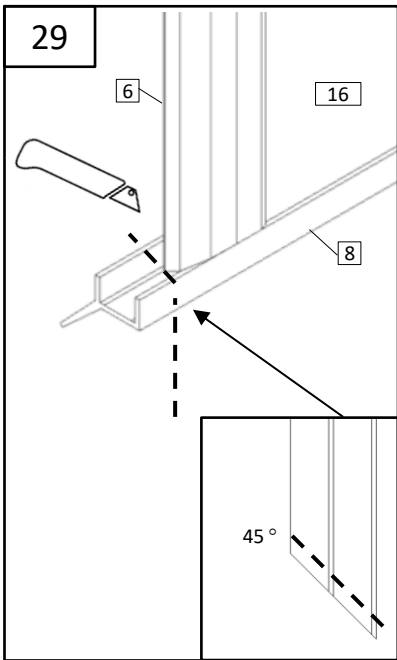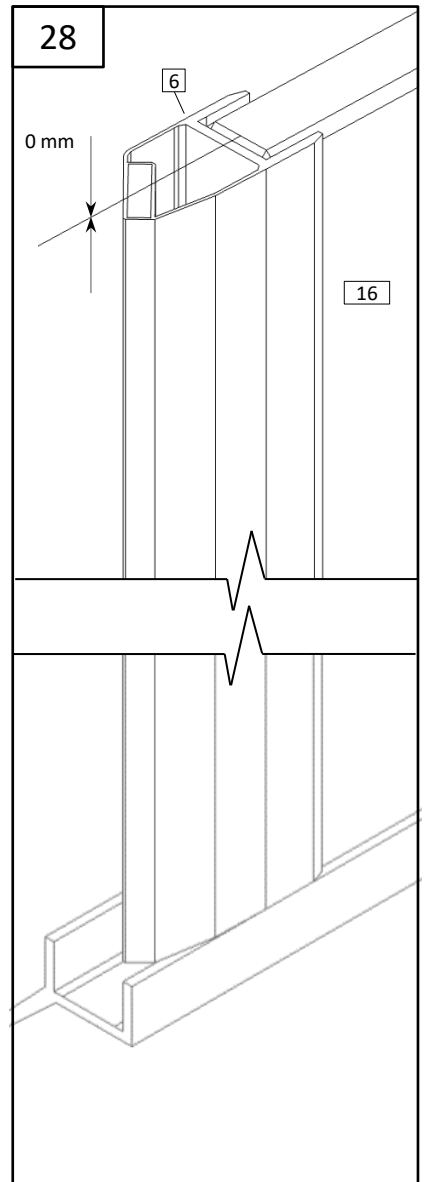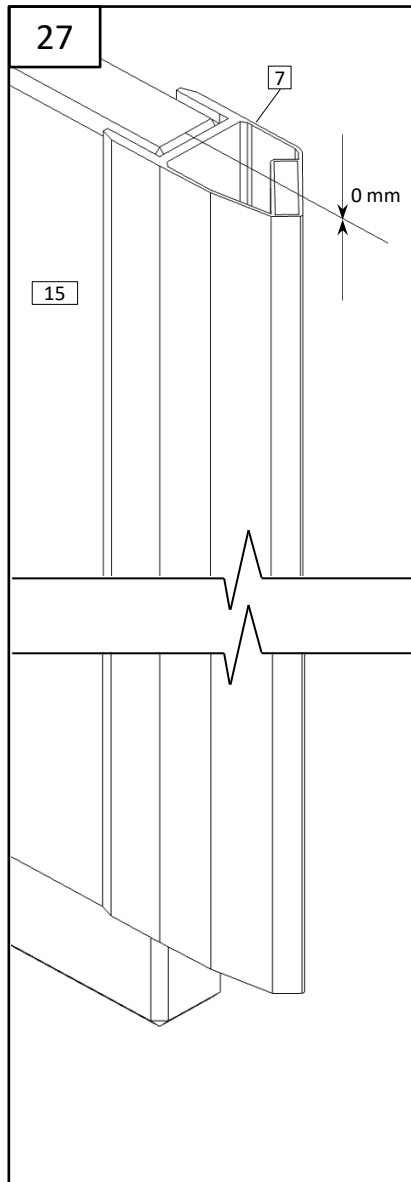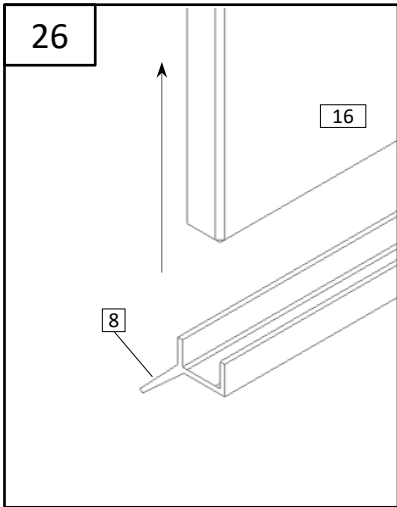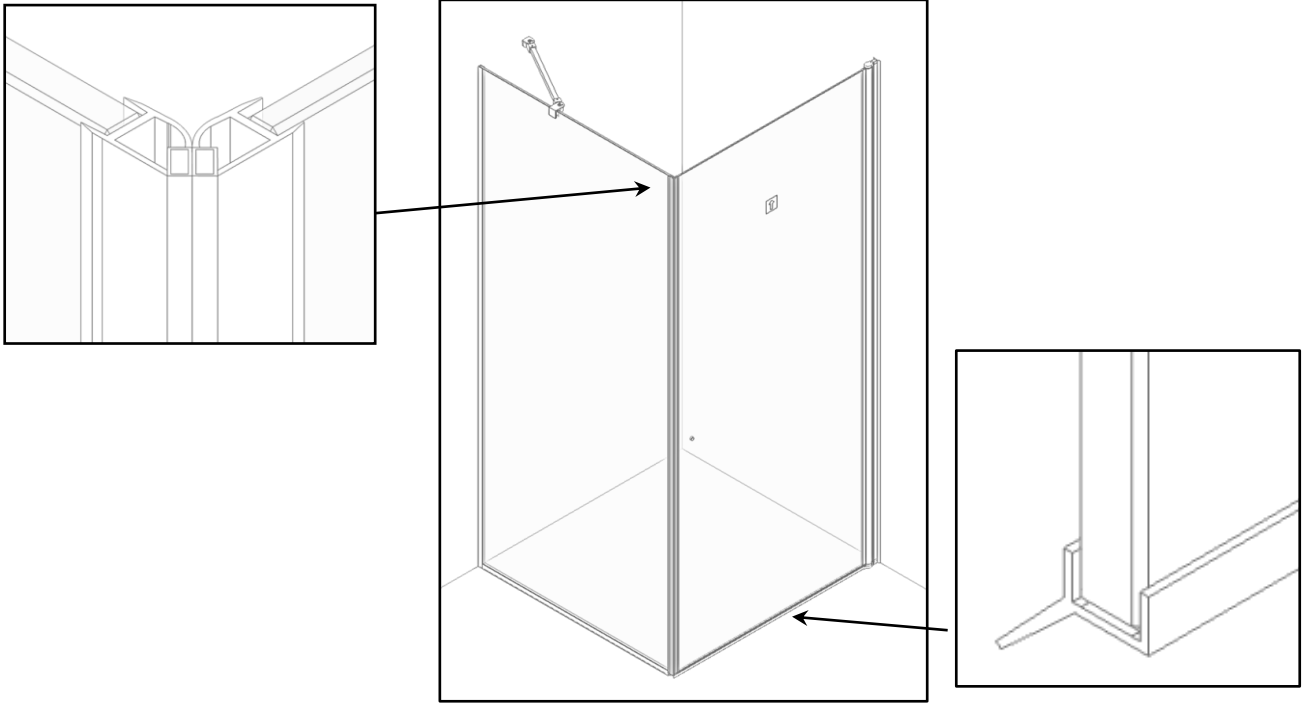



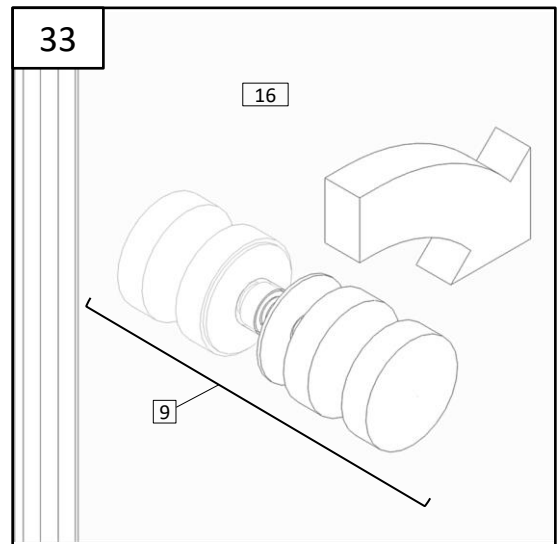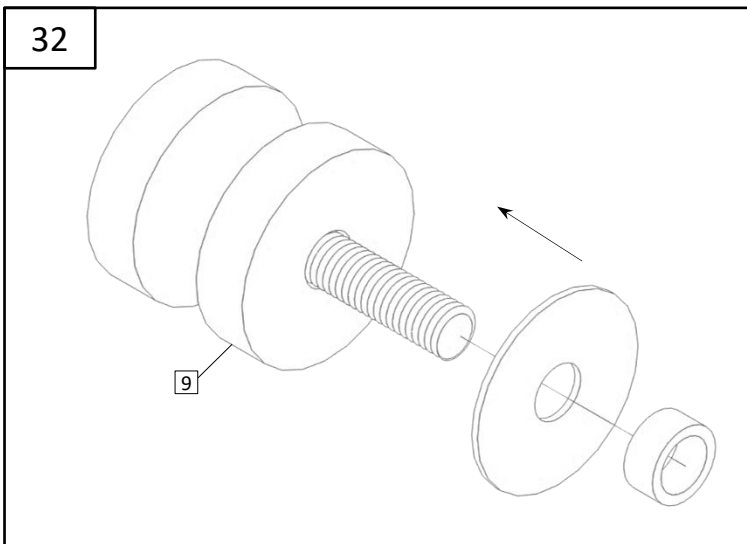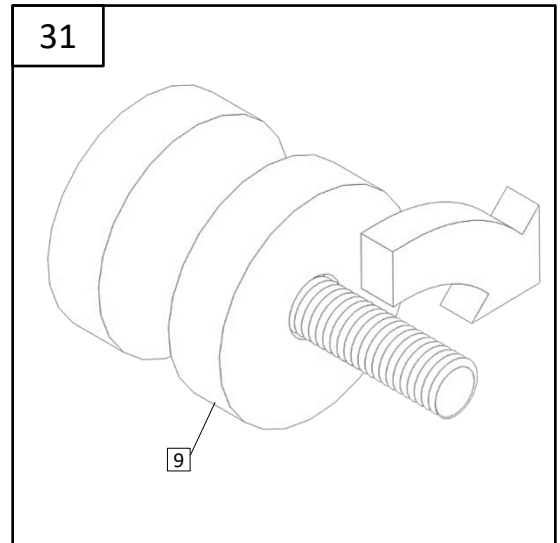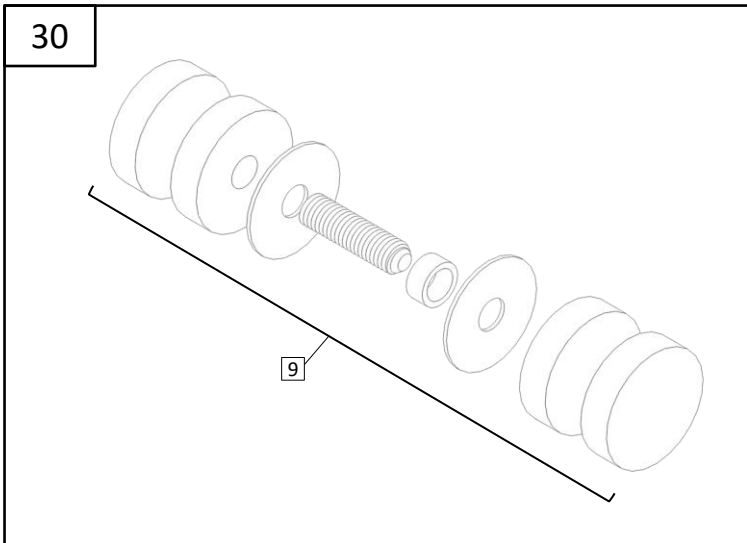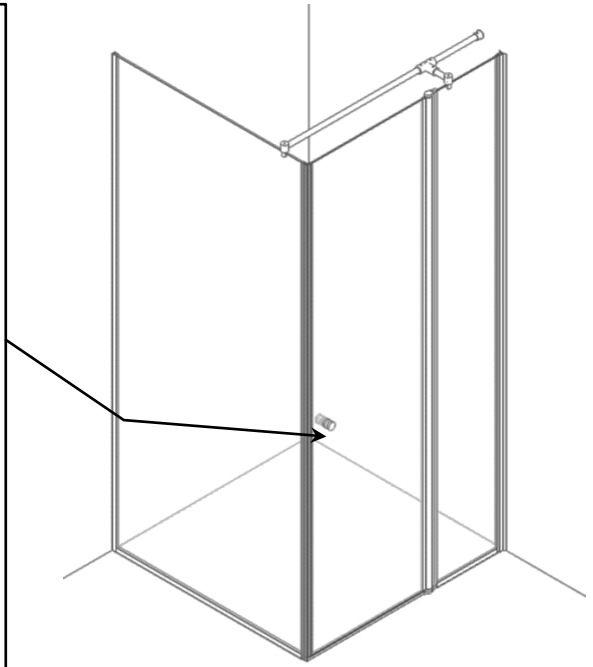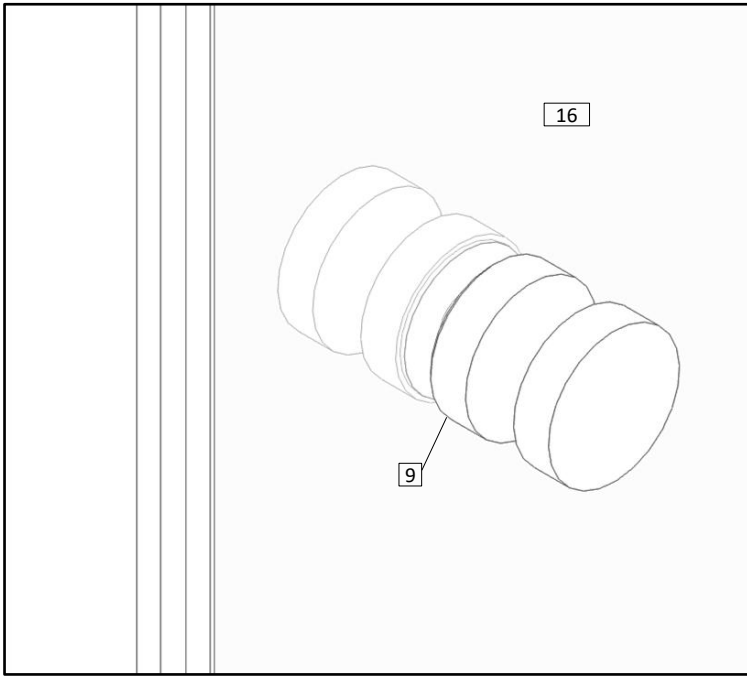

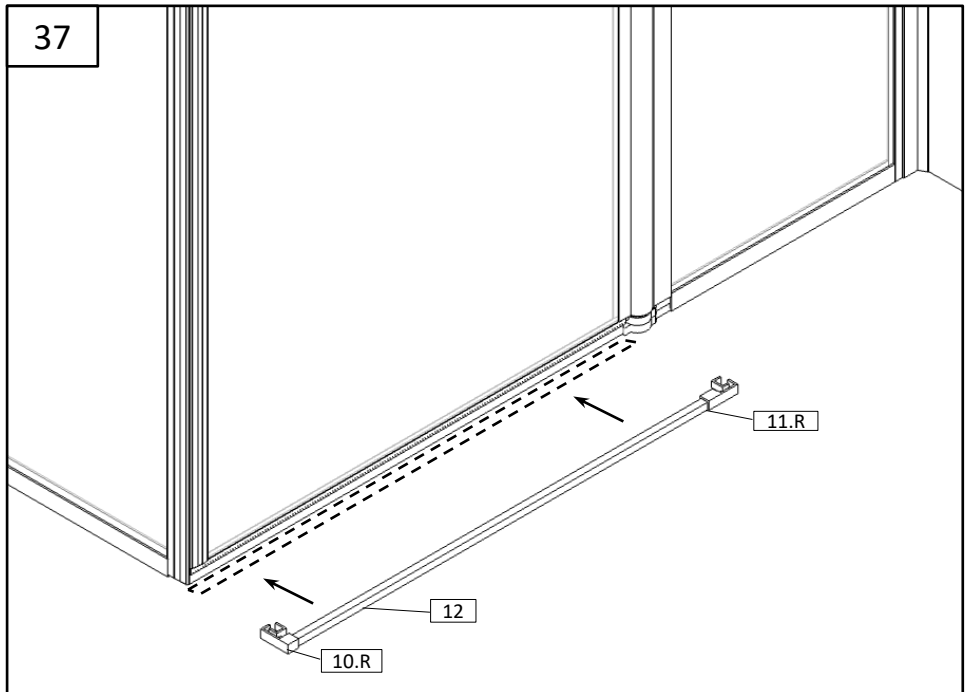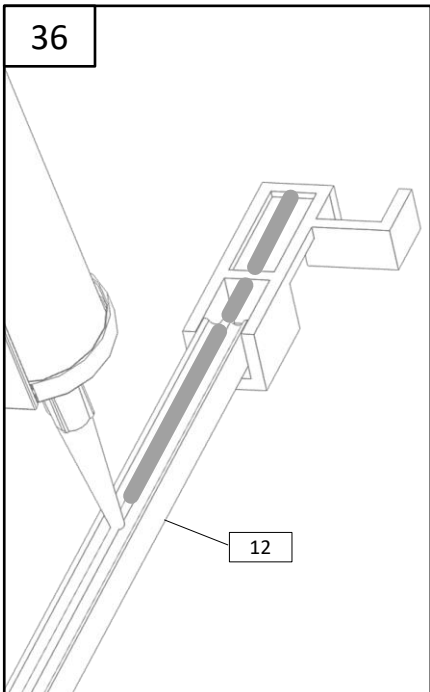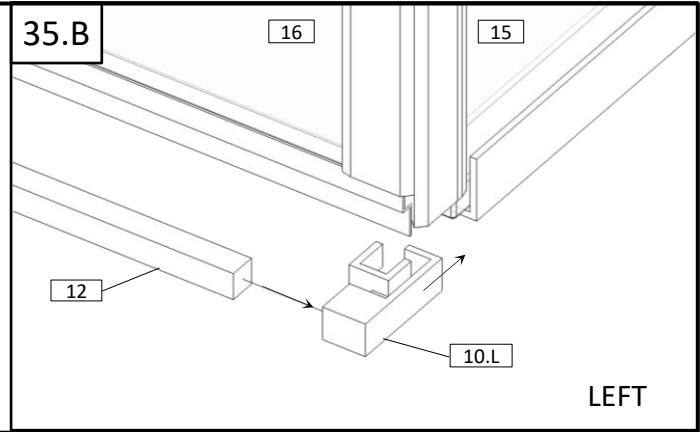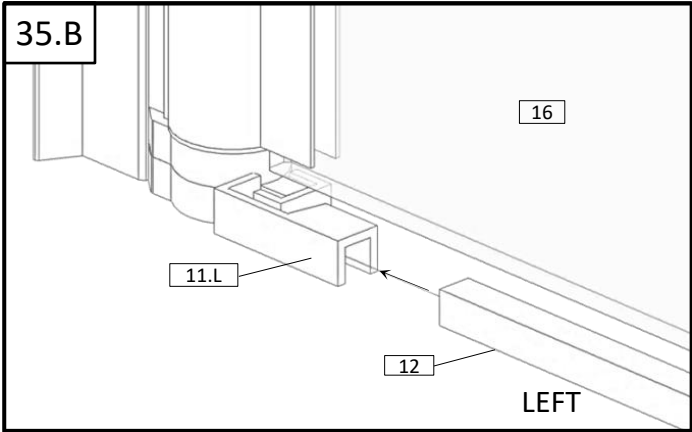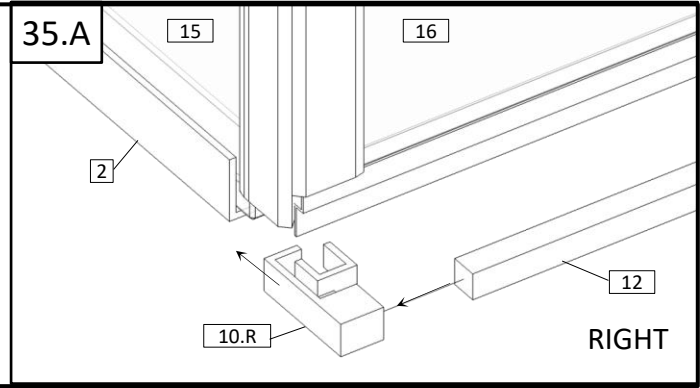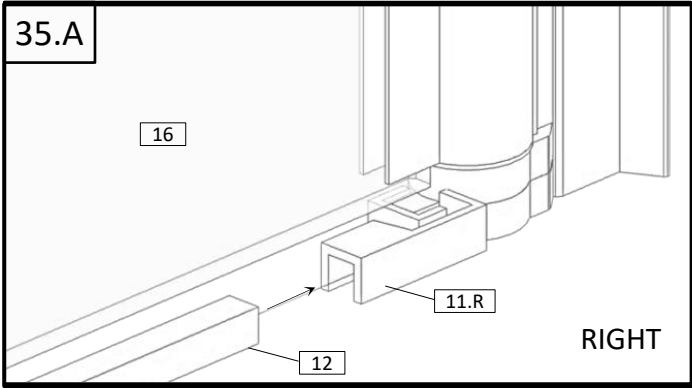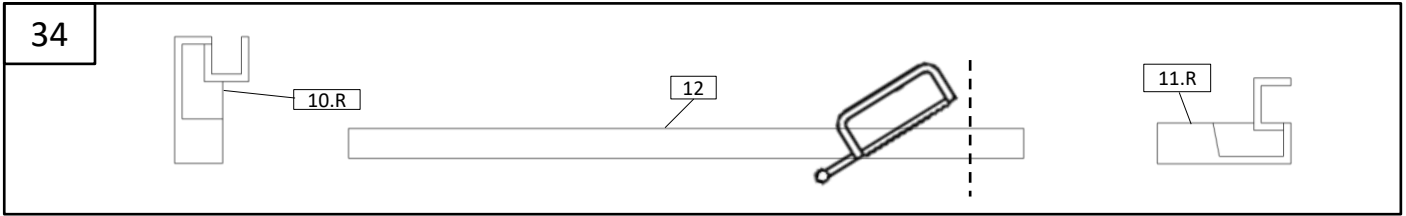

38



24 h

