




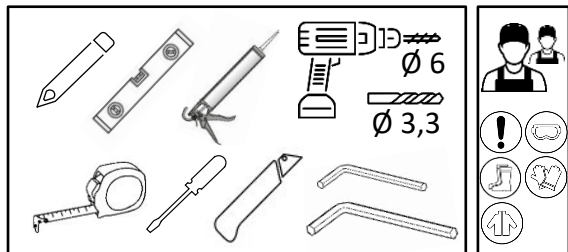


# LISA


## Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions



|    |   |                         |   |
|----|---|-------------------------|---|
| 1. |    | VIRA20CH                | 1 |
| 2. |   | R1656715                | 1 |
| 3. |  | 3,5x35<br>SK1SET<br>Ø 6 | 1 |
| 4. |  | 3,5x13<br>SK2SET        | 2 |
| 5. |  | 6 mm<br>Safety<br>Glass | 1 |

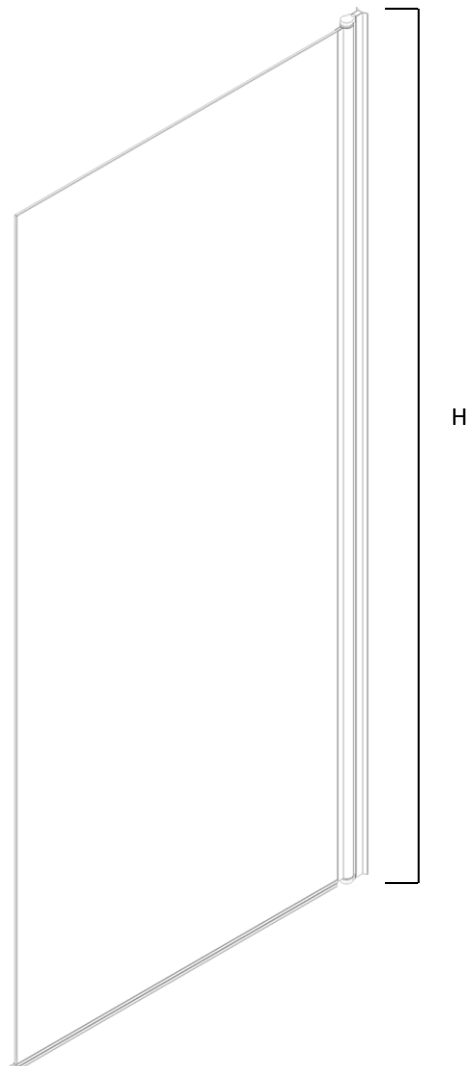


LEFT

RIGHT






| LISA  | A (mm)  | H (mm) |
|-------|---------|--------|
| 60LIS | 568-573 | 1988   |
| 70LIS | 668-673 | 1988   |
| 80LIS | 768-773 | 1988   |
| 90LIS | 868-873 | 1988   |








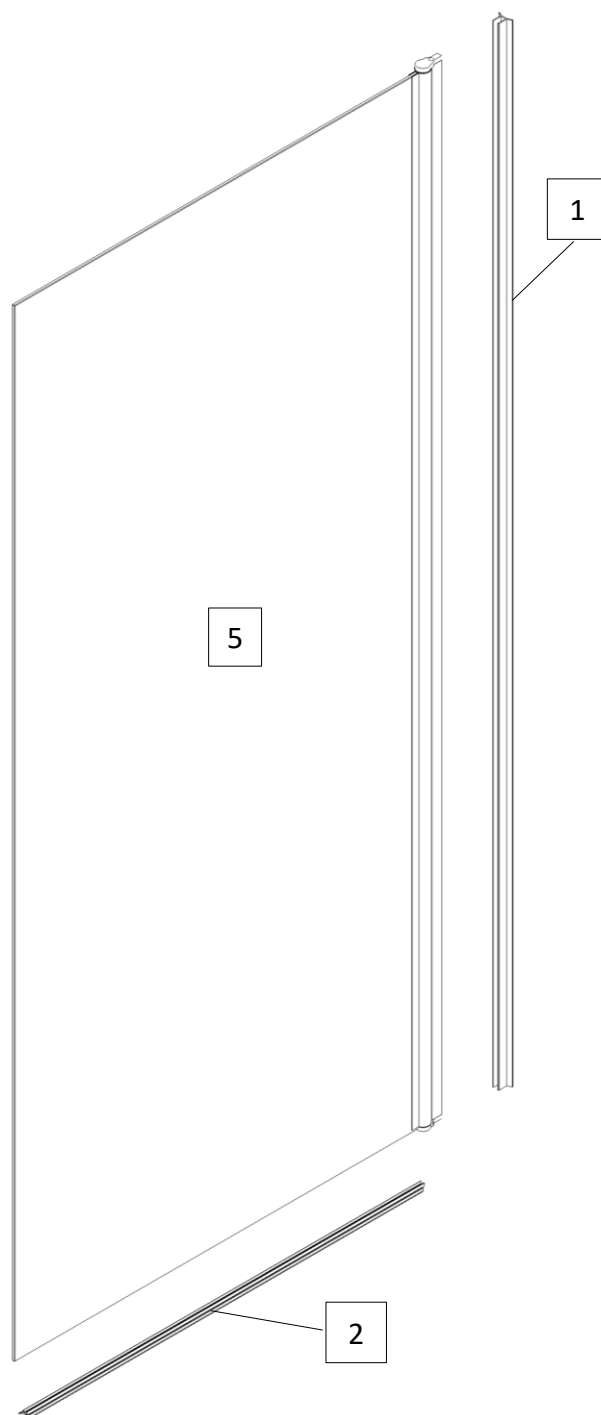


**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

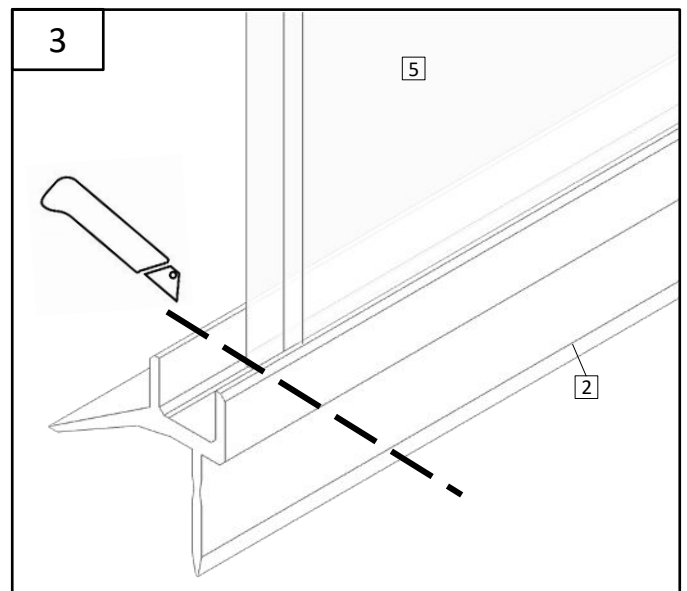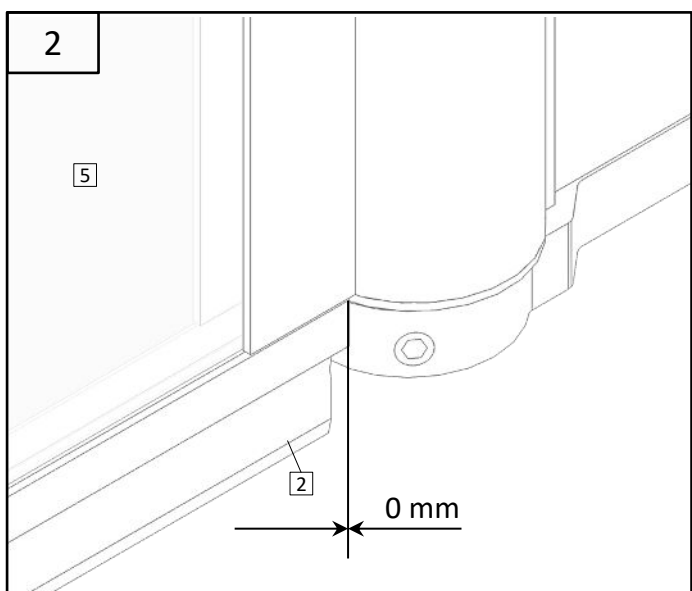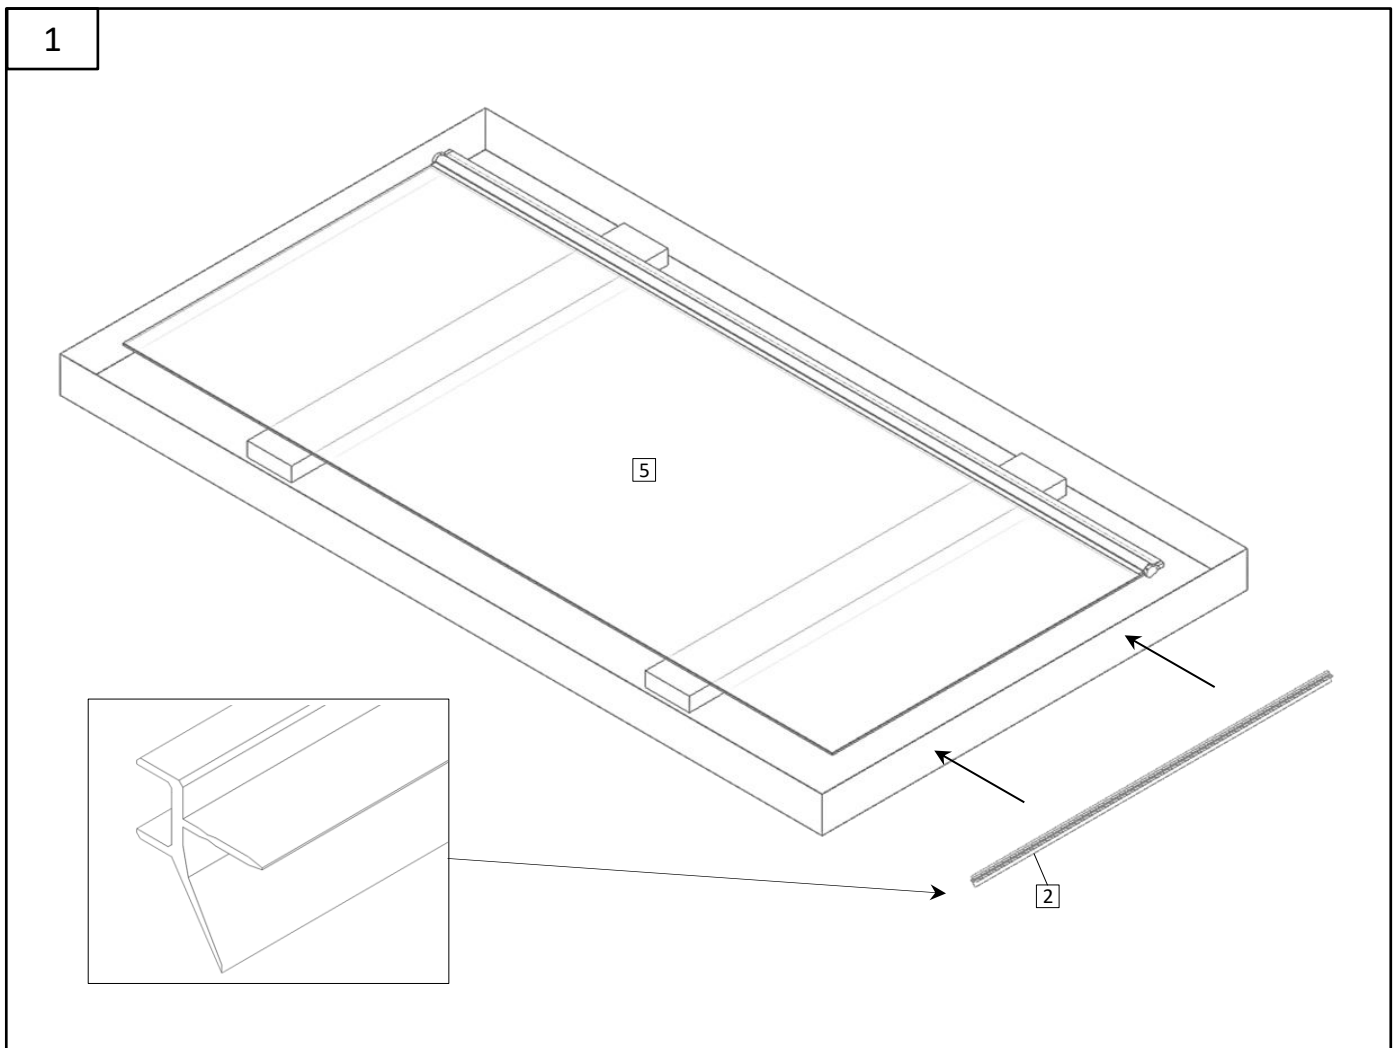

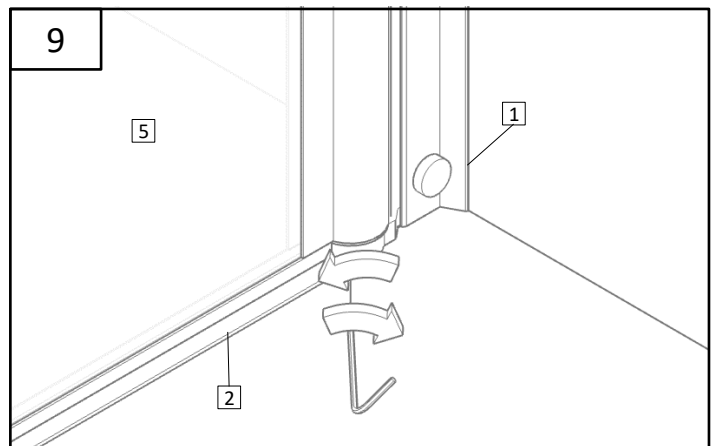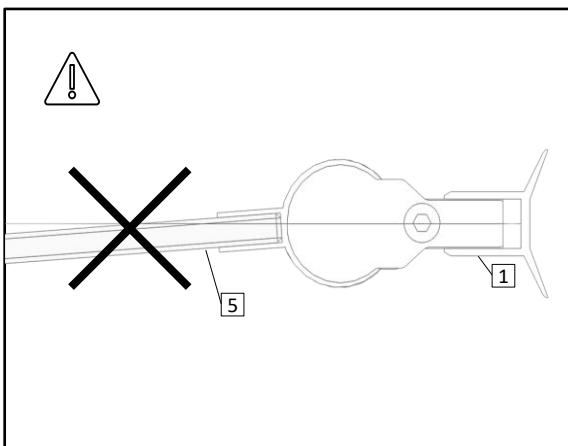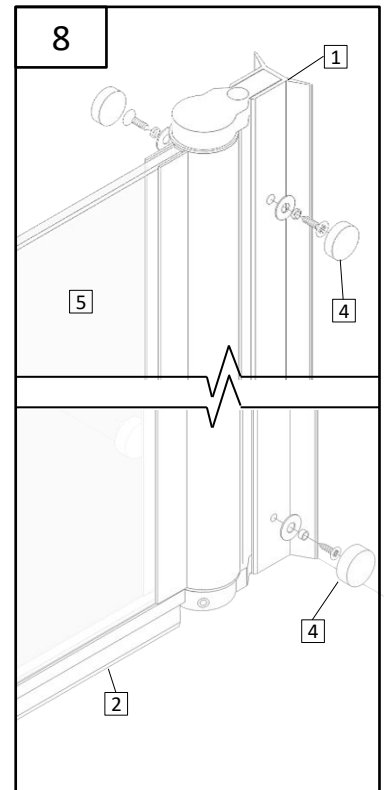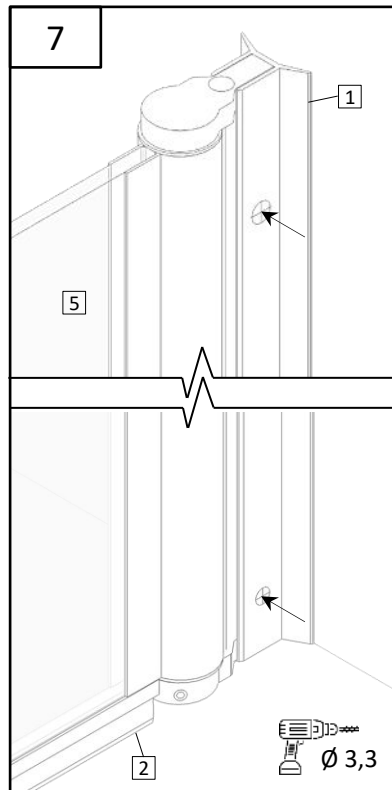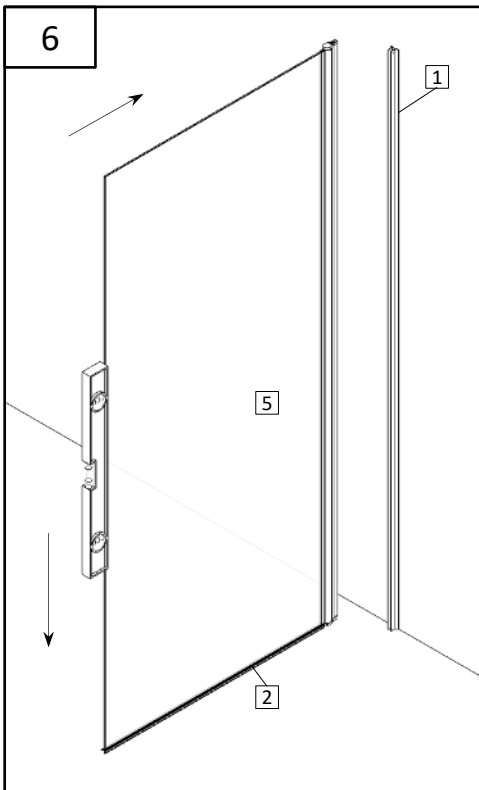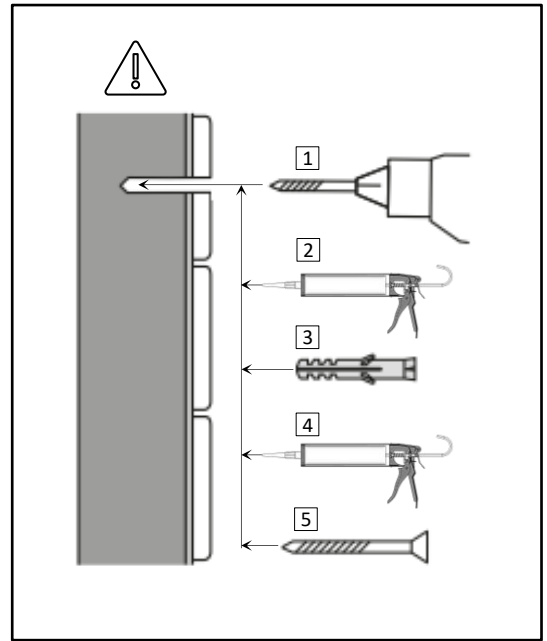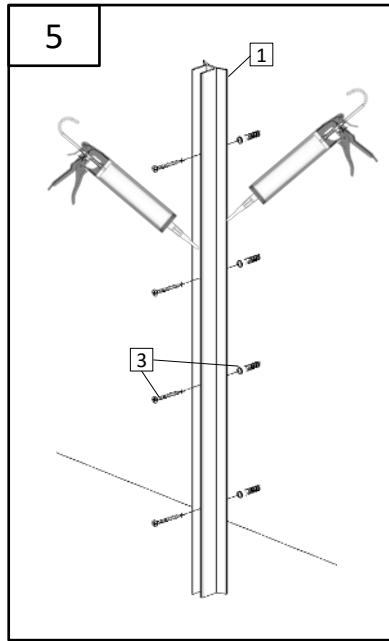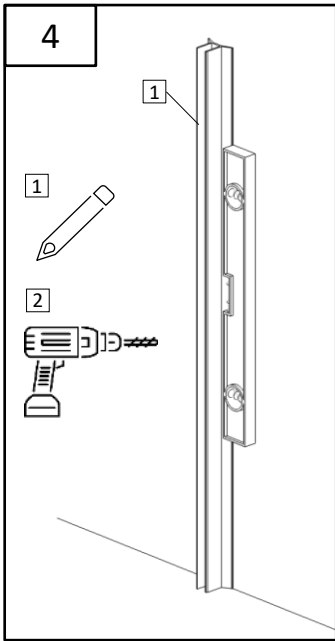

10



24 h

