





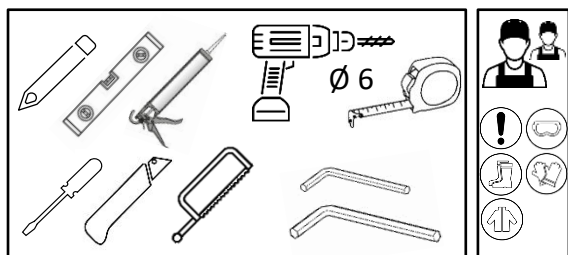


LUANA


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions



1.		PAL-01	1
2.		PAL-01B	1
3.		R1653308	1
4.		DZT100CHR10X 20 + SK2SET 1	1
5.		3,5x35 SK1SET Ø 6	1
6.		8 mm Safety Glass	1
7.		6 mm Safety Glass +VIRA20CH	1

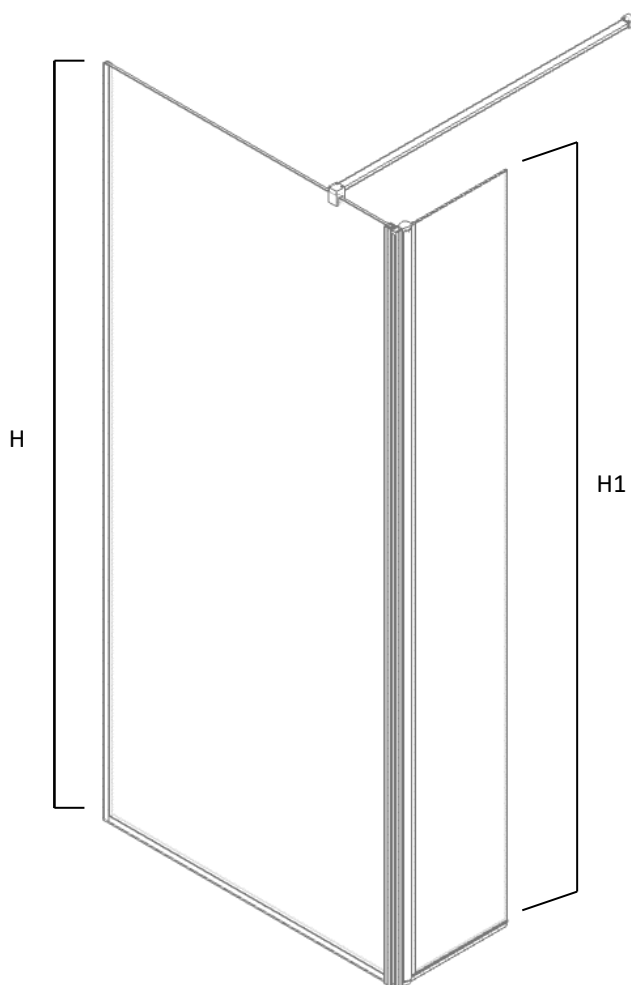




LUANA	A (mm)	H (mm)	H1 (mm)
80LUA	788-793	1988	1973
90LUA	888-893	1988	1973
100LUA	988-993	1988	1973
110LUA	1088-1093	1988	1973
120LUA	1188-1193	1988	1973



LEFT

RIGHT

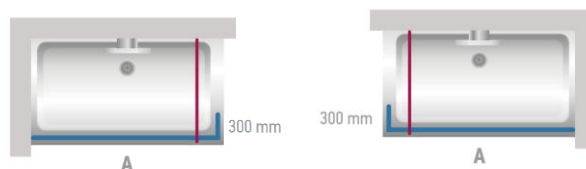

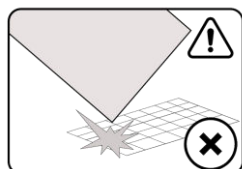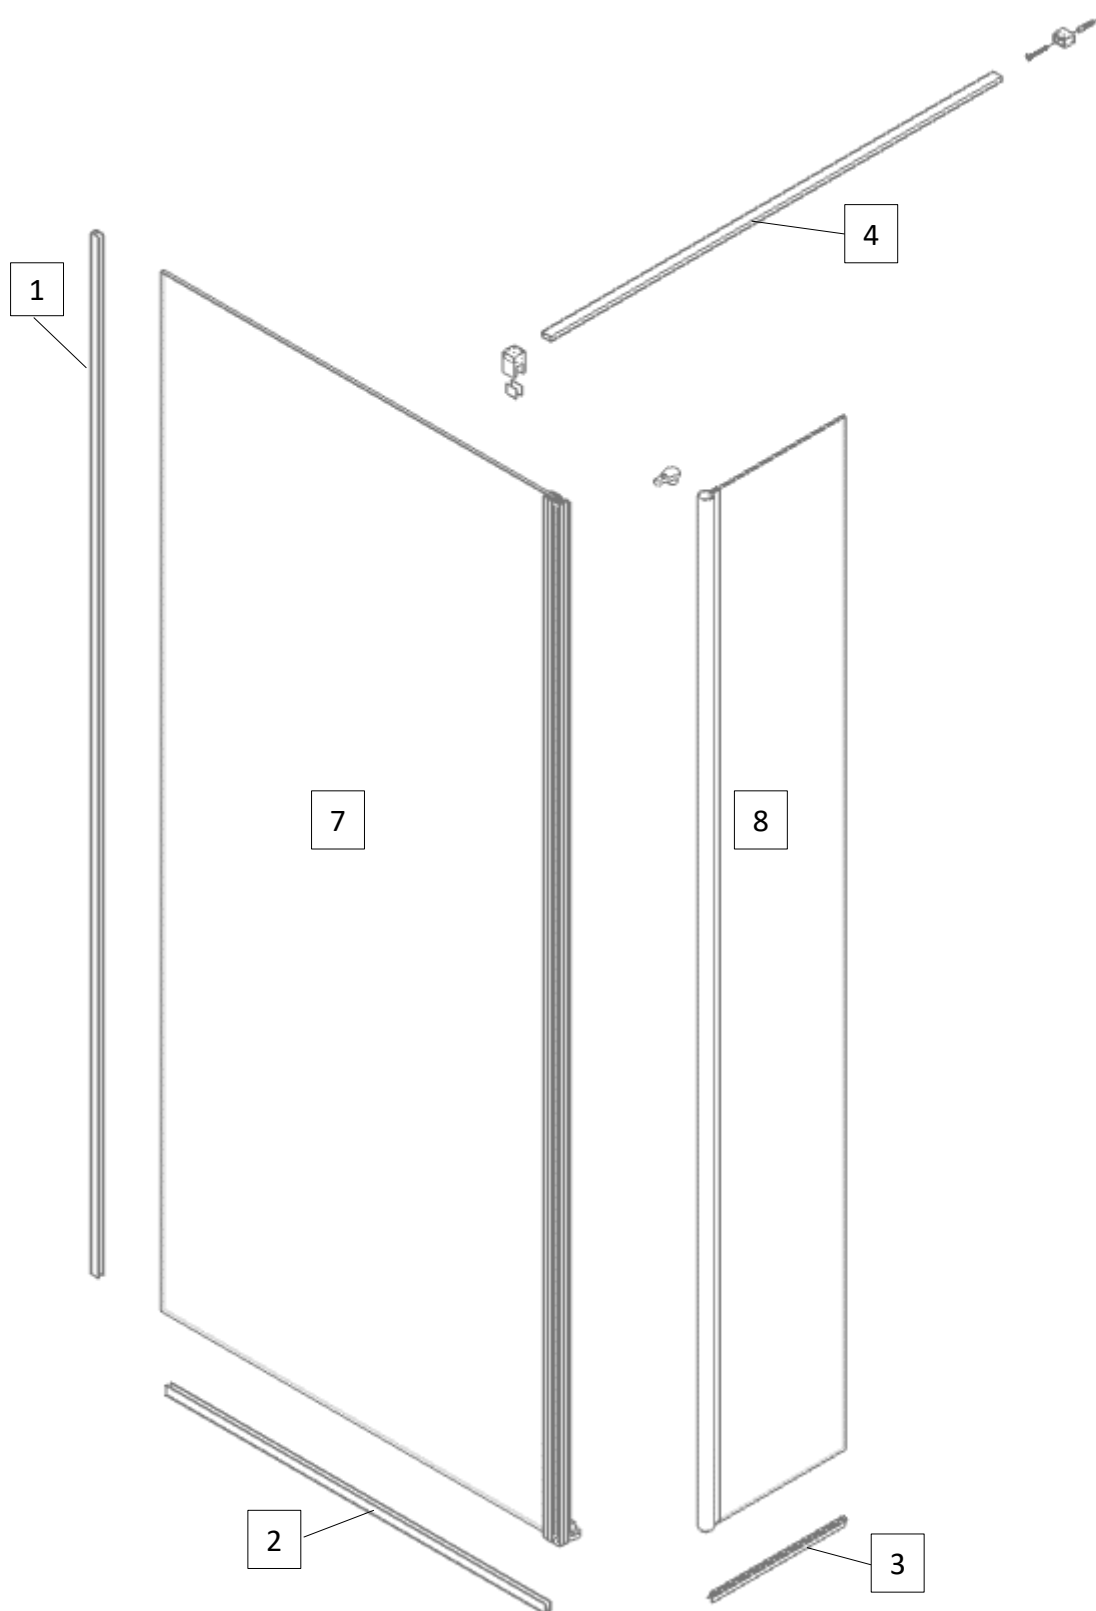





Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.





1.A









LUANA	C1
80LUA	783
90LUA	883
100LUA	983
110LUA	1083
120LUA	1183




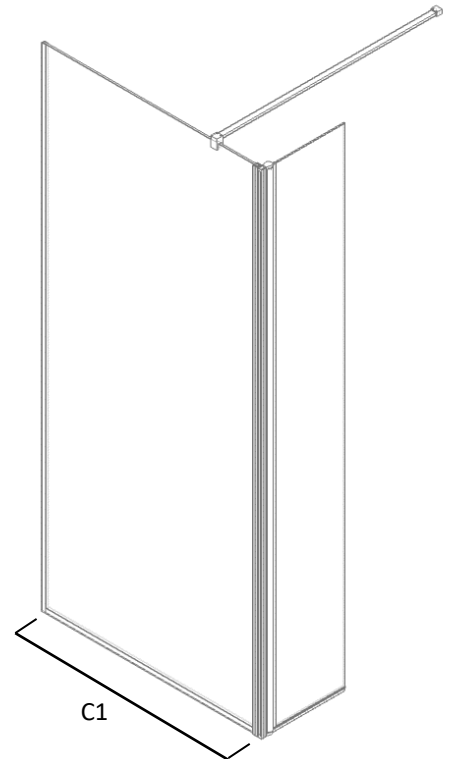
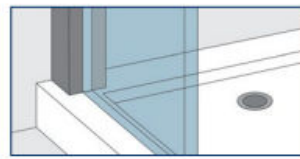
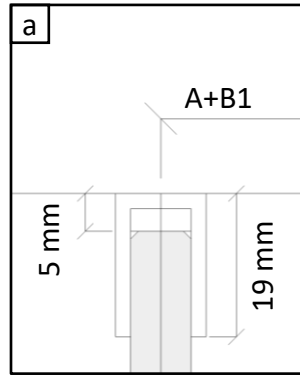
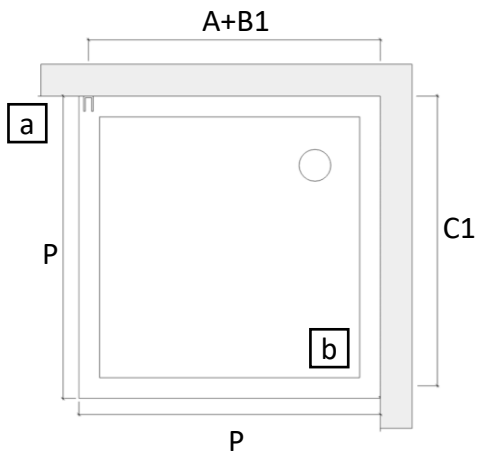






1.B





LUANA	S
80LUA	800
90LUA	900
100LUA	1000
110LUA	1100
120LUA	1200

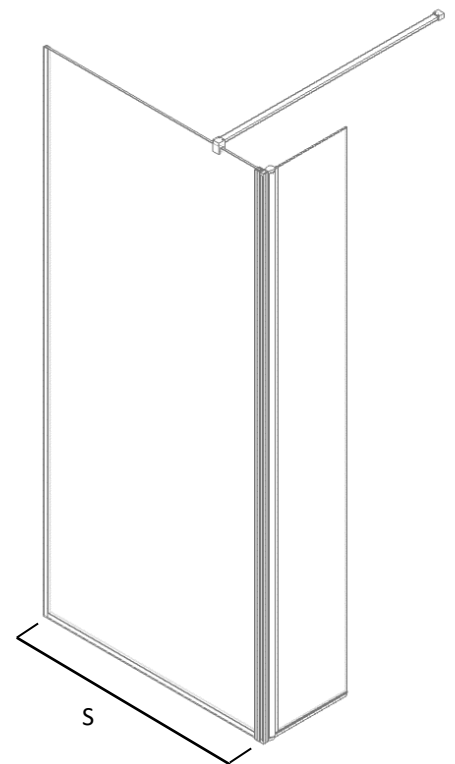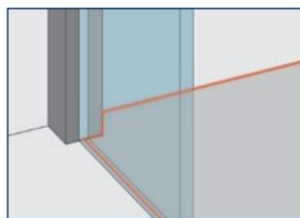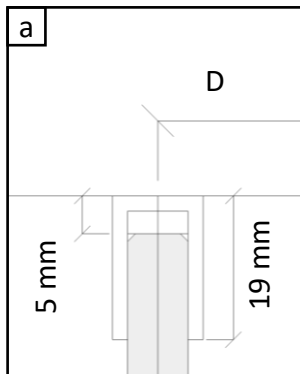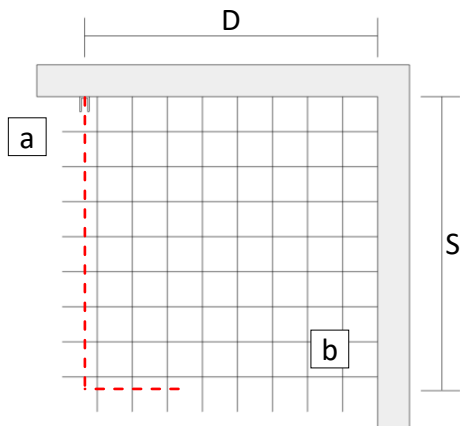

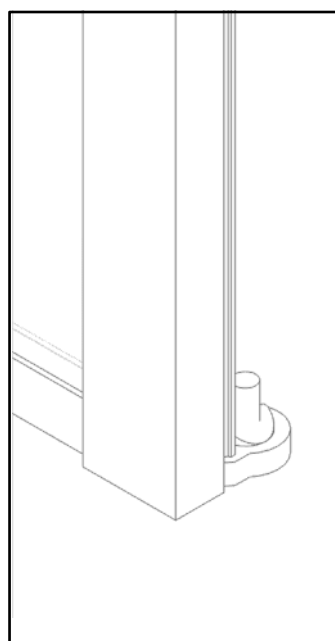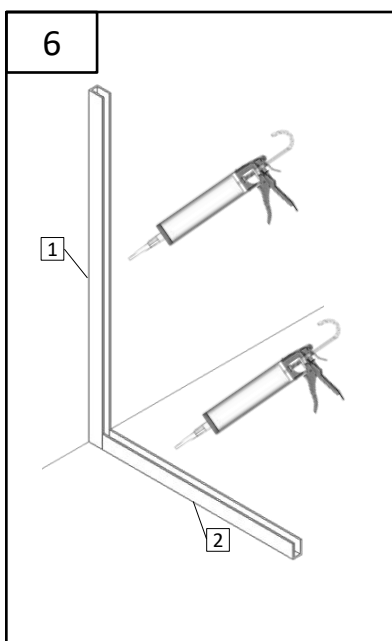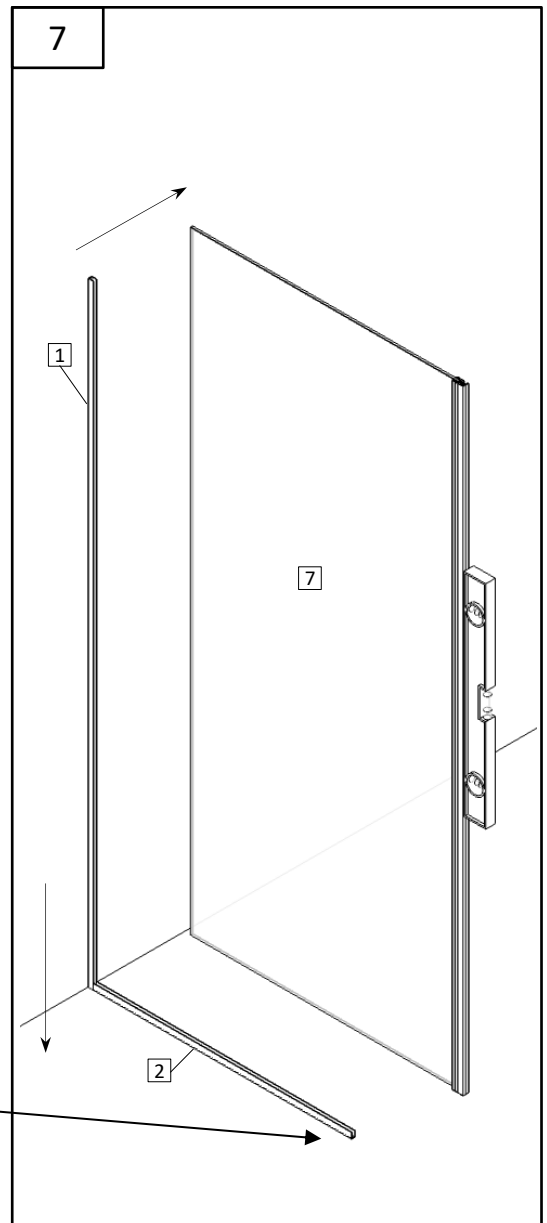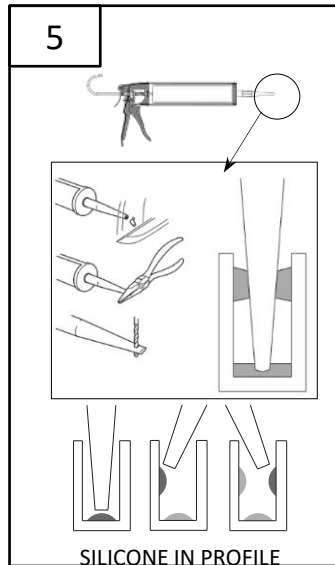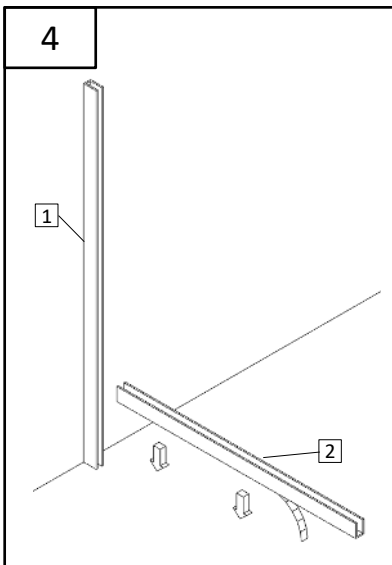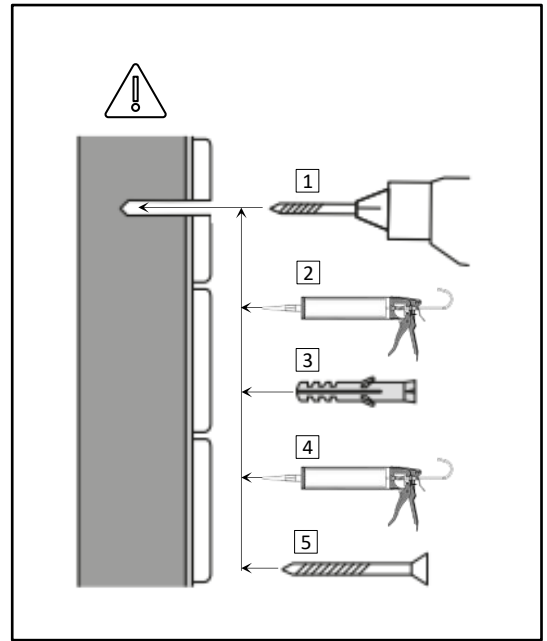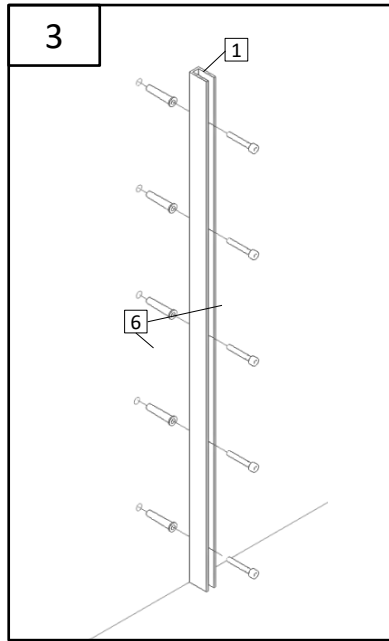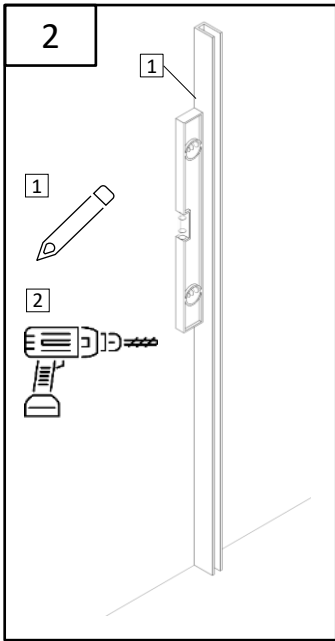

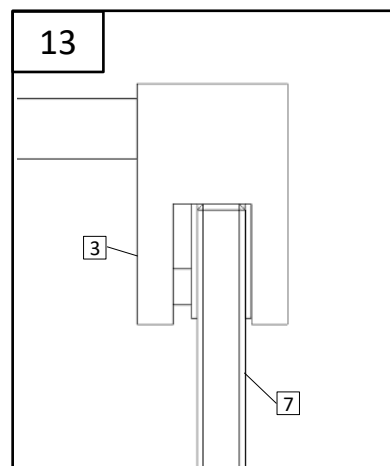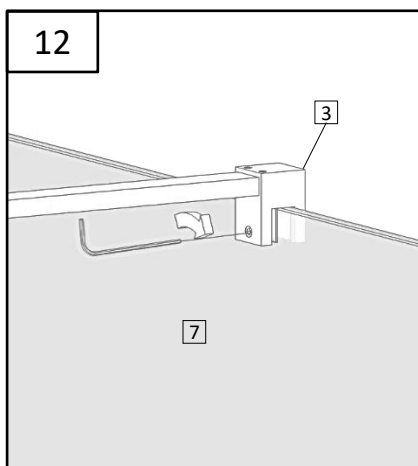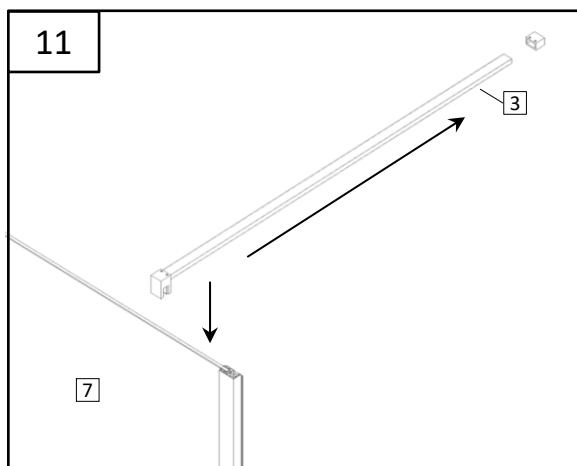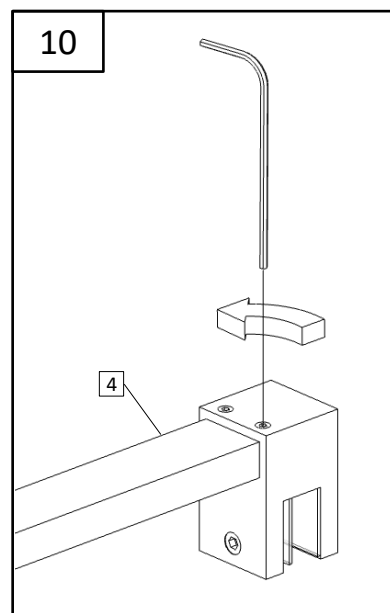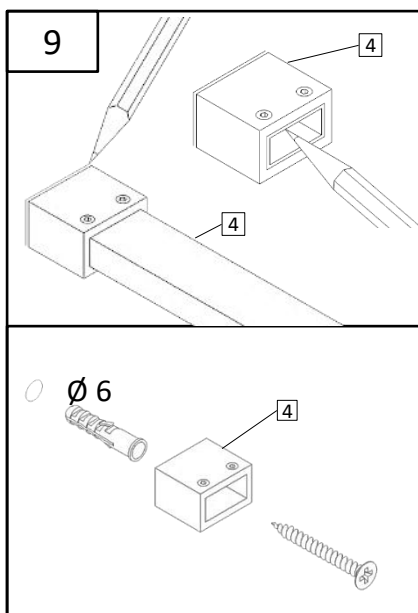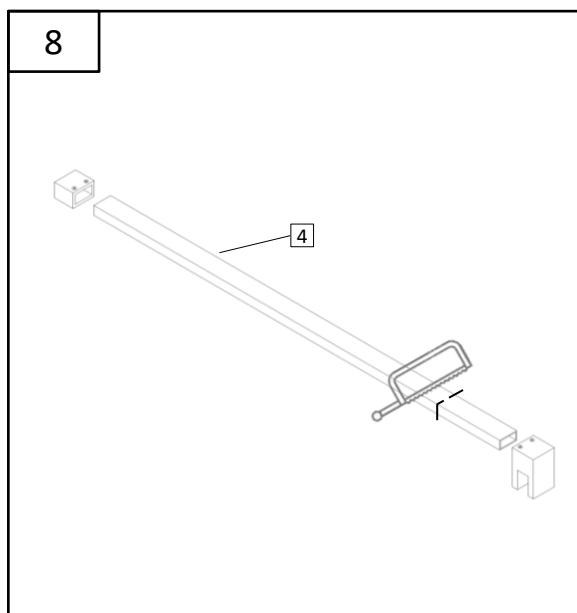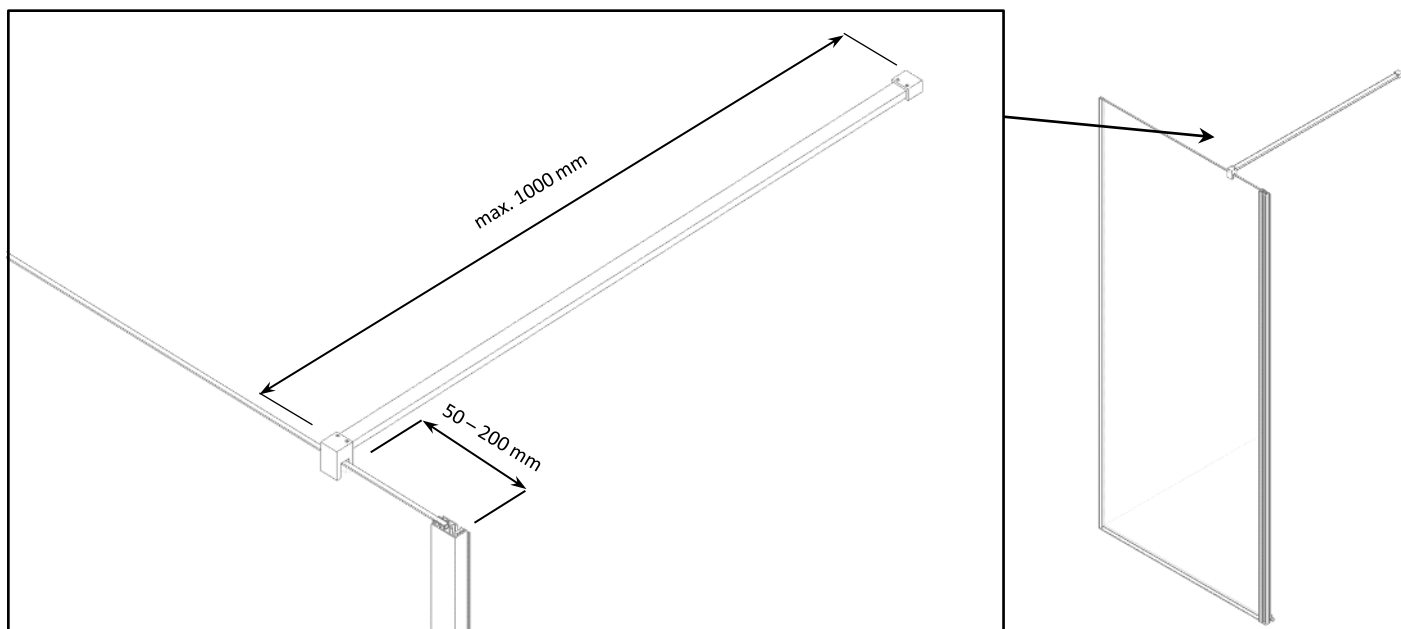

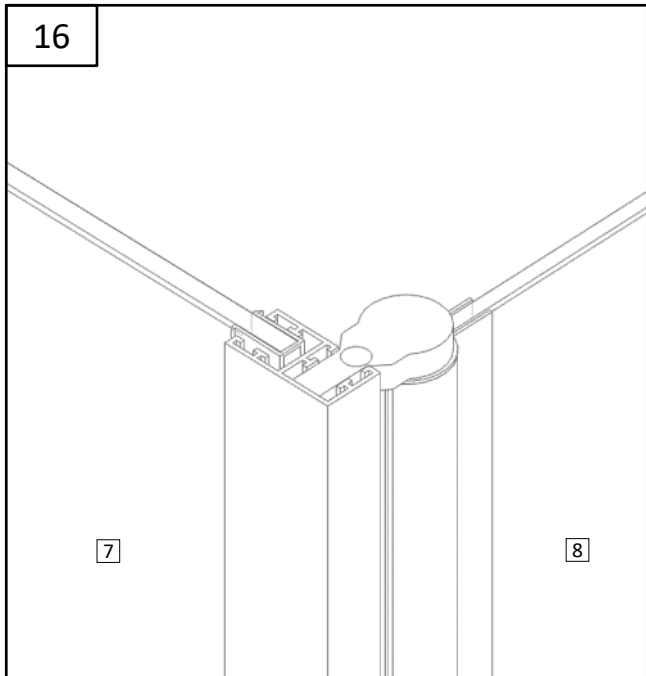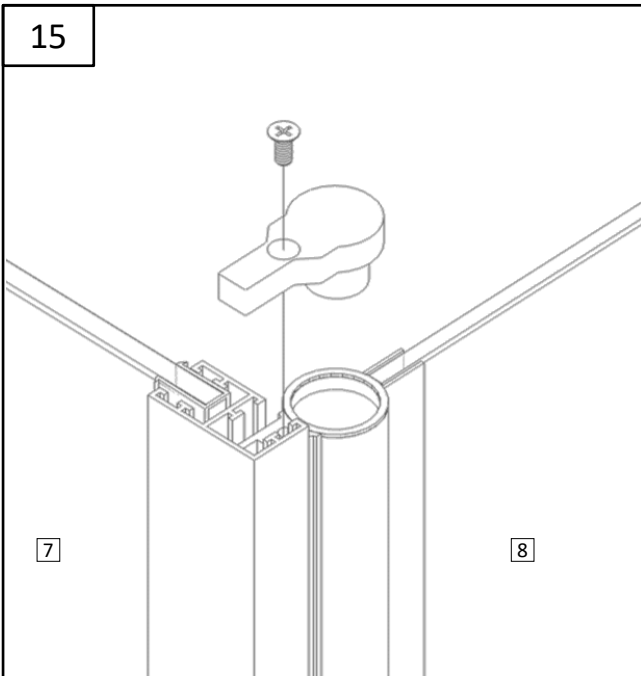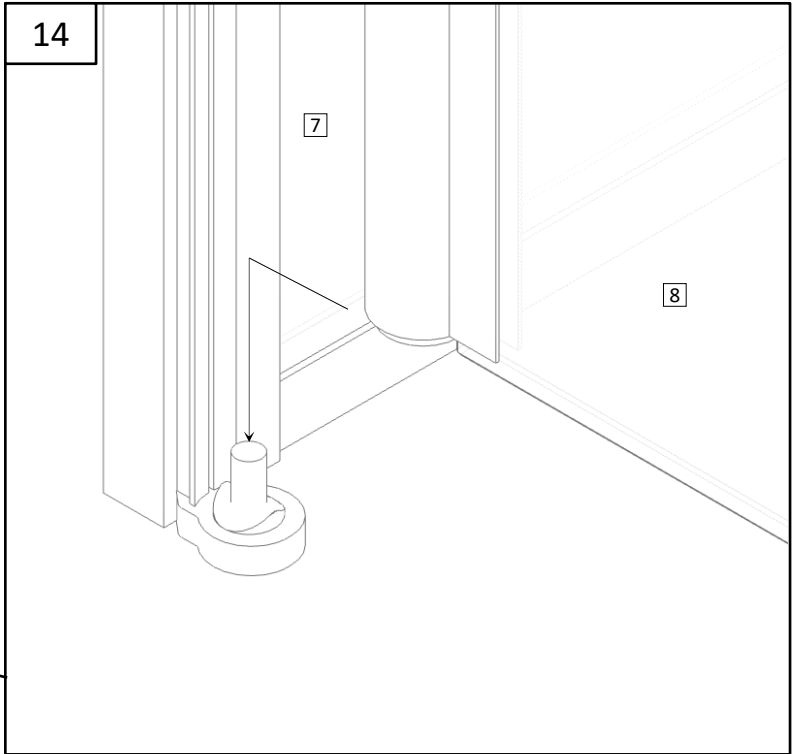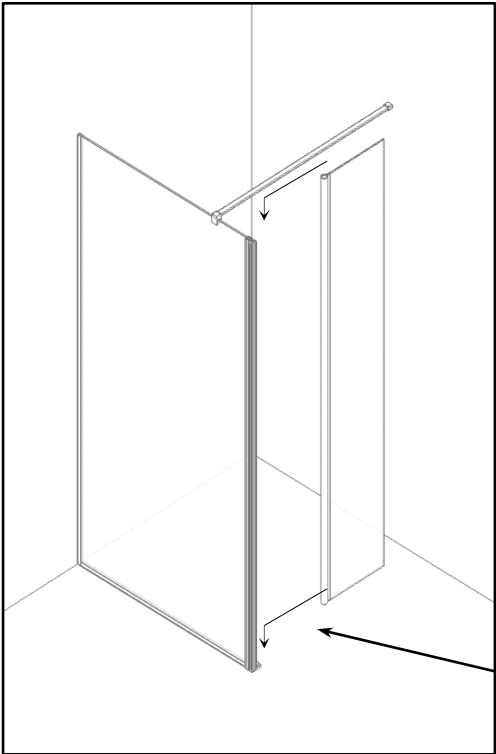

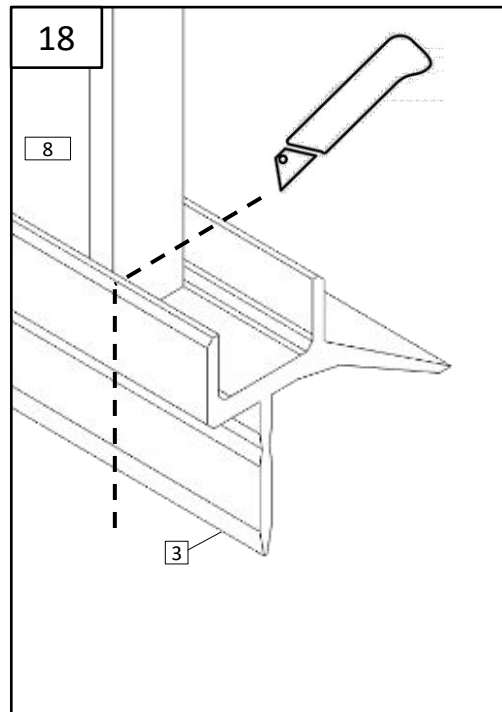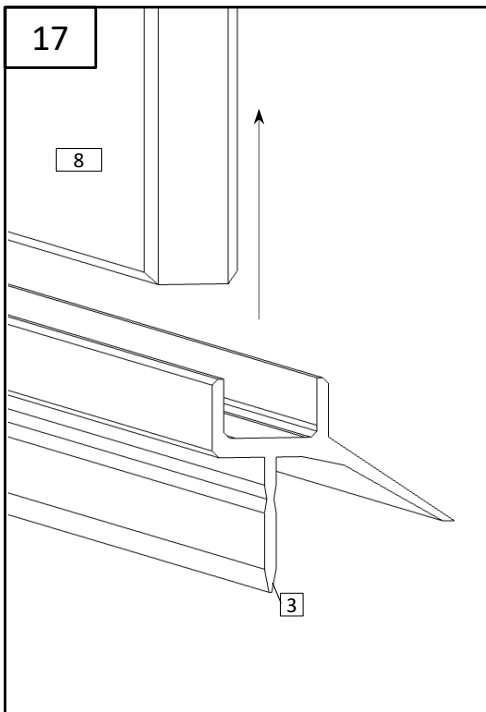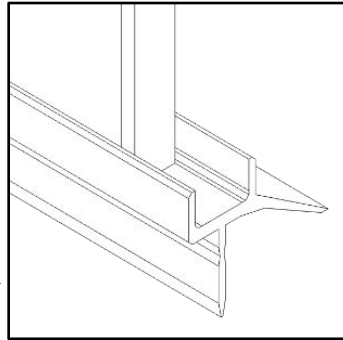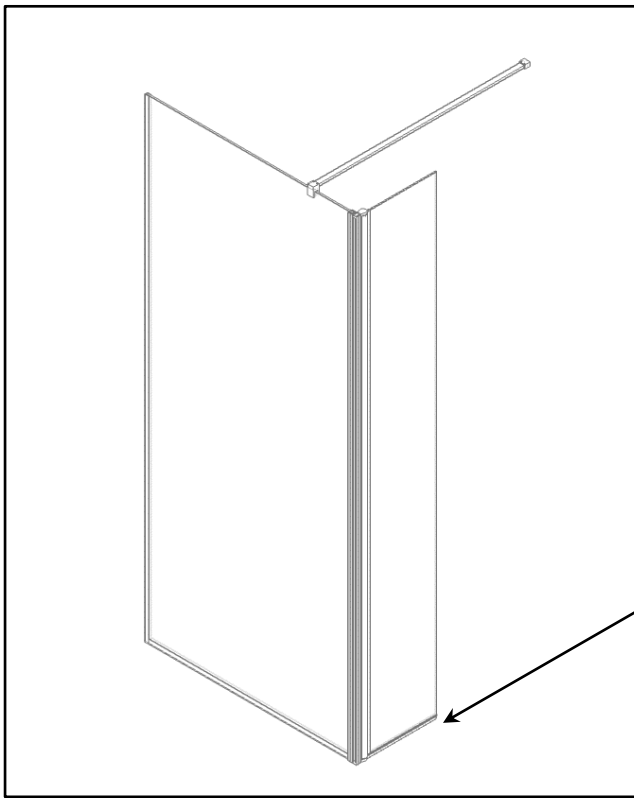

19



24 h

