


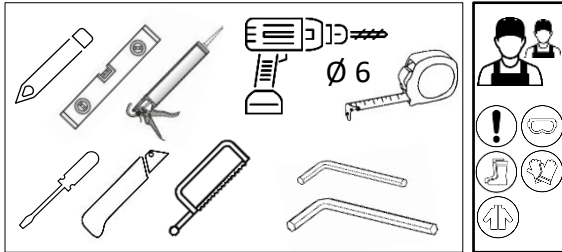












LUISA KVADRO

Dušas durvju montāžas instrukcija



Инструкция по монтажу душевой двери

Shower door installation instructions





1.		PAL-01	2
2.		PAL-01B	2
3.		TI200LU1+ SK2SET1	1
4.		MF-42/8-ER	2
5.		R1653308	1
6.		400211PS-013	1
7.		SC-ALU8X9NEW	1
8.		SC-SL-UZL180R	1
9.		SC-SL-UZL180L	1
10.		OSH-OFS2CP	2
11.		KVADRO30CH	1
12.		3,5x35 SK1SET; Ø 6	2
13.		8 mm Safety Glass	1
14.		8 mm Safety Glass	1
15.		8 mm Safety Glass	1

LUISA KVADRO	A + BB (mm)	B (mm)	H (mm)
80LUI_K	798-803	150/150	1988
90LUI_K	898-903	200/200	1988
100LUI_K	998-1003	200/200	1988
110LUI_K	1098-1103	200/200	1988
120LUI_K	1198-1203	250/250	1988
130LUI_K	1298-1303	300/300	1988
140LUI_K	1398-1403	350/350	1988

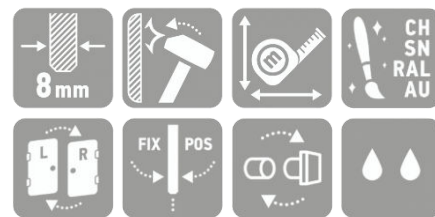
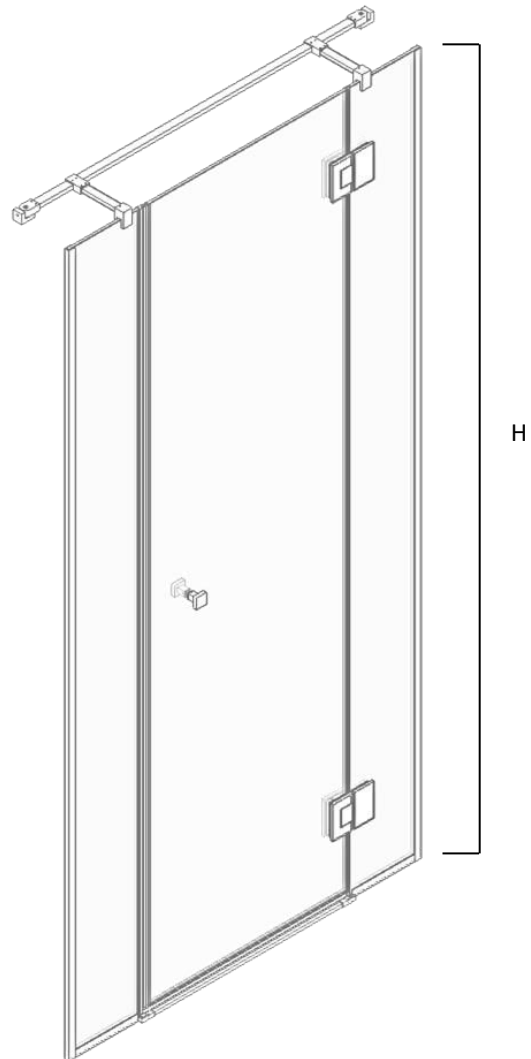


LEFT

RIGHT

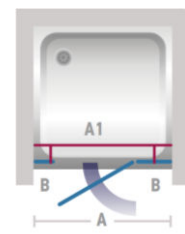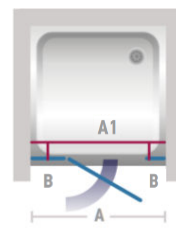

LUISA KVADRO

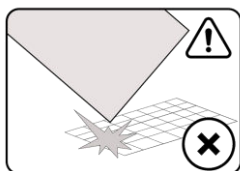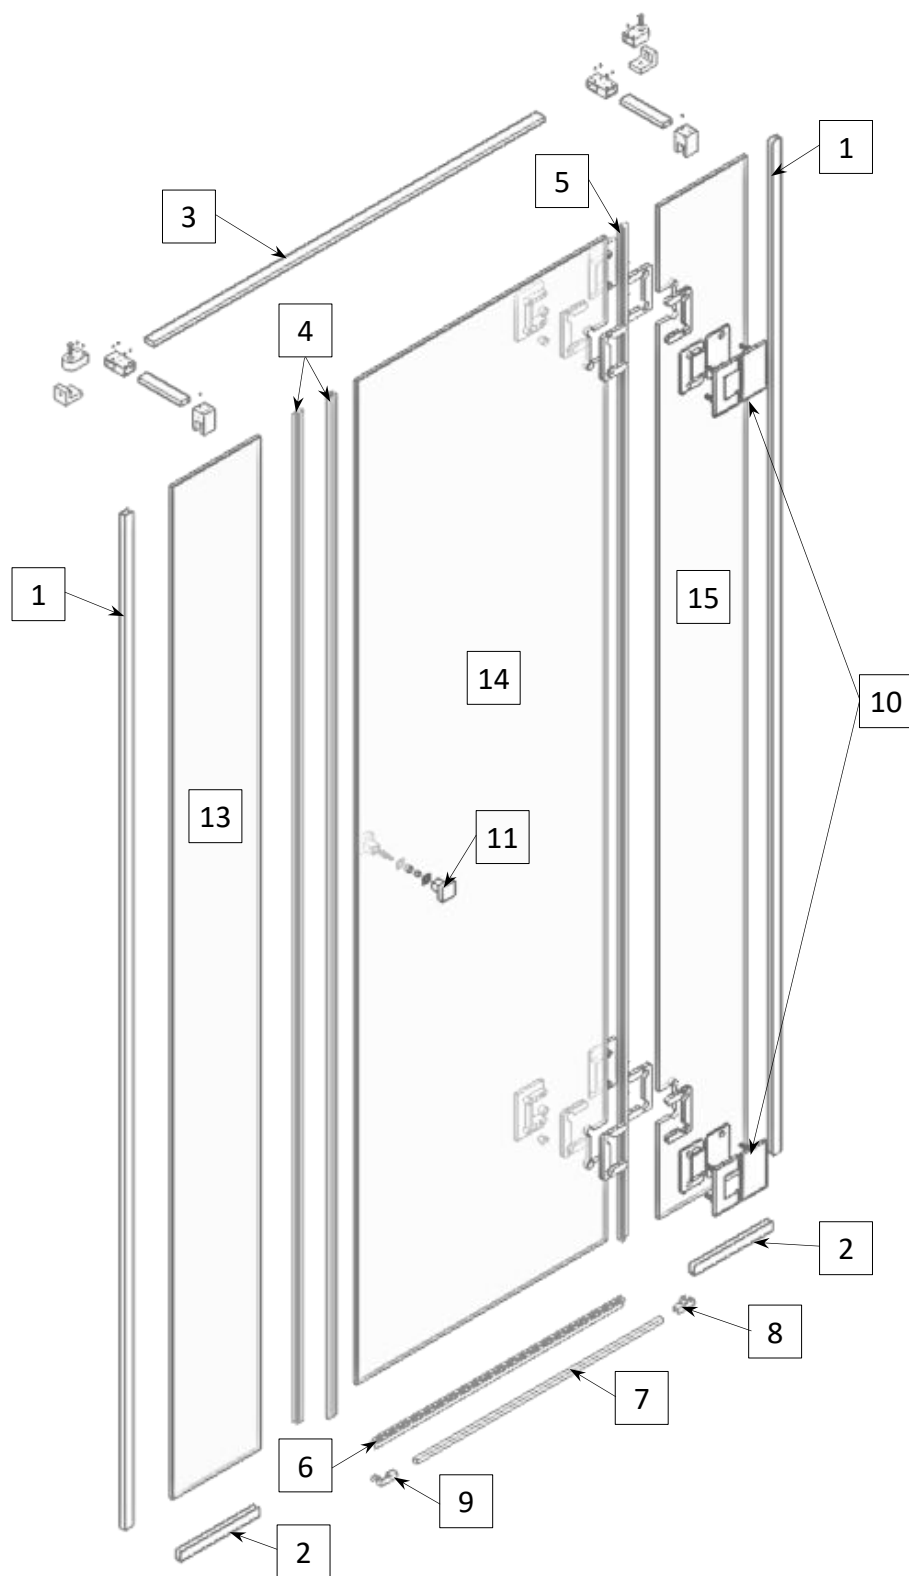

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

