


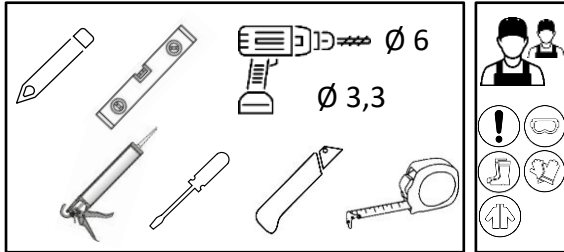





MYA GOLD


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions




1.R		SU45CH + SK2SET L	1
1.L		SU45CH + SK2SET R	1
2.		PAL-01	1
3.		PAL-01B	1
4.		3,5X35 SK1SET	1
5.		6 mm Safety Glass	1

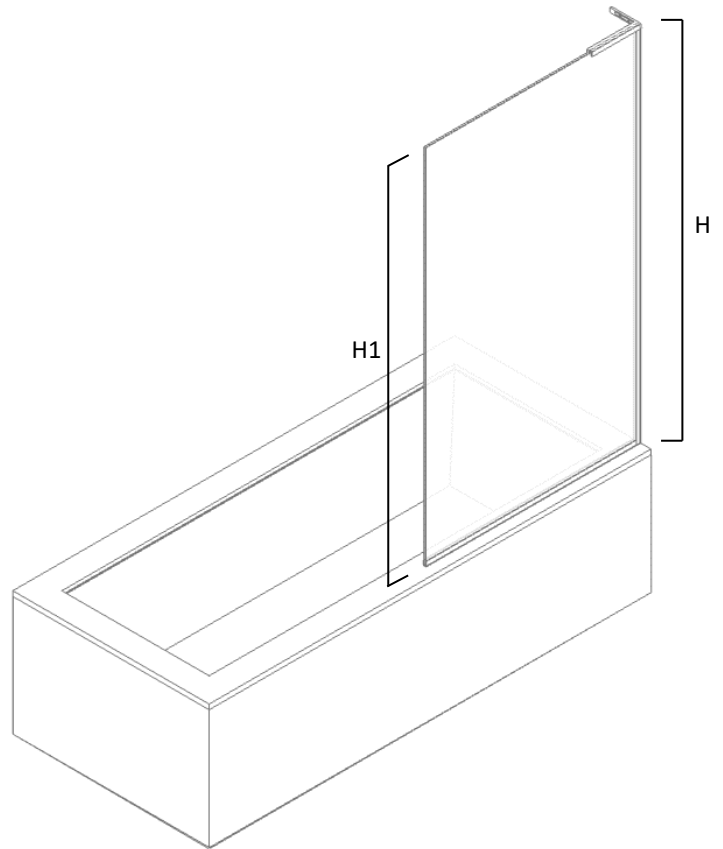


MYA GOLD	A+B (mm)	H1	H (mm)
70MYA_G	695-703	1480	1485
80MYA_G	795-803	1480	1485
90MYA_G	895-903	1480	1485
100MYA_G	995-1003	1480	1485
110MYA_G	1055-1070	1480	1485
120MYA_G	1155-1170	1480	1485

LEFT

RIGHT

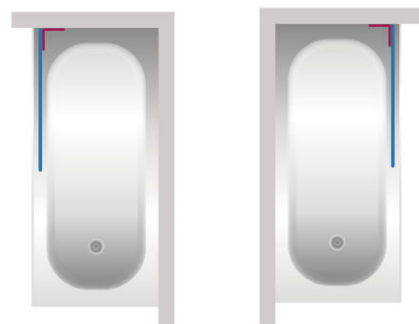

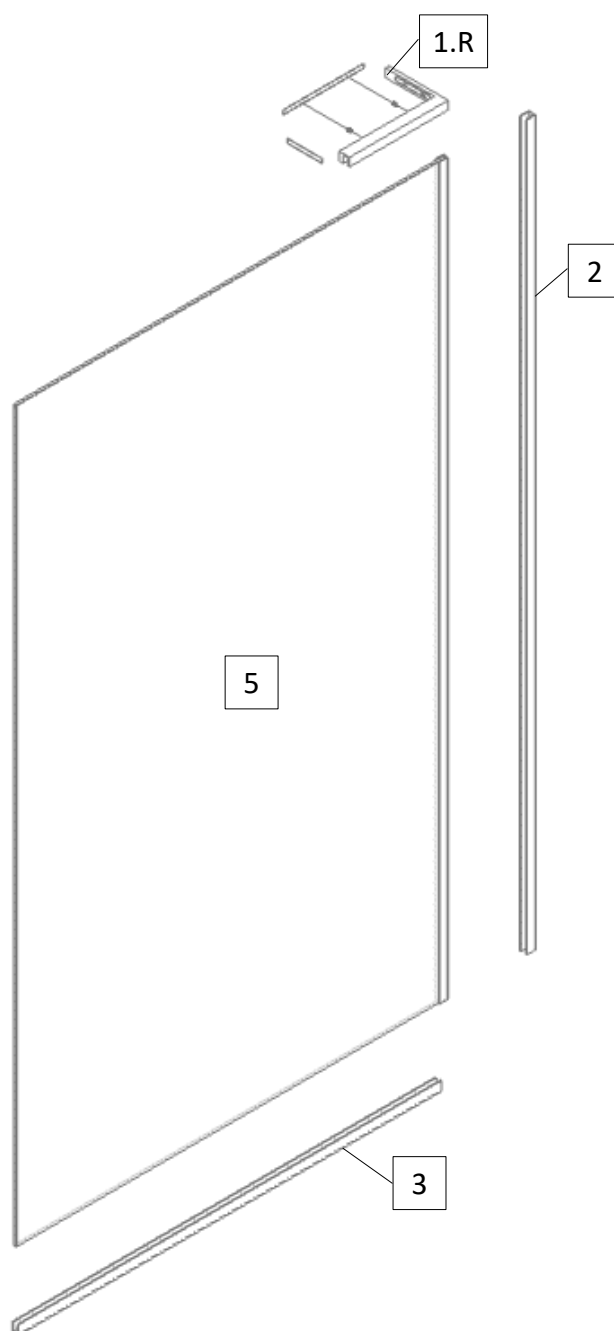

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

