


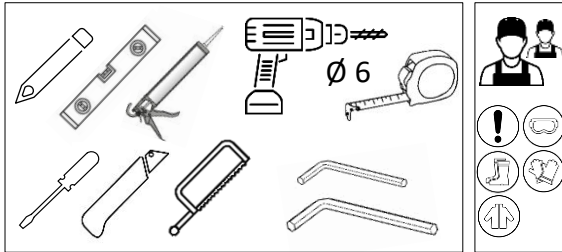













MARIKA

Dušas kabīnes montāžas instrukcija


Инструкция по монтажу душевой кабины

Shower enclosure installation assembly

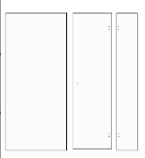



1.		PAL-01	2
2.		PAL-01B	1
3.		PAL-01B_2	1
4.		DZT1000CHRD19	1
5.		MF-42/8-ER	1
6.		R1653308	1
7.		400211PS-013	1
8.		SSPBH-772	2
9.		PSDK-05	1
10.		SC-ALU8X9NEW	1
11.		SC-SL-UZL180R/L	1
12.		SC-SL-UZL90L/R	1
13.		3,5x35 SK1SET; Ø 6	2
14.		8 mm Safety Glass	1
15.		8 mm Safety Glass	1
16.		8 mm Safety Glass	1



MARIKA	A + B (mm)	C (mm)	H (mm)
80X80MAR	794-800	787-792	1988
90X90MAR	894-900	887-892	1988
100X100MAR	994-1000	987-992	1988
110X110MAR	1094-1100	1087-1092	1988
120X120MAR	1194-1200	1187-1192	1988
120X80MAR	1194-1200	787-792	1988
120X90MAR	1194-1200	887-892	1988

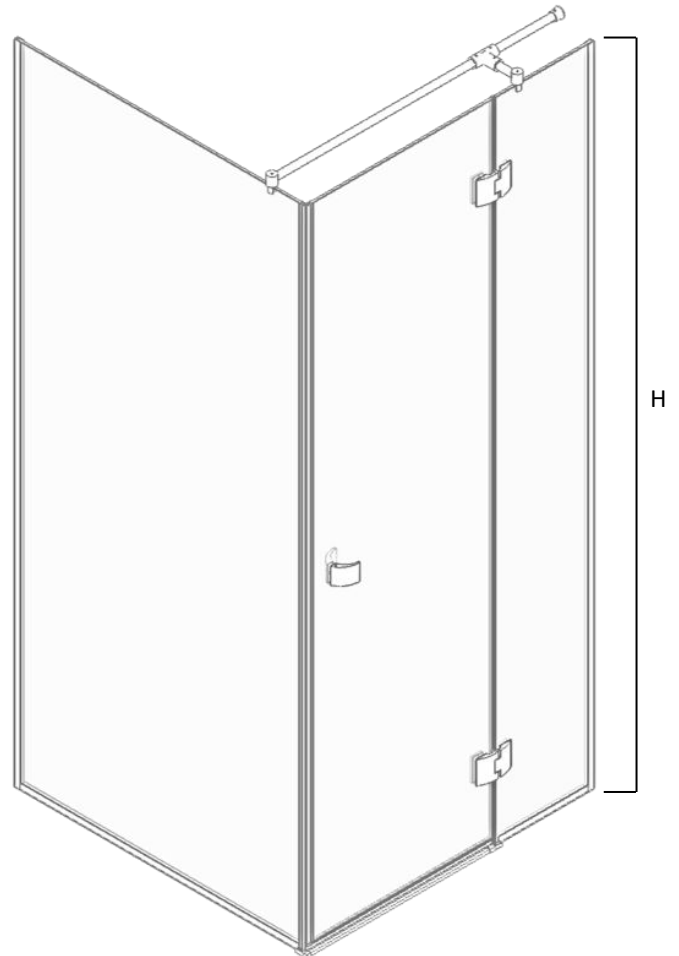

LEFT

RIGHT

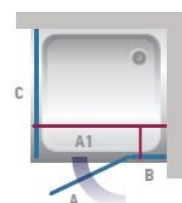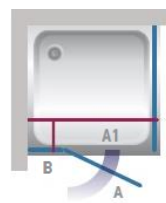

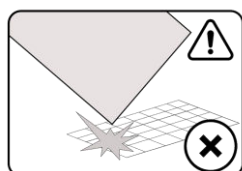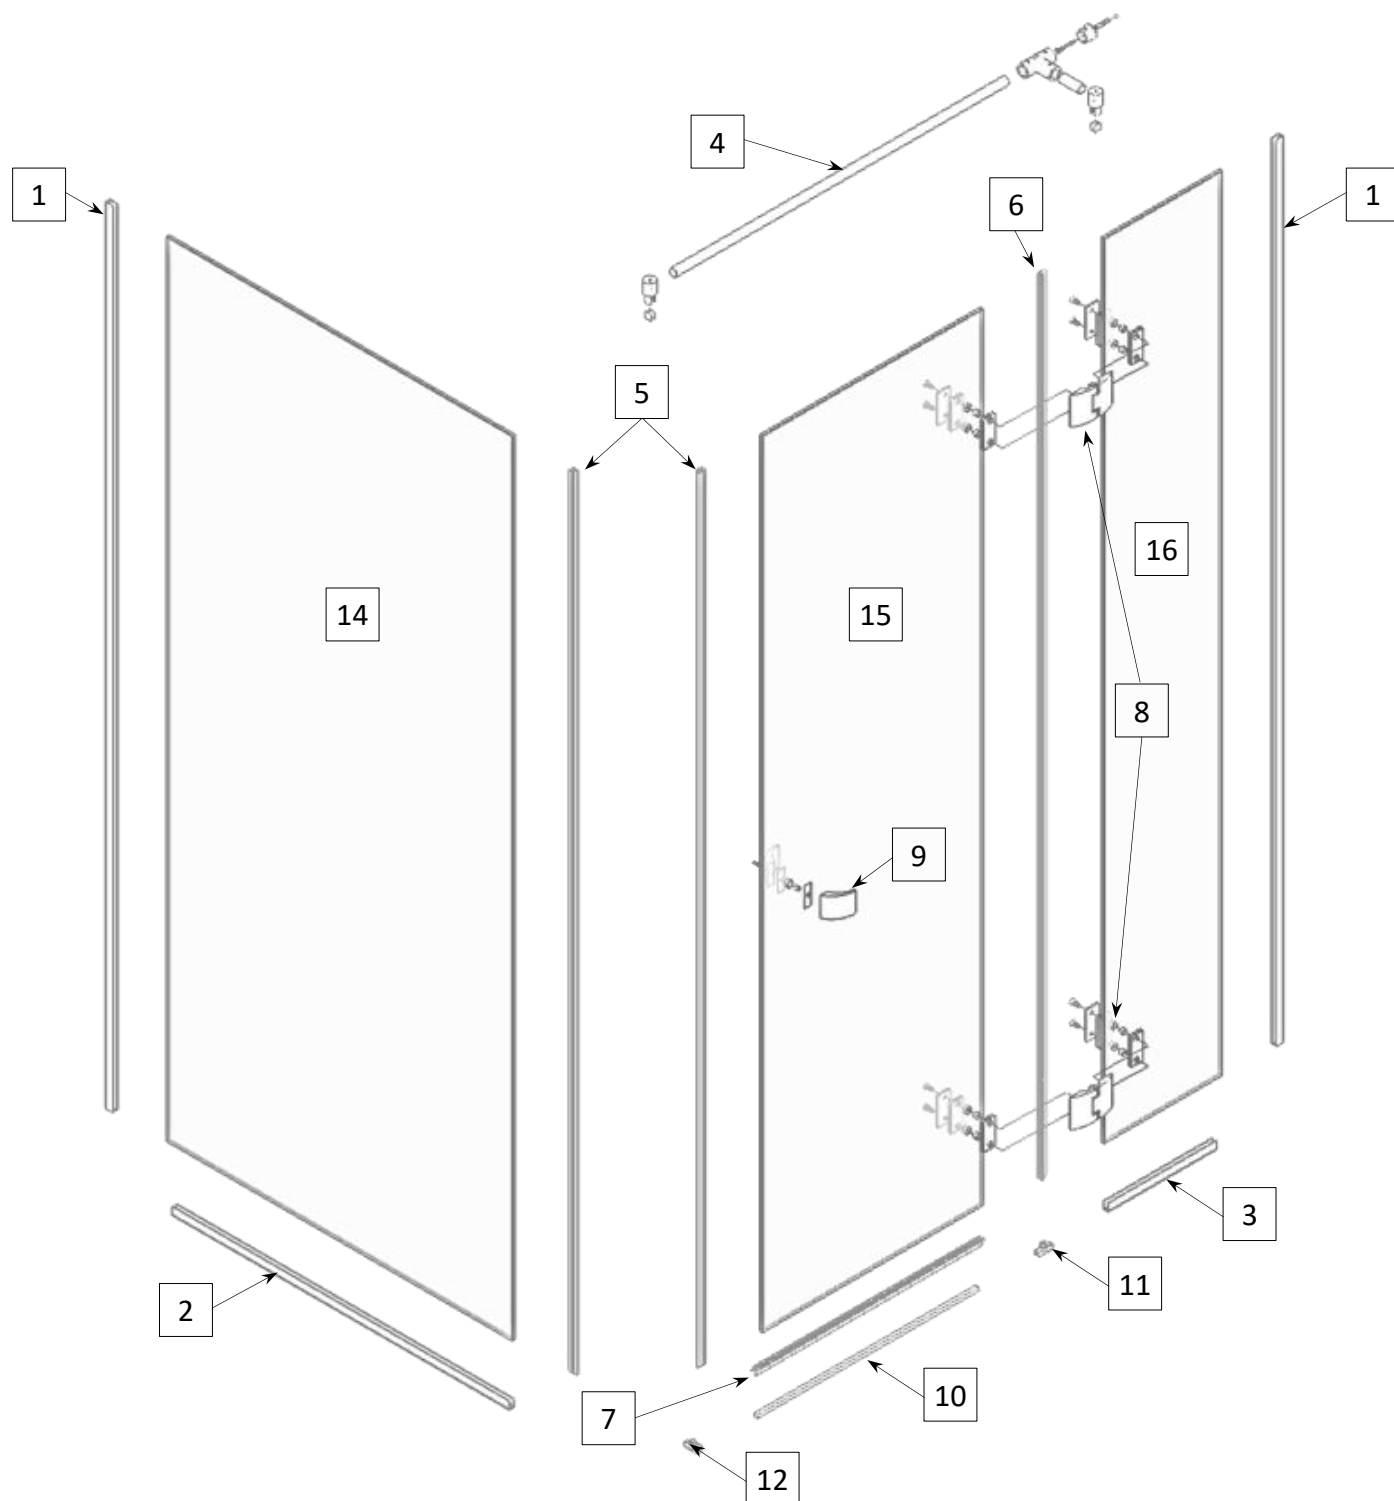





Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

1.A

MARIKA	P, mm	A+B1	C1, mm
80X80MAR	800 x 800	788	783
90X90MAR	900 x 900	888	883
100X100MAR	1000 x 1000	988	983
110X110MAR	1100 x 1100	1088	1083
120X120MAR	1200 x 1200	1188	1183
120X80MAR	1200 x 800	1188	1183
120X90MAR	1200 x 900	1188	1183

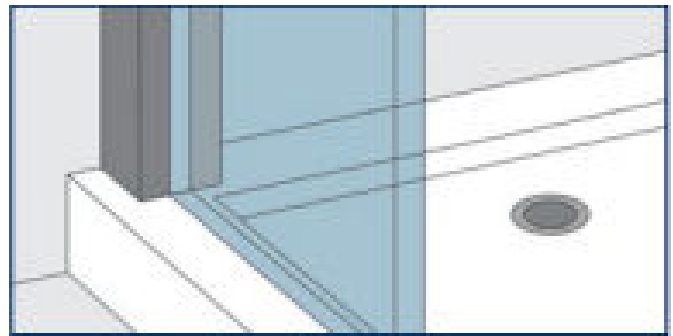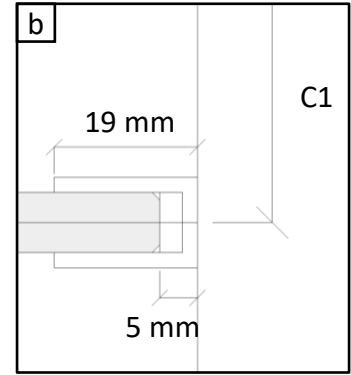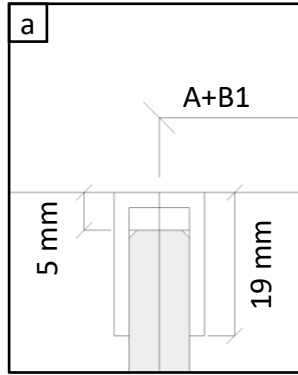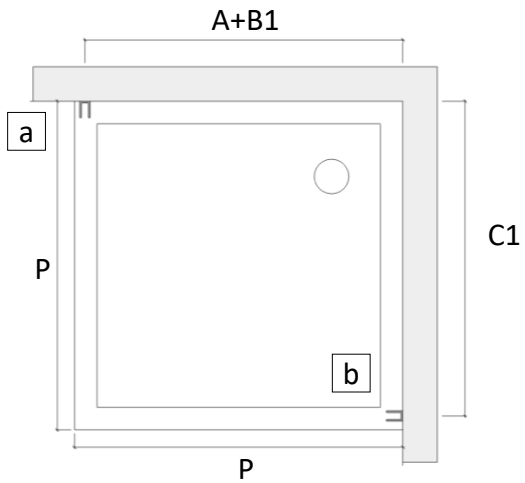

1.B

MARIKA	D	S
80X80MAR	800	800
90X90MAR	900	900
100X100MAR	1000	1000
110X110MAR	1100	1100
120X120MAR	1200	1200
120X80MAR	1200	800
120X90MAR	1200	900

