







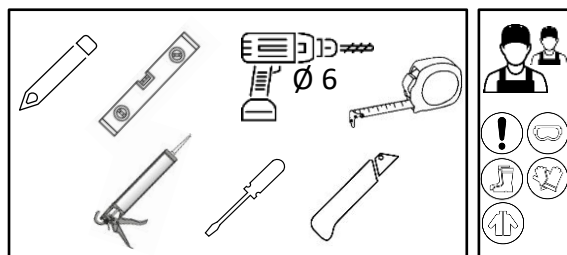



MERITA

Vannas sienas montāžas instrukcija


Инструкция по монтажу ванной стены

Bath screen installation instructions



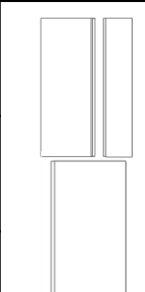
1.		PAL-01B	1
2.		PAL-01B-2	1
3.		DZT1000CHR	1
4.		ALU-U-CON200	1
5.		Spacer_NOA	1
6.		400211PS-013	1
7.		2919-8-2SERE	1
8.		3,5X35 SK1SET	1
9.		6 mm Safety Glass + VIRA20CH	1
10.		6 mm Safety Glass + VIRA20CH	1
11.		6 mm Safety Glass	1



MERITA	A (mm)	H (mm)
70MER	360-370	1500
80MER	460-470	1500
90MER	560-570	1500
100MER	660-670	1500
110MER	760-770	1500
120MER	860-870	1500

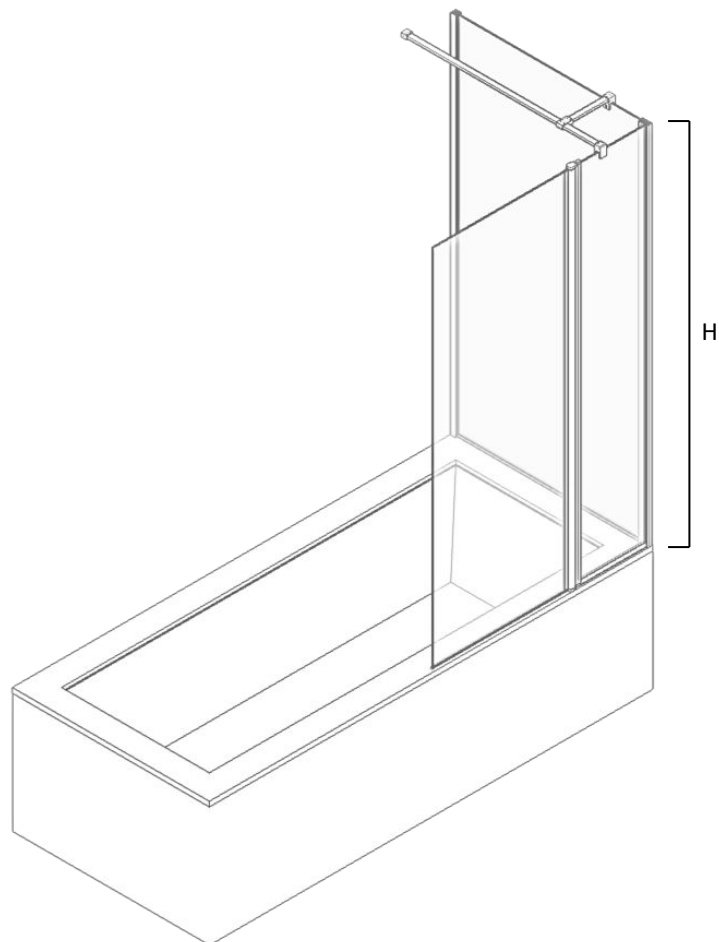

LEFT

RIGHT

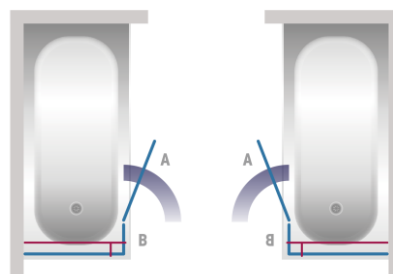

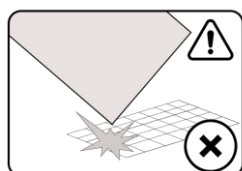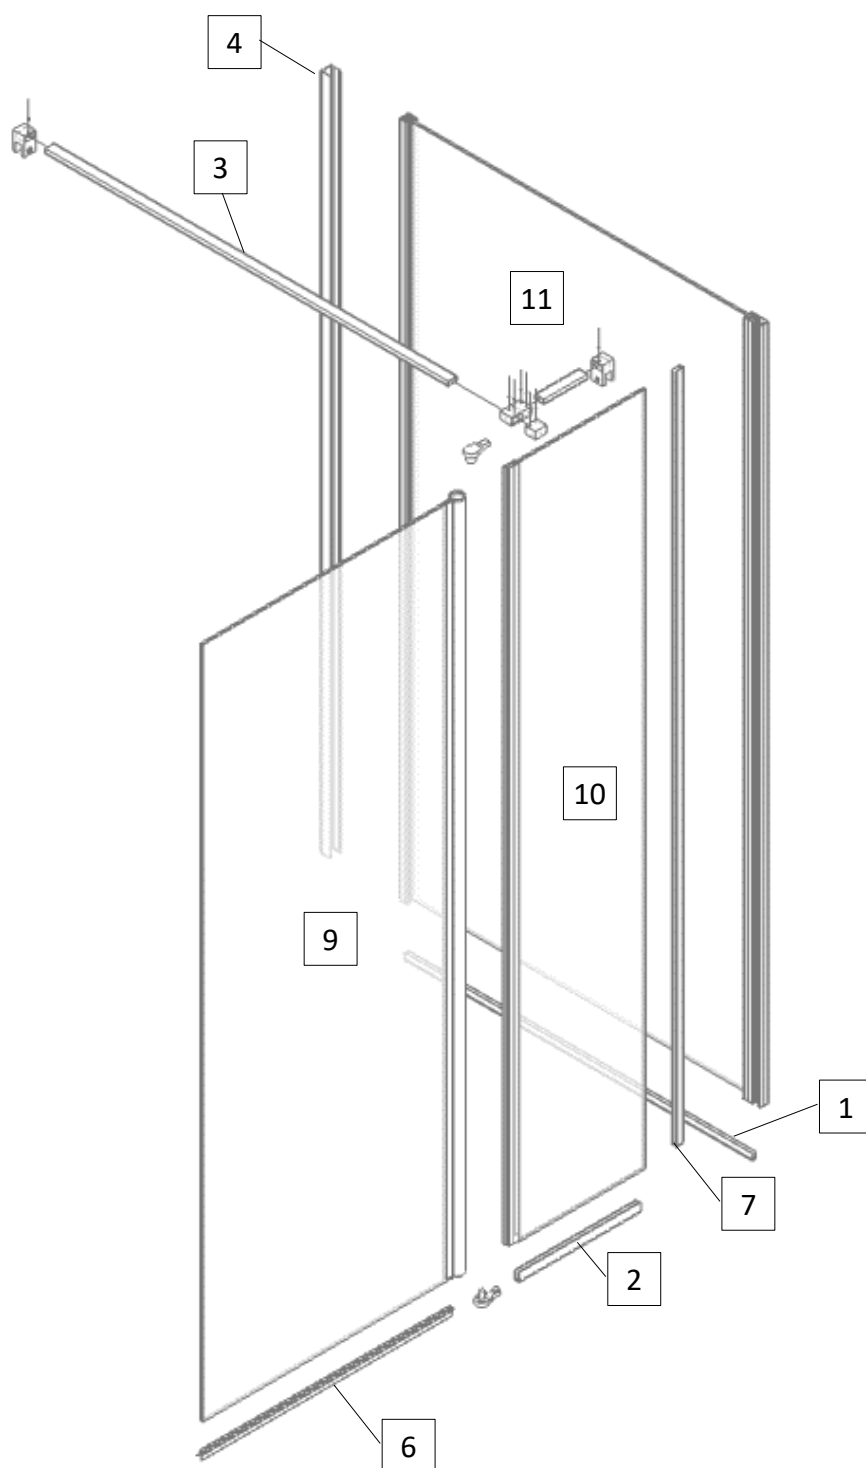

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

