


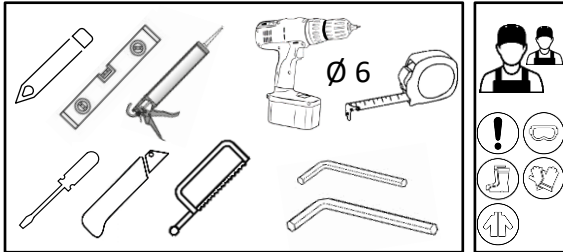












# MONTAGNA



## Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины

Shower enclosure installation assembly





1.		PAL-01	2
2.		PAL-01B	2
3.		SU45CH + SK2SET1	2
4.		NLO-KP2908-8-2,5	1
5.		R1653308	1
6.		400211PS-013	1
7.		6802-135	2
8.		DR-CH32	1
9.		SC-10x15ST	1
10.		8536E6/EV5-135R	1
11.		8536E6/EV5-135L	1
12.		3,5x35 SK1SET; Ø 6	2
13.		8 mm Safety Glass	1
14.		8 mm Safety Glass	1
15.		8 mm Safety Glass	1

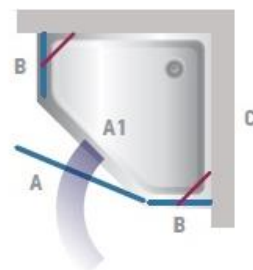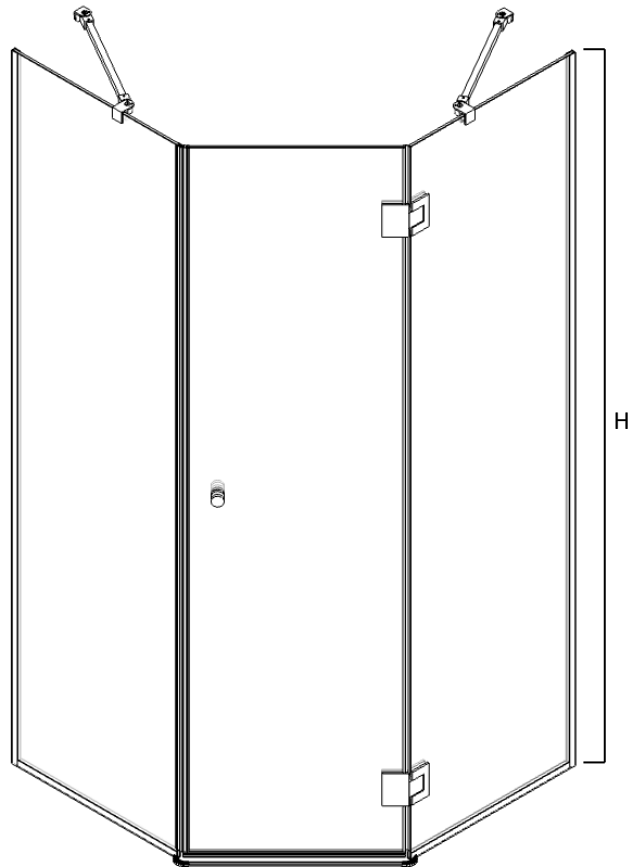

MONTAGNA	C (mm)	A (mm)	B (mm)	H (mm)
80x80MONT	790	490-495	425-430	1988
90x90MONT	890	490-495	525-530	1988
100x100MONT	990	590-595	555-560	1988
110x110MONT	1090	590-595	655-660	1988

# MONTAGNA

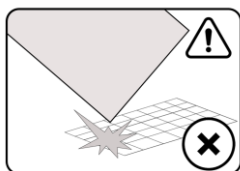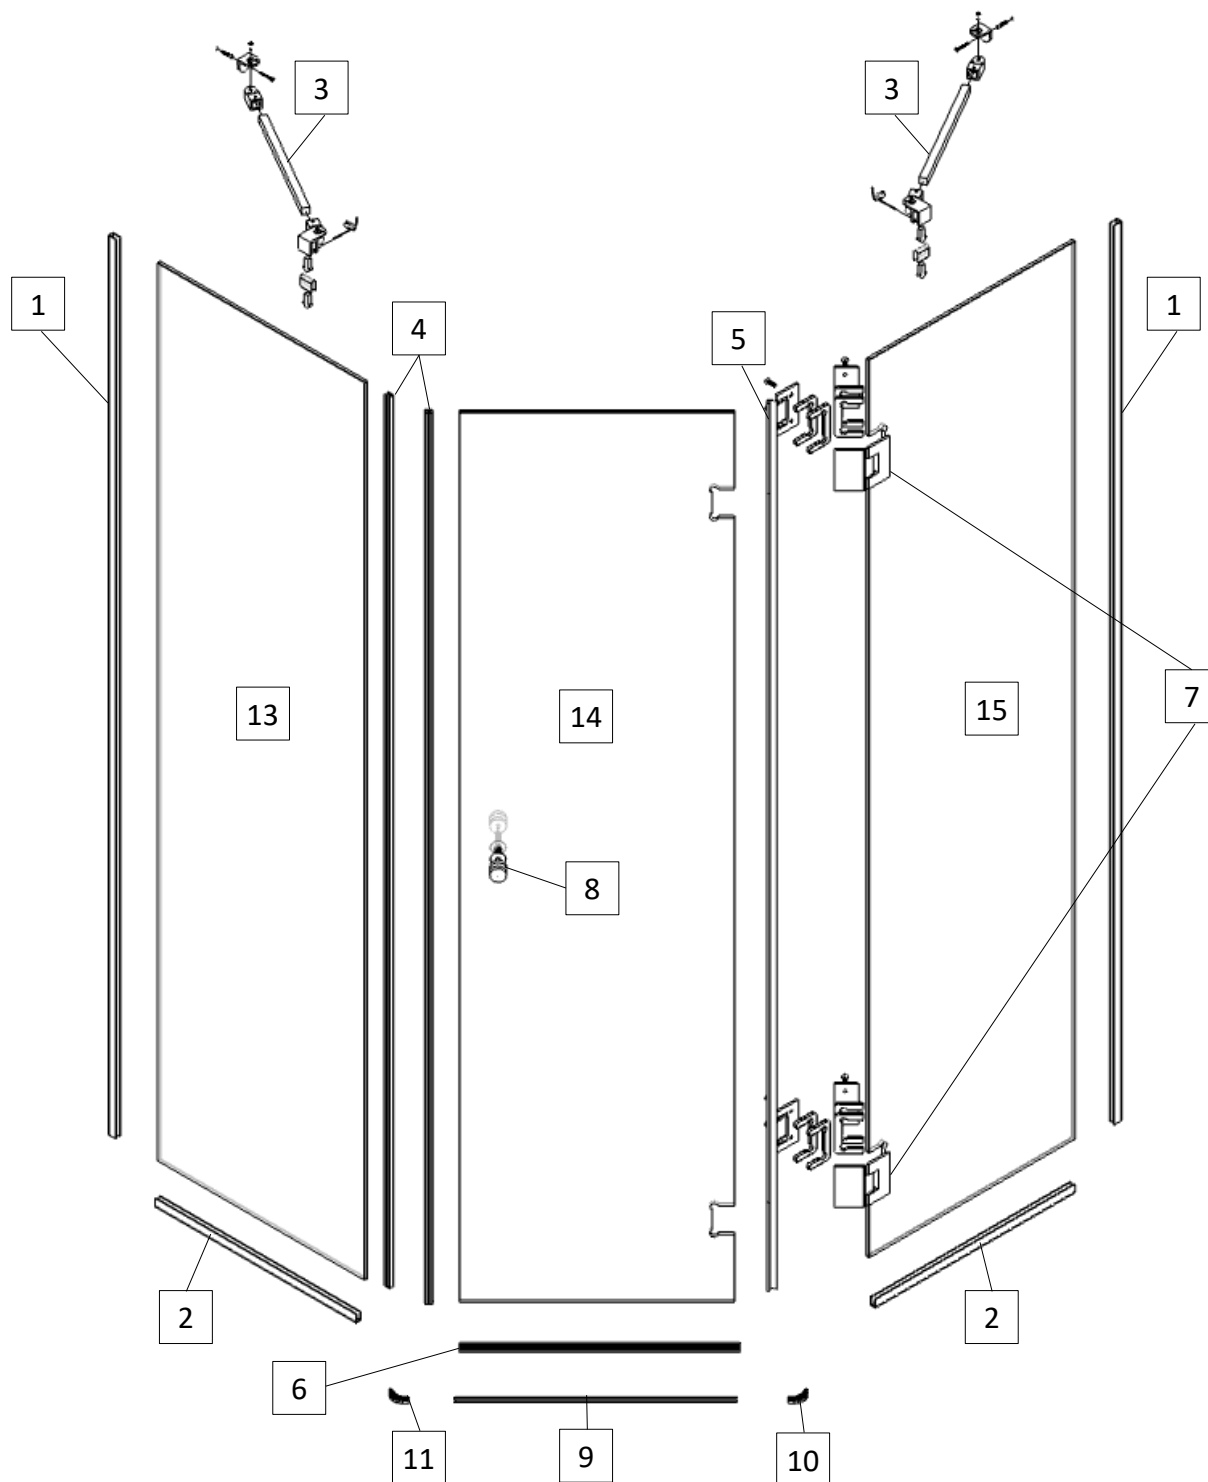





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

# 1.A

MONTAGNA	P, mm	C, mm
80x80MONT	800 x 800	783
90x90MONT	900 x 900	883
100x100MONT	1000 x 1000	983
110x110MONT	1100 x 1100	1083

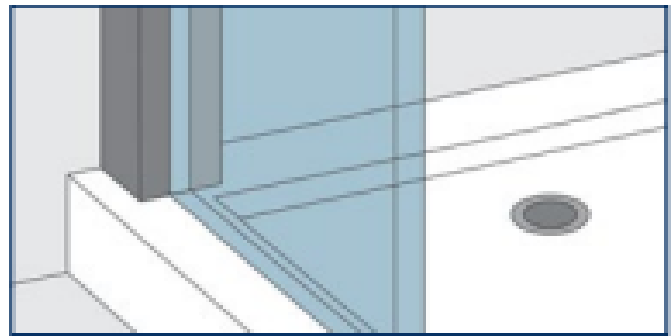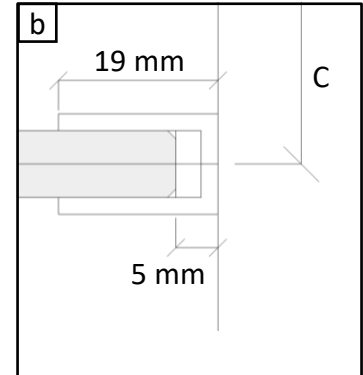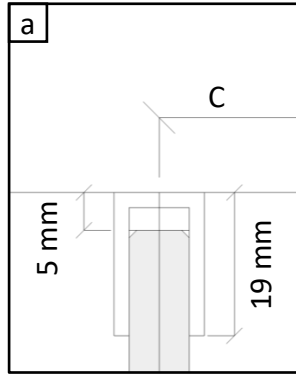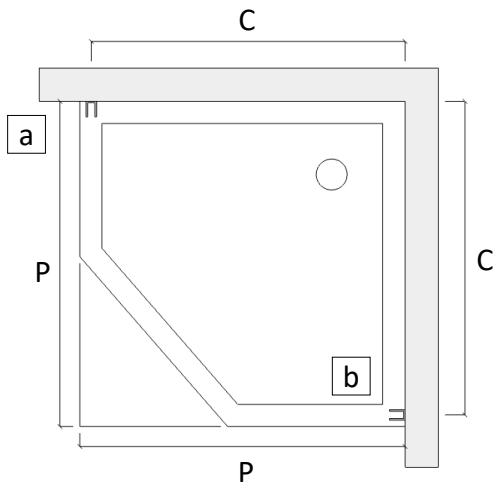

# 1.B

MONTAGNA	D, mm	S, mm
80x80MONT	800	800
90x90MONT	900	900
100x100MONT	1000	1000
110x110MONT	1100	1100

