


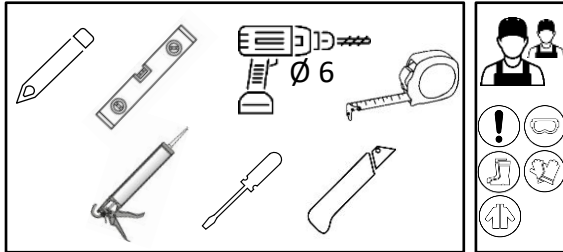





# NOA


## Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены


Bath screen installation instructions



1.		ALU-U-CON150	1
2.		SU45CH + SK2SET	1
3.		3,5X35 SK1SET	1
4.		DRdustHOR480	1
5.		Spacer_NOA	1
6.		6 mm Safety Glass + PROFILE	1

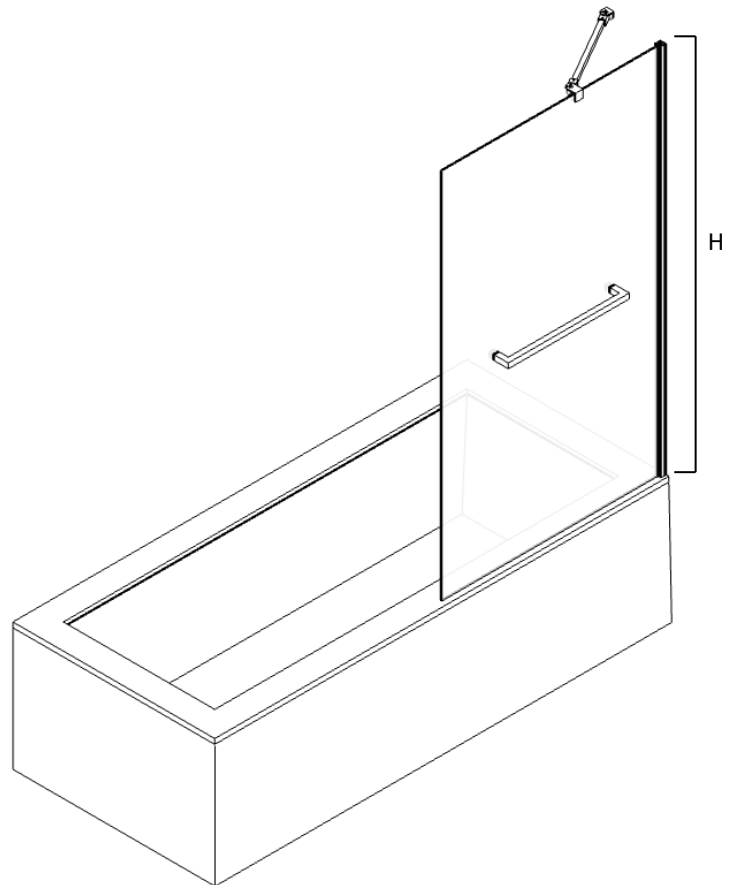



NOA	A (mm)	H (mm)
70NOA	655-670	1480
80NOA	755-770	1480
90NOA	855-870	1480
100NOA	955-970	1480
110NOA	1055-1070	1480
120NOA	1155-1170	1480

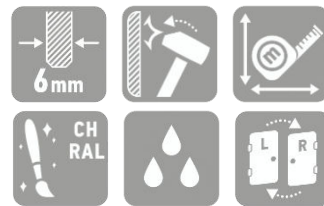

LEFT

RIGHT



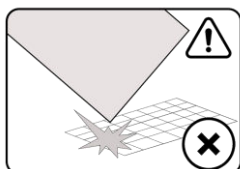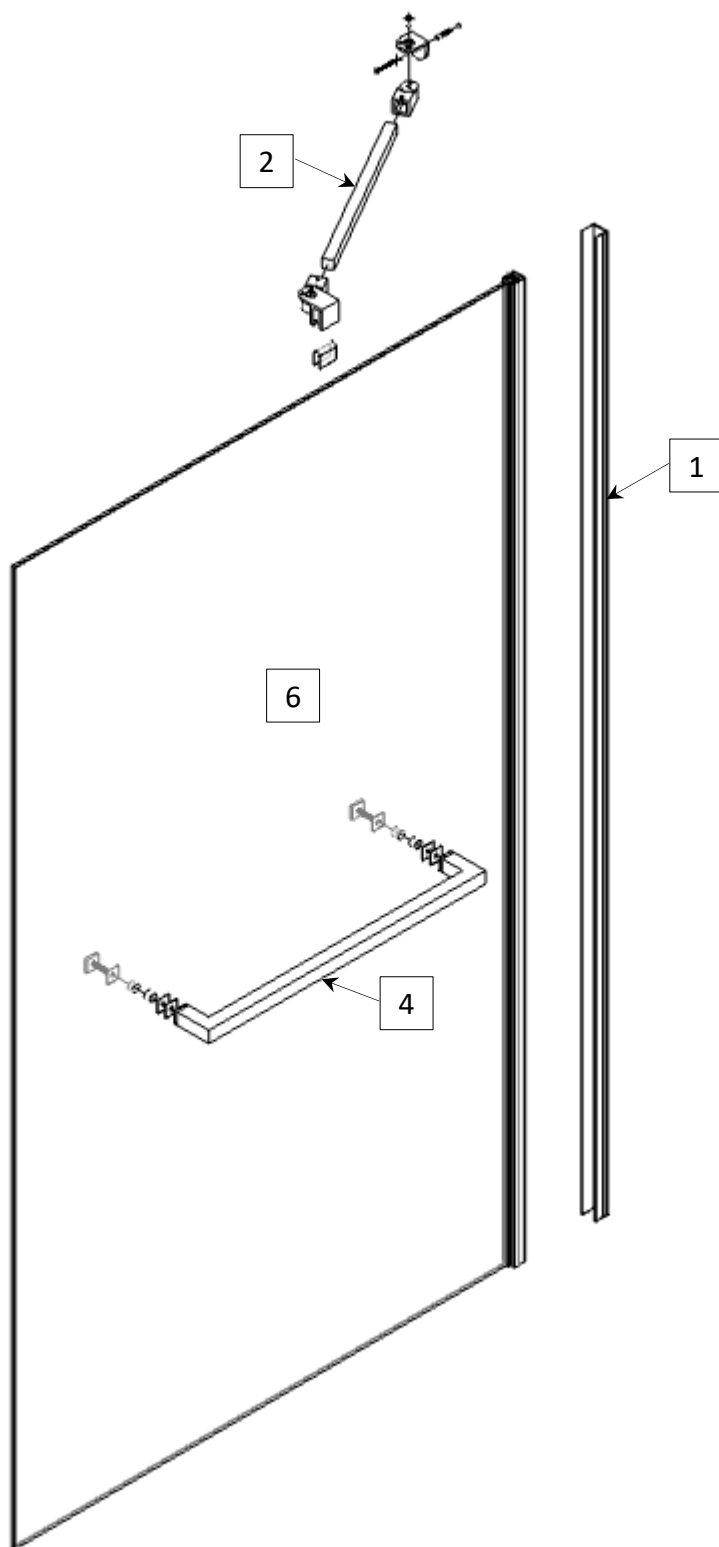

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

