




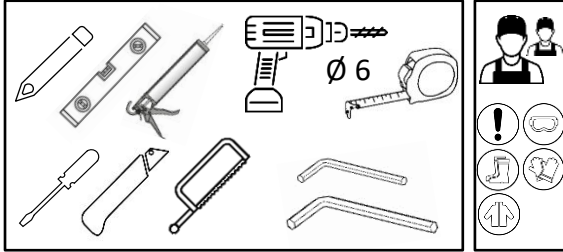




# NICOLE


## Dušas kabīnes montāžas instrukcija

Инструкция по монтажу душевой кабины



Shower enclosure installation assembly


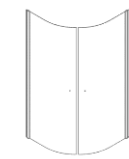


1.		VIRA20CH	2
2.		MF-36/6-ER	1
3.		R1653308	2
4.		DR-CH32	2
5.		3,5x13 SK2SET	2
6.		3,5x35 SK1SET; Ø 6	2
7.		6 mm Safety Glass +VIRA20CH	1
8.		6 mm Safety Glass +VIRA20CH	1

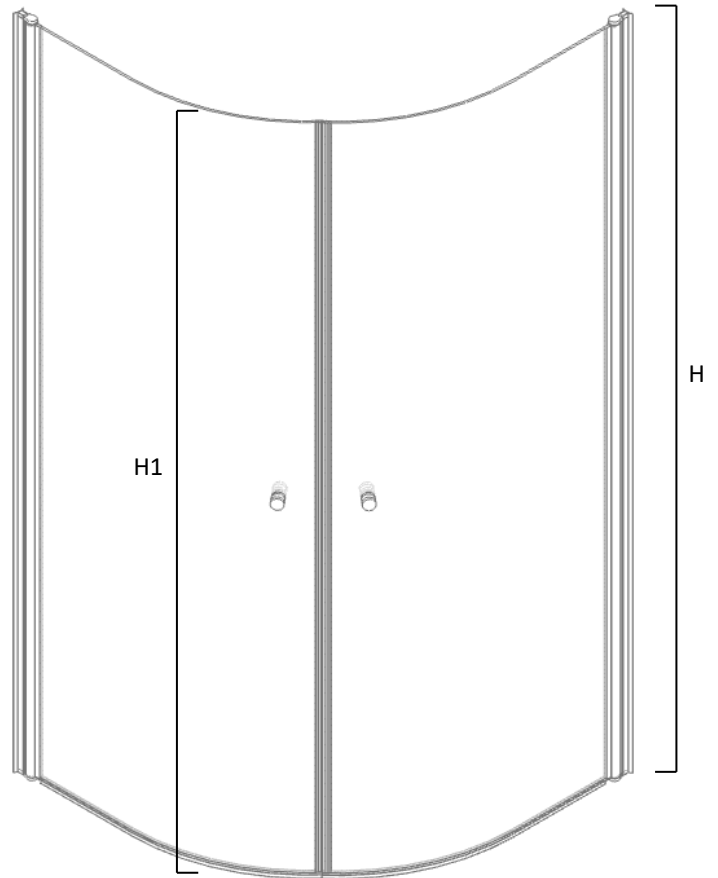

NICOLE	A + B (mm)	A1 (mm)	H1 (mm)	H (mm)
90X90NIC	873-878	1150	1993	2000

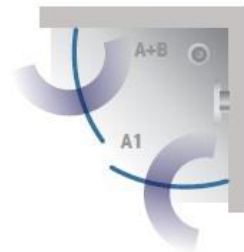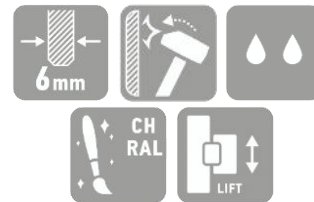

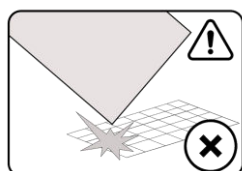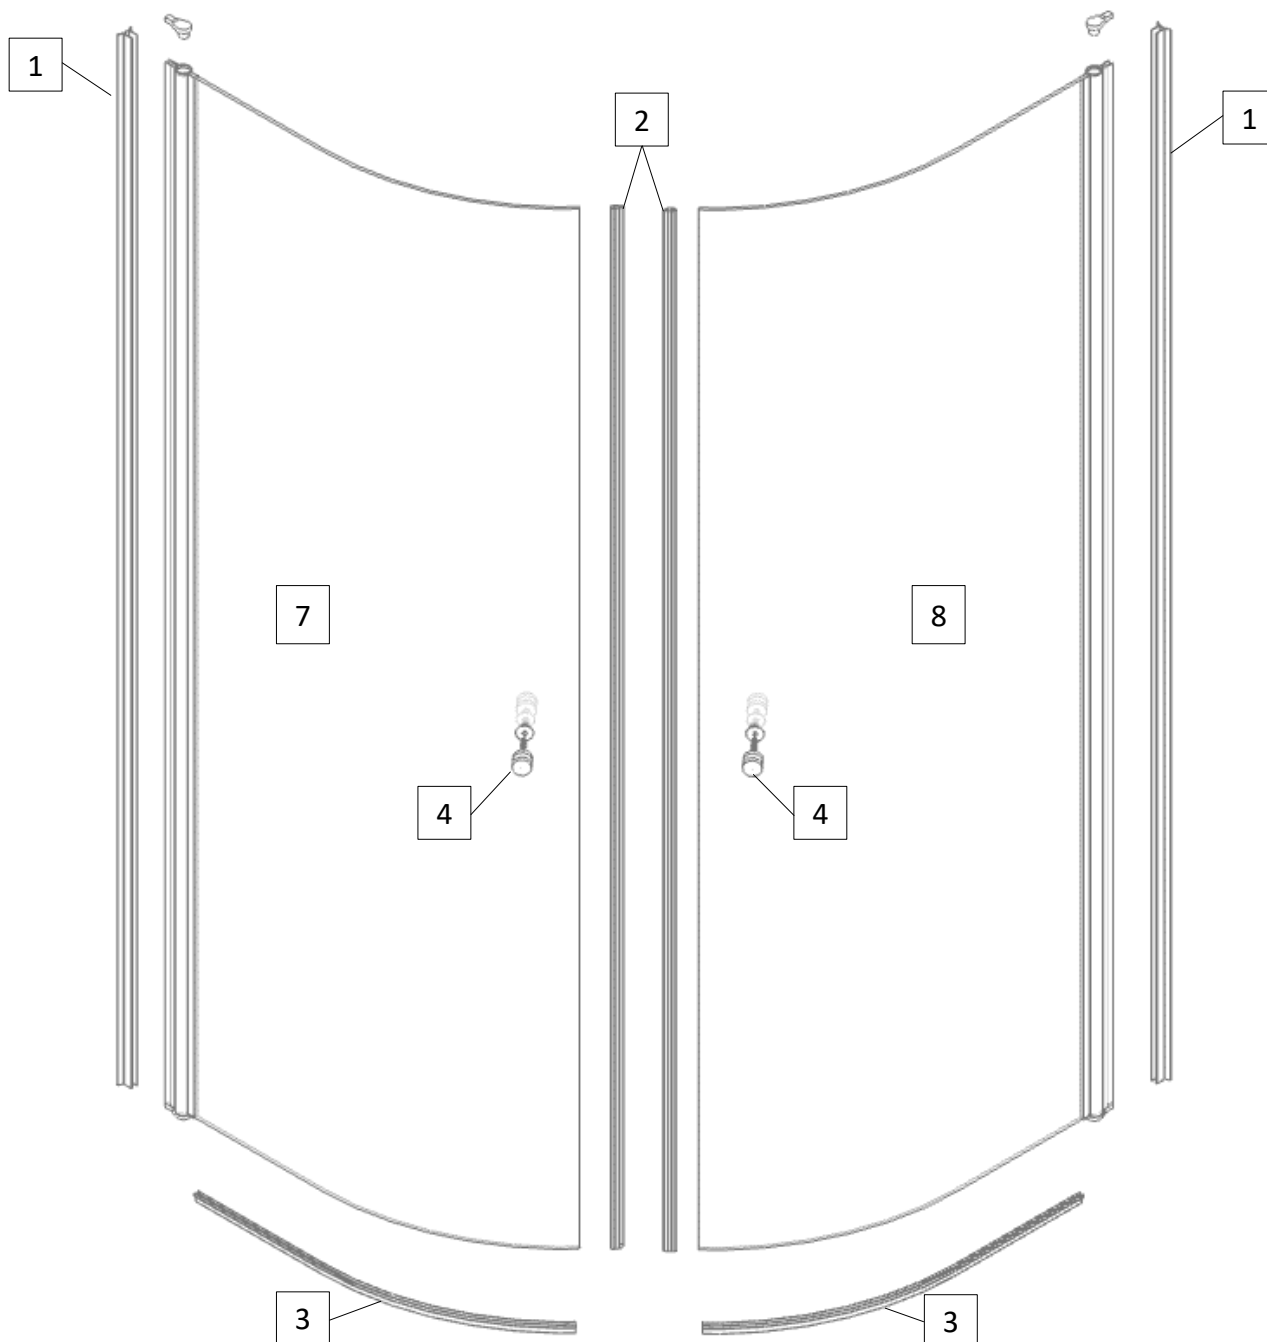





**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

1.A

NICOLE	P, mm	C, mm
90X90NIC	900 X 900	870

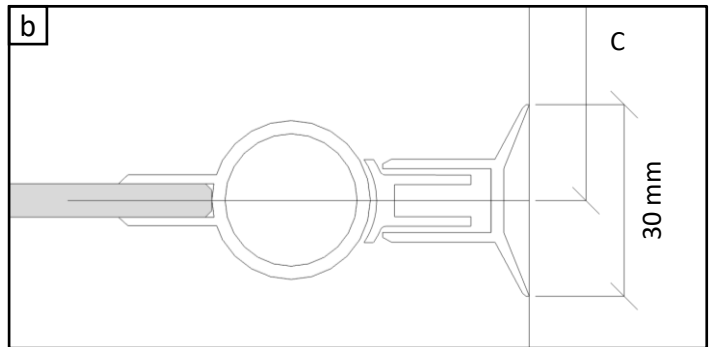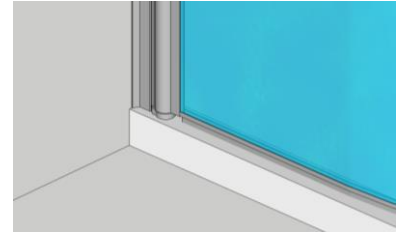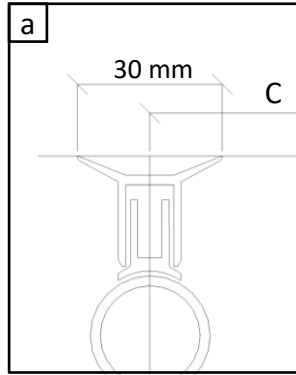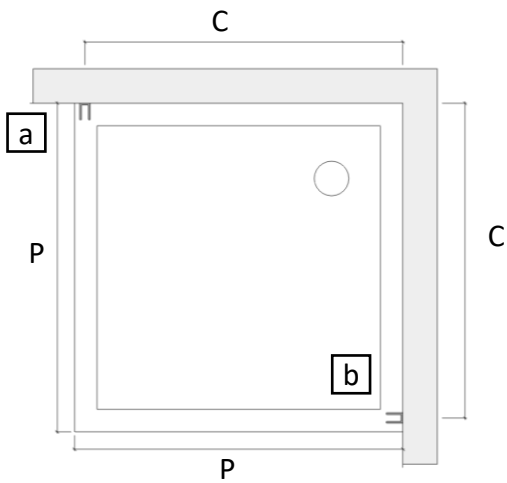

1.B

NICOLE	D, mm	S, mm
90X90NIC	870	870

