



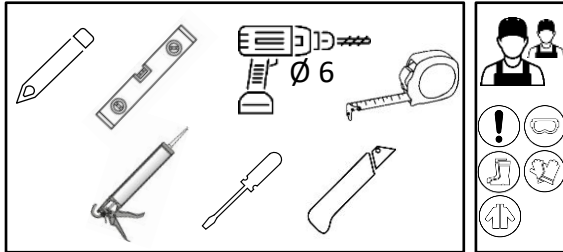



NORIS CORB BLACK DEEP



Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions

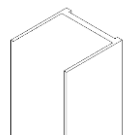

1.		ALU-U-CON150	1
2.		U-SC22.500-ALCH	1
3.		SU45CH + SK2SET	1
4.		3,5X35 SK1SET	1
5.		6 mm Safety Glass + PROFILE	1

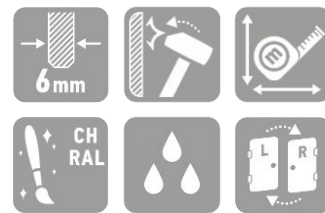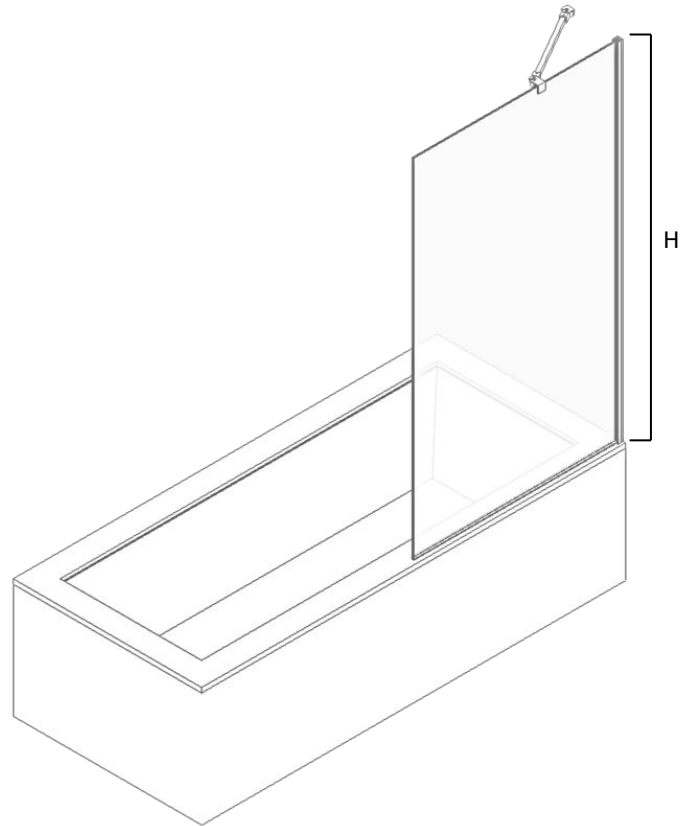


LEFT

RIGHT



NORIS COR BLACK	A (mm)	H (mm)
70NOR_B	660-670	1480
80NOR_B	760-770	1480
90NOR_B	860-870	1480
100NOR_B	960-970	1480
110NOR_B	1060-1070	1480
120NOR_B	1160-1170	1480

NORIS COR BLACK DEEP

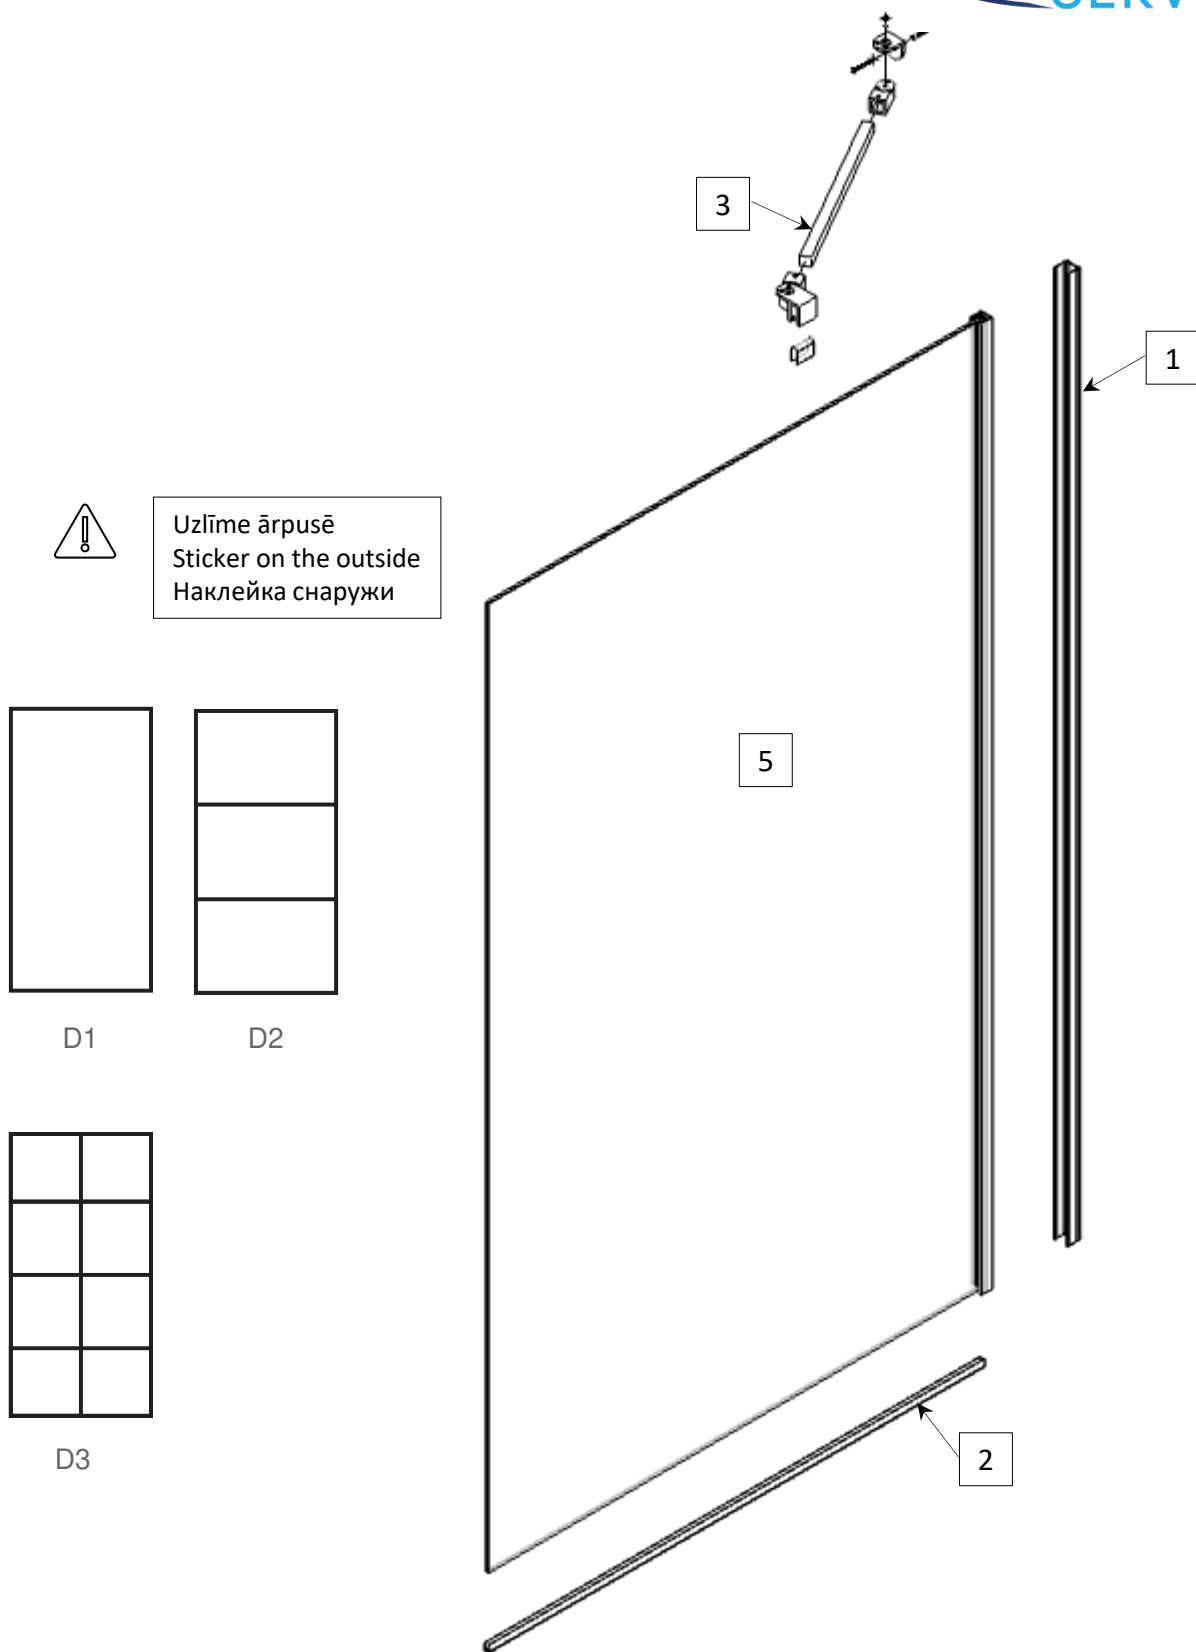

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

