



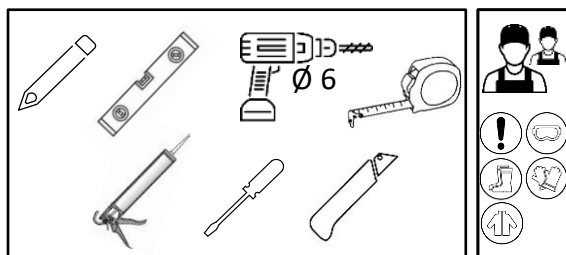


NORIS


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions

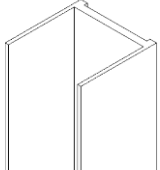

1.		ALU-U-CON200	1
2.		U-SC22.500-ALCH	1
3.		3,5X35 SK1SET	1
4.		6 mm Safety Glass + PROFILS	1

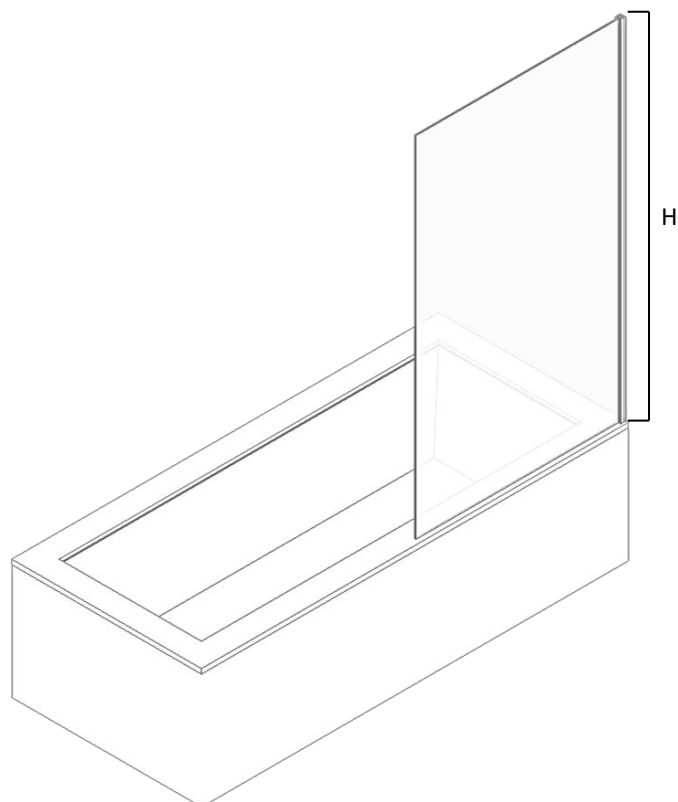



NORIS	A (mm)	H (mm)
40NOR	360-370	1480
50NOR	460-470	1480
60NOR	560-570	1480
70NOR	660-670	1480
80NOR	760-770	1480
90NOR	860-870	1480



LEFT

RIGHT

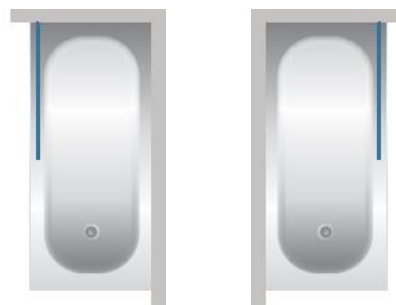

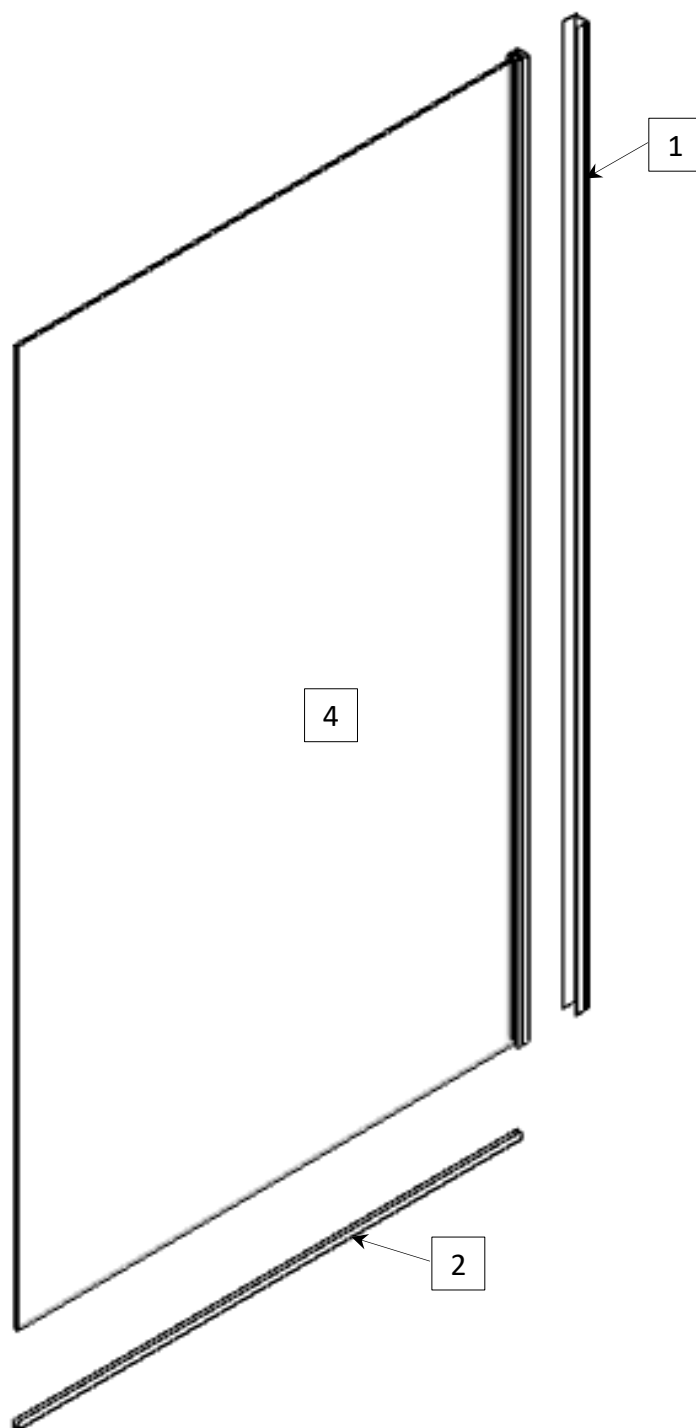

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

