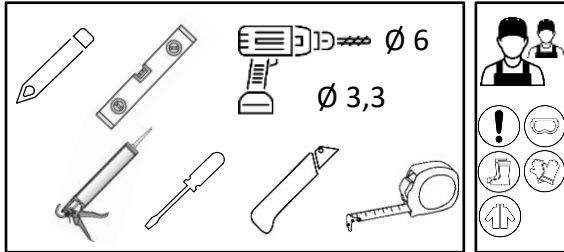







# PIA


## Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены

Bath screen installation instructions



1.		BS01SD	1
2.		3,5X35 3K1SET	1
3.		3,5x13 SK2SET	1
4.		SD3L	2
5.		6 mm Safety Glass profile hinge system	1


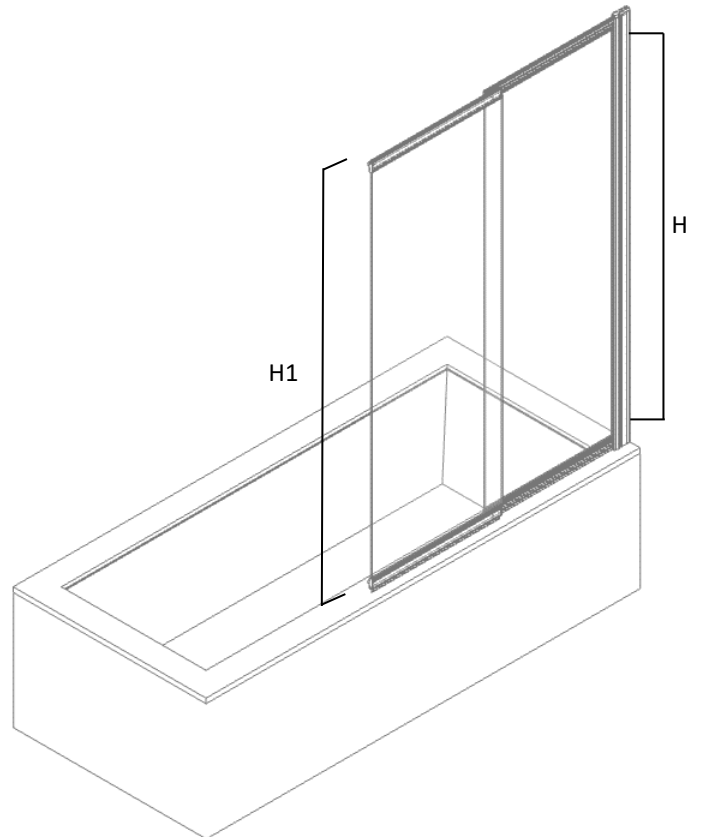


LEFT

RIGHT



PIA	A+B (mm)	H (mm)	H1 (mm)
70PIA	430-700	1500	1480
80PIA	480-800	1500	1480
90PIA	530-900	1500	1480
100PIA	580-1000	1500	1480

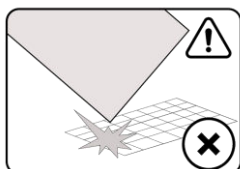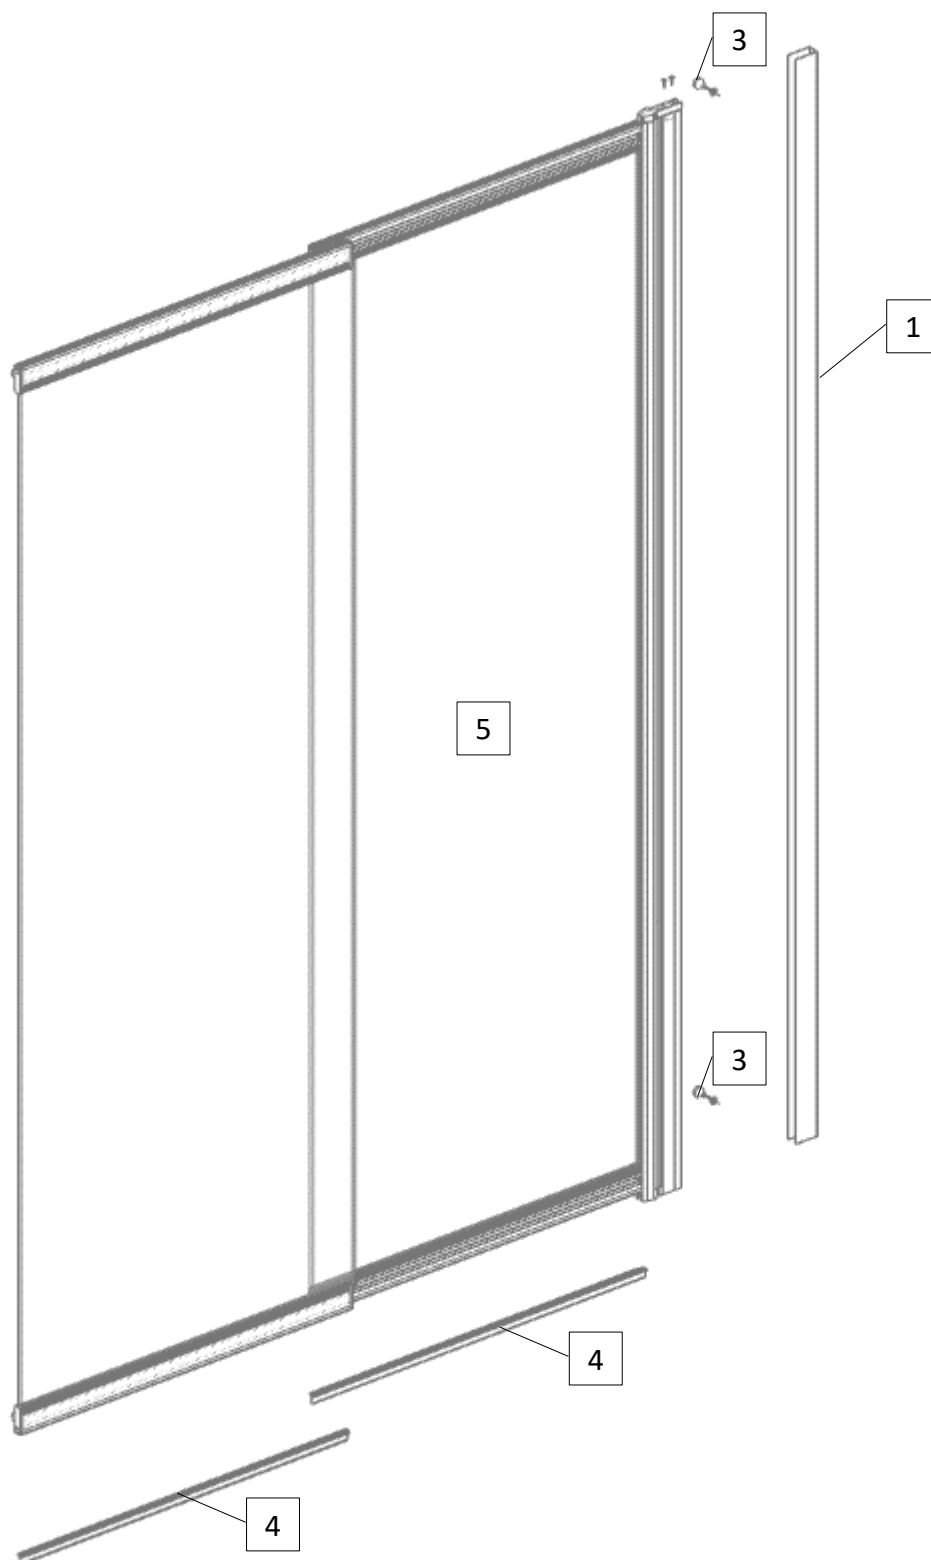

**Uzmanību!** Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

**Внимание!** Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

**Attention!** Tempered glass - proceed with care. Protect the corners of the glass from impact.

