



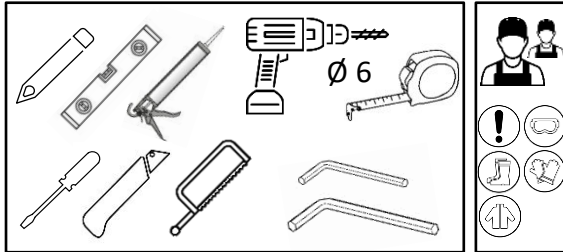







PAOLA


Vannas sienas montāžas instrukcija

Инструкция по монтажу ванной стены


Bath screen installation instructions



1.		PAL-01	1
2.		PAL-01B	1
3.		SU45CHKANT + SK2SET1	1
4.		R1653308	1
5.		8192ZN5-BS	2
6.		KVADRO30CH	1
7.		3,5x35 SK1SET; Ø 6	1
8.		8 mm Safety Glass	1
9.		8 mm Safety Glass	1

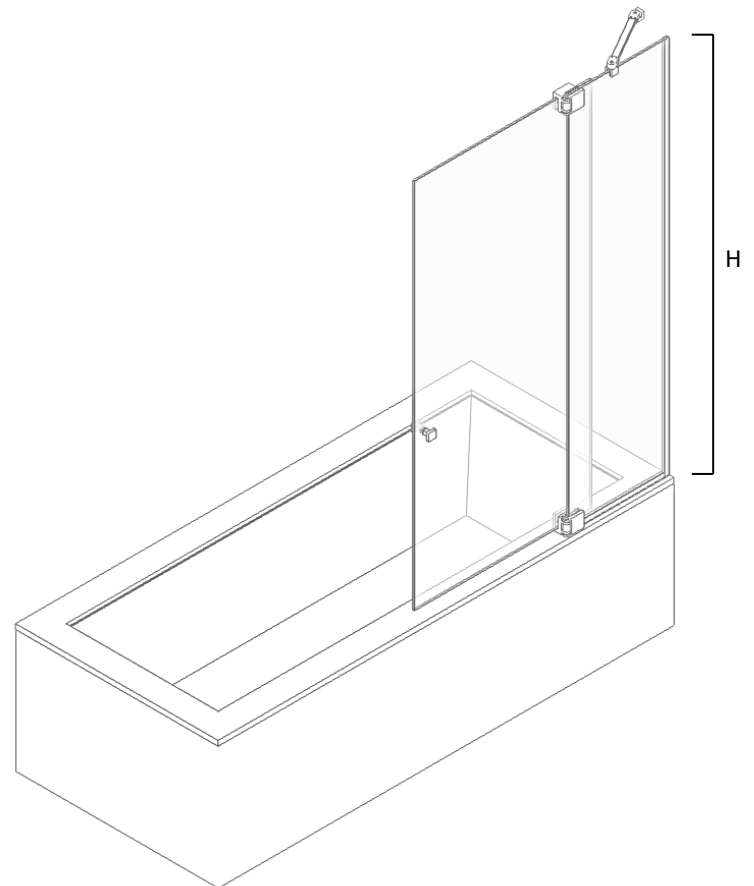

LEFT


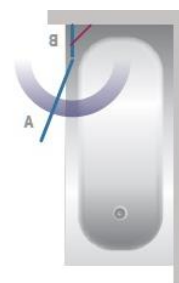


RIGHT



PAOLA	A+B (mm)	B (mm)	H (mm)
70PAO	695-703	200	1500
80PAO	795-803	300	1500
90PAO	895-903	300	1500
100PAO	995-1003	400	1500
110PAO	1095-1103	400	1500
120PAO	1195-1203	500	1500

PAOLA

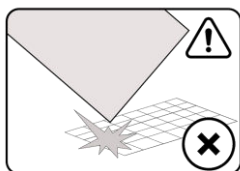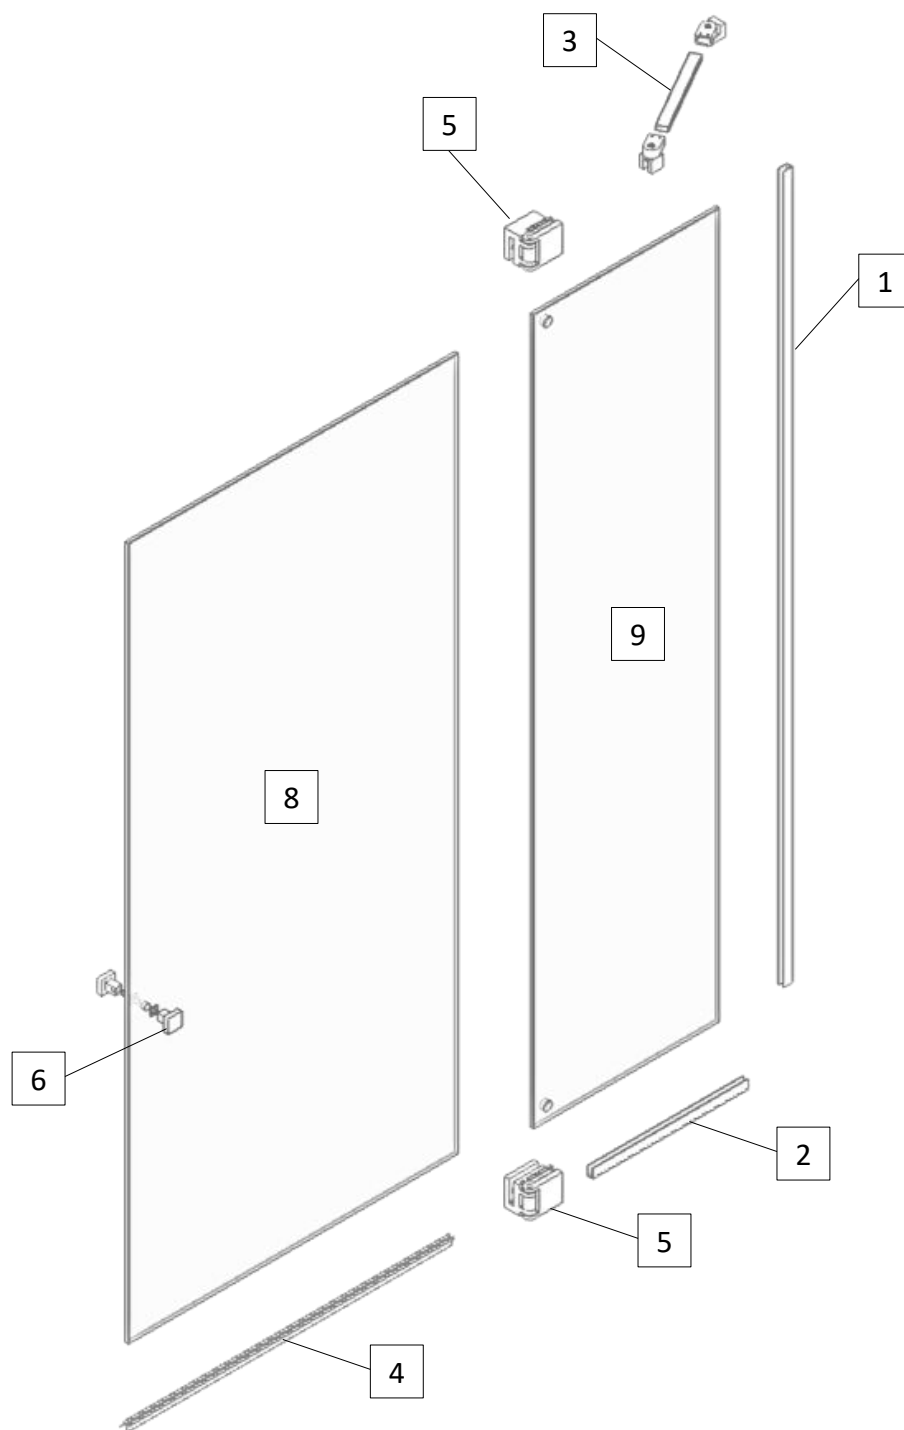

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

