






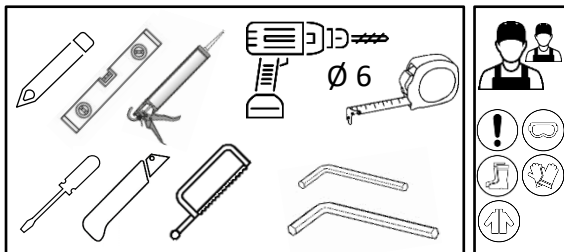

PRELUDE GOLD


Dušas durvju montāžas instrukcija

Инструкция по монтажу душевой двери

Shower door installation instructions




1.		MF-42/8-ER	1
2.		400211PS-013	1
3.		40021PS - 009	1
4.		3,5x35 SK1SET; Ø 6	1
5.		GC-2032	1
6.		MF-43MAGN	1
7.		SC-ALU8X9NEW	1
8.		DR-CH32	1
9.		WGLA6801CP + SK2SET1	2
10.		8 mm Safety Glass	1

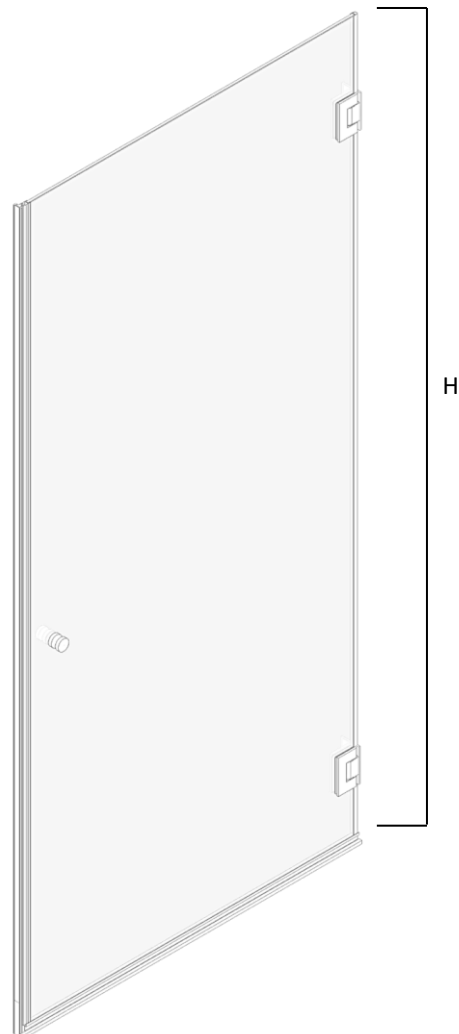



LEFT

RIGHT

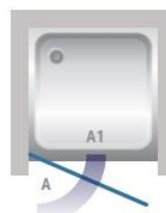

PRELUDE GOLD	A (mm)	H (mm)
70PRE_G	698-703	1988
80PRE_G	798-803	1988
90PRE_G	898-903	1988
100PRE_G	998-1003	1988

PRELUDE GOLD

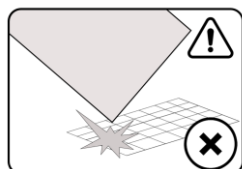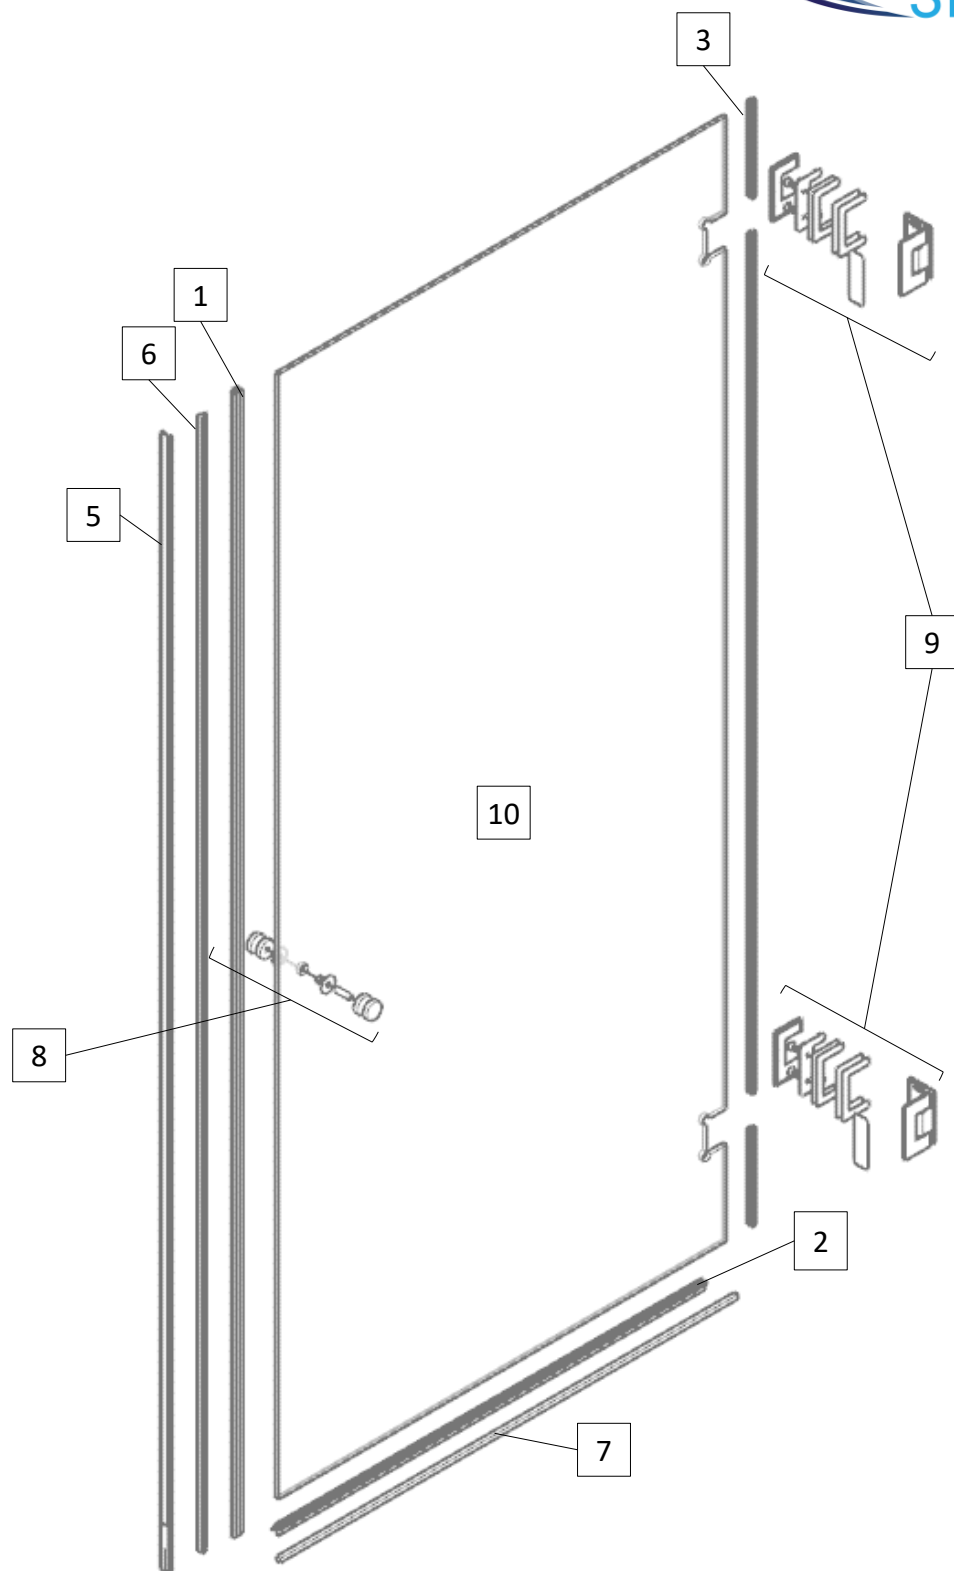

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

