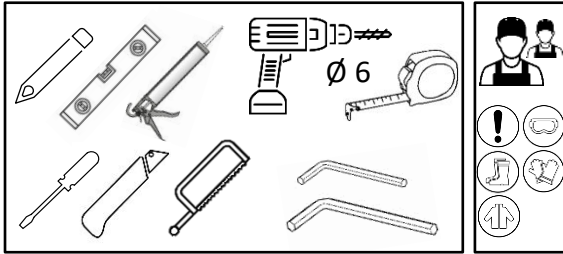






RANIA


Dušas sienas montāžas instrukcija

Инструкция по монтажу душевой стены

Shower wall installation instructions



1.		ALU-U-CON150	1
2.		U-SC22.500-ALCH	1
3.		3,5x35 SK1SET Ø 6	1
4.		6 mm Safety Glass + PROFILE	1

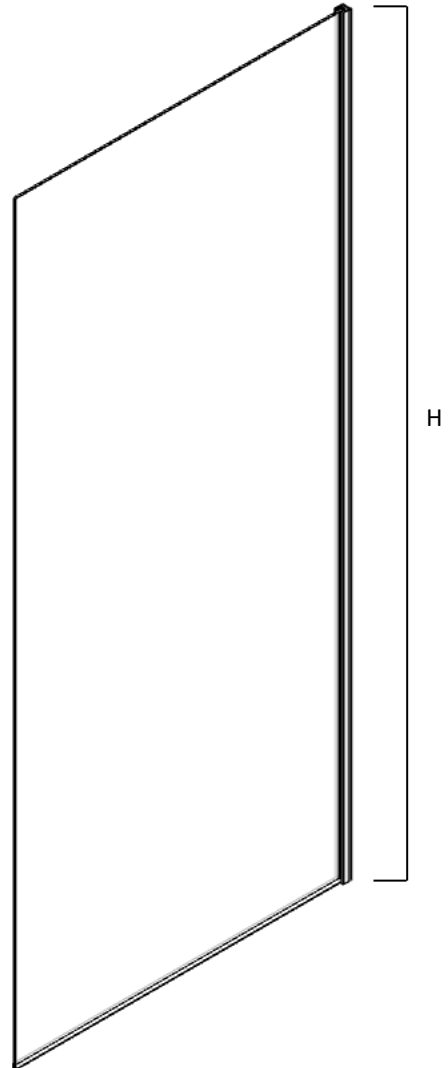




RANIA	A (mm)	H (mm)
70RAN	690-700	2000
80RAN	790-800	2000
90RAN	890-900	2000



LEFT

RIGHT

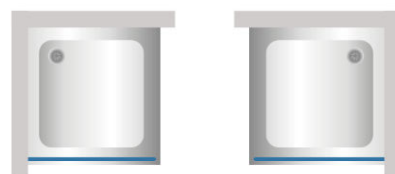

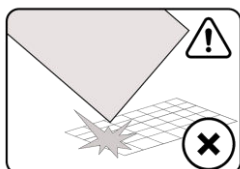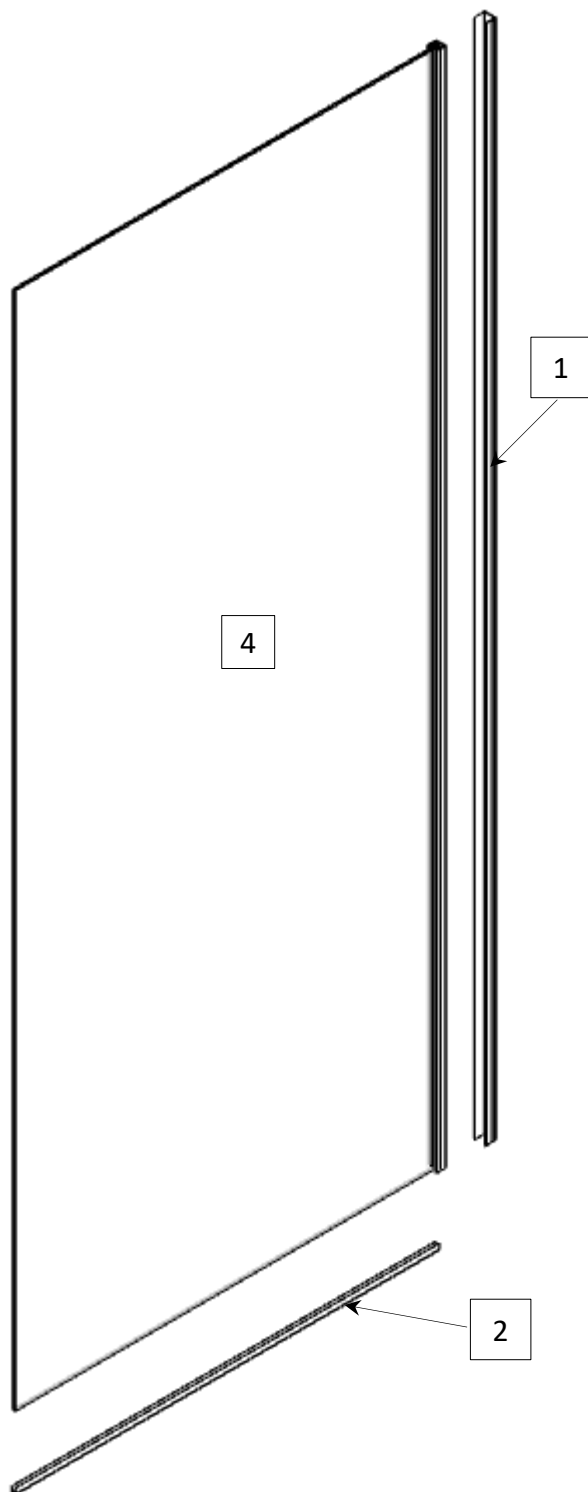

Uzmanību! Rūdīts stikls- rīkojieties uzmanīgi. Aizsargājiet stikla stūrus pret triecieniem.

Внимание! Закаленное стекло – будьте осторожны. Защищайте углы стекла от ударов.

Attention! Tempered glass - proceed with care. Protect the corners of the glass from impact.

